WELCOME

Thank you for choosing Lynk & Co vehicle with excellent safety, comfort, power and economy.

Careful and complete reading of the contents in this manual will help you to better understand and use your vehicle.

All information in this manual is up-to-date at the time of publication. However, as we are improving and optimizing our products continuously, the descriptions in this manual may no longer applicable to the vehicle you purchased.

Make sure that this manual is kept in the vehicle at all times. Especially when you lend or resell the vehicle to someone else, please transfer this manual to the new owner.

If you have any questions or want to book a service, drive to a Lynk & Co Center.

Please pay attention to driving safety before you arrive.

© Lynk & Co Automobile International Sales Co.,Ltd.

INTRODUCTION

Important information about this manual....9
Notes to users....10
Event data recorder (EDR)....10
Peripheral products, optional equipment and modification....10
Radio devices....11
Change of ownership....12
Vehicle scrapping....12
Certified paper used....12

SAFETY

Overview....15
Safety systems....15
Safe mode....15
Seat belts....16
Seatbelts....16
Fastening/releasing a seatbelt....19
Shoulder height adjuster....20
Seat belt pre-tensioner....21
Airbags....22
Airbags....22
Front double airbags....25
Front side airbags....27
Head safety air curtains....27
Child safety....29
Child safety....29
Child seat units....29
Installing an ISOFIX child seat....31
Safety assistance feature....33
Rollover Protection System....33

KEYS, LOCKS AND ALARM

Keys....37
Remote control key....37
Mechanical key....38
Replacing the remote key battery....39
Locks/unlocks....41
Lock/unlock indicator....41
Keyless entry system....41
Central door lock system....43
Emergency door locking/unlocking....44
Child safety locks....45
Opening/closing the mechanical tailgate....45
Opening/closing the power tailgate....46
Open the tailgate mechanically....48
Anti-theft systerm....50
Anti-theft alarm system....50
Arm/Disarm the anti-theft alarm system....50
Turning off the triggered anti-theft alarm....50
Immobilizer....50

INSTRUMENT

Indicators and warning....55
Indicators and warning lights....55
Instrument cluster....61
Instrument cluster....61
Operate the instrument cluster....62
Instrument cluster settings....62

CENTER DISPLAY

CENTER DISPLAY 67
Main interface 67
Opening/closing center display 67
Operating center display 67
Vehicle function interface 68
Function settings 70
Climate control interface 70
Application 71
CARS 71
System settings 75
Connect 75
Display 75
Sound 76
System 76
Media function 77
Multimedia 77
Call 77

INTERIOR COMPONENT

Steering Wheel 81
Steering wheel operation 81
Steering wheel adjustment 81
Seats 83
Front seat adjustment 83
Rear seat folding/unfolding 84
Head Restraints 85
Lights 88
Exterior lighting 88
Interior lighting 94
Mirrors 97
Inside rearview mirrors 97
Power outside mirrors 97
Wiper/washer 100
Front windshield wiper and washer 100
Rear windscreen wiper and washer 102
Windows and Sunroof 104
Power windows 104
Panorama sunroof 106
Climate 110
Climate overview 110
Manual climate 110
Auto climate 113
Air distribution 116
Clean zone air quality system 119
Air quality system 119
Power outlets/Multimedia devices 120
Using power outlets 120
Using USBs 120
Interior device of vehicle 123
Interior storage spaces 123
Front tunnel console storage spaces 124
Using the front armrest 124
Using the rear middle armrest and cup holder 125
Using sun visor and vanity mirrors 125

STARTING AND DRIVING

Driving the vehicle 129
Driving requirements 129
Ignition mode 130
Starting 131
The vehicle is switched off 132
Alcohol interlock 133
Driving modes 134
Driving modes 134

Transmission 135
AT 135
Manual shift mode 137
Gear shift paddle 138
Auto start/Stop 140
Intelligent Start & Stop 140
Brake systems 142
Brake system 142
Foot brake 142
Emergency brake warming lights(EBL) 143
Electric Parking Brake (EPB) 143
Auto Hold 144
Fuel and emissions 146
Refueling 146
Vehicle emissions 148
Drive assistance system 149
Drive assistance systems 149
Driver assistance system sensors 149
Electronic Stability Program (ESP) 151
Hill Descent Control (HDC) 153
Electronic Power Assist Steering (EPAS) System 154
Speed Limit 154
Cruise Control (CC) 157
Adaptive Cruise Control (ACC) 160
Highway assist 165
Lane assist system 169
Lane Change Assist System 172
Auto emergency braking 174
Visual Park Assist 90 Rear (Camera) 177
Visual Park Assist 360 (Camera) 179
Park system 181
Rear Cross Traffic Alert (RCTA) 183
Rear collision warning (RCW) 185
Door Open Warning (DOW) 186
Direct tire pressure monitoring system (dTPMS) 187
Driving tips 188
Inspecting before driving 188
Driving through water 188
Economical driving 189
Winter driving 189
Parking on hills 191
Vehicle loading 191

IN CASE OF EMERGENCY

Jump starting 195
Jump starting 195
Towing 197
Towing the vehicle 197
Using the towing eyelet 198
Recovering the vehicle 199
Flat tire 201
Tools and spare wheel 201
Removing a road wheel 202
Installing a road wheel 203
High-visibility vest and warning triangle 204
Overheating 206
If the vehicle overheats 206
Emergency call 207
SOS(Emergency call) 207
Emergency equipment 208
First-aid kit and fire extinguisher 208
High-visibility vest and warning triangle 209

MAINTENANCE AND SERVICE

Information about maintenance and service....213
Storing Vehicles....213
Breaking-in period....213
Fuses....213
Read the VIN from a diagnostic tool....214
Vehicle Care....216
Engine compartment....216
Engine oil....219
Brake fluid....221
Coolant fluid....221
Washer fluid....222
Wiper blades....223
Bulbs....224
Vehicle batteries....224
Safety warnings for handling batteries....226
Tire....227
Vehicle cleaning....231
Cleaning the exterior....231
Waxing and polishing....233
Corrosion protection....233
Care of the interior....234

TECHNICAL DATA

Vehicle labels....239
Certification Label....239
Vehicle Identification Number (VIN)....239
Engine model and manufacturer number....240
Microwave windows....240
Vehicle data....242
Vehicle dimensions specification....242
Vehicle weight parameters....242
Vehicle performance....242
Fuel specification....243
Seats specification....243
Alignment specification....243
Tire specification....244
Brake systems specification....244
Abbreviations and terms....246
Abbreviations and terms....246

INTRODUCTION

Important information about this manual

Lynk & Co Automobile International Sales Co.,Ltd. (hereinafter referred to as Lynk & Co) recommends that you read this manual carefully before using the vehicle for the first time. Important information to understand the contents of this manual.

Admonitions

⚠ Warning!

Personal injury

Warning notices alert you that failure to follow this warning may endanger your health or life, or the health or life of others.

! Caution!

- **Risk of damage to the vehicle**
- Caution notices remind you that failure to follow the precautions may result in vehicle damage.

ⓘ Note!

□ **Helpful information**
Here you can find some help tips or useful details.

Symbols and illustrations

The illustrations in this manual are general-purpose figures showing some features or functions, to assist in explanation and help understanding. The pictures are for reference only. Refer to the actual vehicle.



If you see the symbol above, it means "**Do not do this**" or "**Do not let this happen**".

01 Indicates the part location when an illustration shows multiple parts.

Indicates the movement/action when more than two actions are included in the illustration.

Indicates the movement/action when only one action is included in the illustration.

Display texts

The appearance of the text or messages shown in the vehicle's displays differs from the normal text. (e.g. **Vehicle, Connection, System**, etc.). In case of procedures or instructions to follow, several steps can be displayed like this: **Settings** - **Vehicle** - **Vehicle Basic Settings**.

Vehicle features and options

This manual also provides information on various modules, standard equipment and optional components in this vehicle series. Therefore, you may find some information that does not apply to your vehicle depending on adaptations for the needs of different markets and national or local laws and regulations. Specific information should be based on the actual vehicle.

You can identify the equipment in your vehicle by the available controls, switches, buttons, decals, symbols and menu options. Functions can be added, removed and changed via software updates. If you have any questions, it is recommended to contact a Lynk & Co Center.

Notes to users

For your safety, during driving, please observe local traffic regulations, and follow the following precautions:

- Stay awake and do not drive after drinking or taking medicine; otherwise your ability to control the vehicle may be affected, thus leading to accidents and casualties.
- Be sure to drive carefully, judge if the weather and road conditions are suitable for travelling correctly, and pay attention to the movement of other vehicles or pedestrians on the road at any time, so as to prevent accidents.
- Please stay focused while driving. Making phone calls, checking messages, adjusting the control button during driving will distract your attention, thus causing accidents and casualties.

Event data recorder (EDR)

Your Lynk & Co vehicle is equipped with an event data recorder (EDR), which is used to record information related to vehicle crashes or accidents, such as vehicle speed (representing the vehicle speed at the time of the incident), braking status (representing whether the driver depress the brake pedal at the time of the incident).

The EDR can help relevant personnel understand the state of the vehicle when the incident occurs, so that Lynk & Co can fulfill legal requirements and other regulations. In addition, the recorded information may be used for engineering research purpose by Lynk & Co in order to continuously improve quality and safety.

According to national legislation and regulations, Lynk & Co may be required to disclose other types of recorded data to authorities such as police authorities, or others who may assert a legal right to have access to it. To be able to read the information recorded requires Lynk & Co special data reading equipment, which is accessible to Lynk & Co and the approved Lynk & Co Center that has entered into an agreement with Lynk & Co only.

Peripheral products, optional equipment and modification

The Lynk & Co peripheral products are tested to ensure compatibility with the performance, safety, and emission systems in your vehicle. To ensure the performance of your vehicle and the safety to the greatest extent, please give priority to Lynk & Co peripheral products.

If you install non-peripheral products, your vehicle's performance and safety systems could be adversely affected, and Lynk & Co will not be held responsible for any problems arising therefrom.

You can order some Lynk & Co certified optional equipment. Because of the different sales markets, the specific optional equipment specially provided for certain countries or regions may not be suitable for your area. Before you order the optional equipment, please check the local laws and regulations and consult the Lynk & Co Center. Lynk & Co will not be held responsible for any problems arising from the use of the optional equipment other than Lynk & Co certified optional equipment or the optional equipment that are not applicable in your area.

Do not modify the vehicle without permission; otherwise the handling, safety and durability of the vehicle will be affected, and local government regulations might be violated. Lynk & Co will not be held responsible for vehicle damage or performance problems caused by unauthorized modification.

⚠ Warning!

- Lynk & Co is only responsible for peripheral products and optional equipment tested and certified by Lynk & Co. Lynk & Co does not provide any guarantees and does not assume any responsibilities or obligations for personal injury or death, vehicle damage or expenses caused by the installation of non-peripheral products and optional equipment.

Radio devices

Installation of radio devices on vehicles may affect the proper use of electrical systems.

It is recommended to contact a Lynk & Co Center to obtain details of radio frequency band, power level, installation location and installation requirements for radio devices.

The following provisions shall be strictly observed in the use of radio devices:

- Do not install or change radio devices on your own, or it may cause some electrical system failures.
- When using radio devices, follow the laws and regulations of the vehicle location.
- Do not park the vehicle in the place with strong electromagnetic interference such as a transformer.

⚠ Warning!

- Lynk & Co will not be liable for any impact and loss caused by the self-installing or changing radio devices.

⚠ Warning!

- People using implantable cardiac pacemakers, cardiac resynchronization therapy pacemakers or implantable cardioverter defibrillators should keep a proper distance from radio equipment. Radio waves may affect the operation of such equipment. If necessary, disable the radio.
- Do not install a radio device within the range of airbag deployment.
- For those using other electronic medical equipment, the manufacturer of the equipment should be consulted about the impact of radio waves on the operation of such equipment. Radio waves may have unpredictable effects on the operation of such medical equipment.

! Caution!

- Radio waves of radio device can have an effect on the airbag controls.

ⓘ Note!

- Different countries or regions have different laws and regulations on radio devices.

Change of ownership

In the event of change of ownership of the vehicle, it is important to go to Lynk & Co Center with your personal identification to reset the user data and system settings to the factory defaults, and end the Lynk & Co Call and intelligent connectivity service.

⚠ Warning!

- You are responsible for all the consequences and possible loss if you fail to end the intelligent connectivity service in time.

Vehicle scrapping

Vehicles that have reached the service life or can't meet the road use conditions should be scrapped according to the requirements of relevant national regulations.

⚠ Warning!

- Only recycling companies certified by relevant national agencies are allowed to scrap vehicle.

When scrapping the vehicle, observe the following precautions; otherwise, personal injury may occur.

- Remove the airbag and seatbelt pretensioner before scrapping the vehicle.
- Remove the high voltage battery before scrapping vehicle.
- Remove all pyrotechnic parts before scrapping the vehicle.
- Relevant safety and legal provisions must be observed in the process of scrapping.

Certified paper used

Lynk & Co cares about the environment and uses paper from responsible sources. This publication is Forest Stewardship Council (FSC®) certified, adhering to the vision of keeping our forests alive for generations to come.

The FSC® logo will be presented, indicating that the paper used in this publication is derived from FSC® certified forests.



SAFETY

Overview

Safety systems

We sincerely hope you have a safe journey. The vehicle is equipped with multiple safety systems that work together to protect you and the passengers in the event of an accident. Depending on the specific situation, different safety systems are activated.

- Seatbelts
- Airbag
- Child safety
- Rollover Protection System

Safe mode

In the event of a collision, the safe mode will be triggered, in which one or more safety systems (such as dual front airbags/front side airbags, head safety air curtains) are triggered or one or more seatbelt pretensioners are deployed.

A collision may damage important components in the vehicle, such as the fuel lines, sensors for one of the safety systems, the brake system. In the event of an accident, if an airbag is deployed, the door will be automatically unlocked, which is helpful for the occupants to escape and the rescuers to save them.

⚠ Warning!

In case of traffic accident or collision, strictly observe the following warnings, otherwise another accident and secondary disaster may be caused, resulting in serious personal injury or even death:

- Do not attempt to restart the vehicle if you smell fuel or notice signs of a fluid leak. Have everyone get out of the vehicle immediately, move away from the vehicle, and retreat beyond the road guardrails or shoulders.
- Never attempt to repair the vehicle or reset the electrical system yourself.
- Do not continue to drive. It is recommended to contact professional road rescue and contact a Lynk & Co Center for inspection and maintenance.
- If any airbag is deployed, it means that the vehicle can't be driven normally. Please leave the vehicle immediately, retreat beyond the road guardrails or shoulders, and then call the police or ask for help after confirming that the people have reached a safe area.

⚠ Warning!

If a minor collision occurs, inspect the vehicle and find that everything is normal and there are no oil or fluid leaks:

- You may attempt to restart the vehicle and drive carefully away from the potentially dangerous area.
- It is recommended to have the vehicle inspected by a Lynk & Co Center after any collision. Some features may have failed even if the vehicle does not appear to be damaged.

Seat belts

Seatbelts

Seatbelts function

In case of a collision, wearing a seat belt correctly can reduce personal injury and avoid the damage caused by secondary collision.

Before travelling, all passengers must fasten seatbelts correctly. Do not tie the belts incorrectly or curl them. Otherwise, you may be injured or killed in an accident.

⚠ Warning!

- Each seatbelt is for one person only. Do not share a seatbelt with another person. Do not place a baby or child on your laps, but use the specified child protection device.
- Do not modify, remove the seatbelt or install devices that may change the seatbelt orientation or tension.
- The seatbelt system should be inspected after any collision by a Lynk & Co Center. Some of the seatbelt's protective properties may fail even if the seatbelt does not appear damaged. The seatbelt must be replaced if either damage or improper operation is noted.

Seatbelt reminder


The seatbelt reminders are intended to alert the occupants in the vehicle that their seatbelts should be fastened before driving. When the vehicle starts and there is anyone who forgets to fasten the seatbelt, the warning light and indicator icon on the instrument cluster will be illuminated. When the vehicle is moving and the occupants in the vehicle still have not fastened their seatbelts, the seatbelt warning light will flash, and an audible warning signal will be issued at the same time when the vehicle reaches a certain speed or mileage.

The reminders alert the occupants as the following ways:

- Seatbelt warning light and indicator icon on instrument cluster.
- Seatbelt indicator in the overhead console.
- An audible warning signal.

ⓘ Note!

- Some models sold on the market are not equipped with the roof console seat belt indicator and the rear seat belt not fastened warning system.

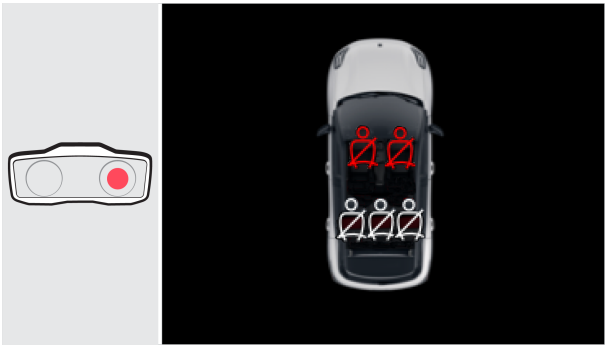

Seatbelt indicator icon on the instrument cluster



Seatbelt indicator in the overhead console

The position of the seat on which the seatbelt is not fastened will be highlighted among the vehicle icons on the instrument cluster.

⚠ Warning!

- If the seatbelt indicator icon stays on after you have confirmed all seatbelts have been fastened and there are no heavy objects on the seat, immediately stop the vehicle in a safe place and contact Lynk & Co Center.

ⓘ Note!

- When the vehicle starts, the seatbelt indicator icon on the instrument cluster and the overhead console may light up for a few seconds.
- When the vehicle is moving and the occupants in the vehicle still have not fastened their seatbelts, an audible warning signal will be sent out by the seatbelt reminders when the vehicle reaches a certain speed or mileage.
- If a heavy object is placed on the seat, the seatbelt reminder may be triggered.

Seatbelts inspection

Seatbelt is a vulnerable part. Check the seatbelt according to the following steps each time before driving. If there is an abnormal situation, please stop the vehicle at a safe place immediately and contact a Lynk & Co Center.

- Check whether the seatbelt is distorted or dirty.
- Inspect the seatbelt for severe wear, cuts, burns, etc.
- Insert the seatbelt lock tongue into the buckle, pull the seatbelt quickly and check the fixing condition of the seatbelt buckle.

- Quickly pull the seatbelt and check the locking condition of the seatbelt retractor.

⚠ Warning!


- In the event the seatbelt system fails, immediately stop the vehicle in a safe place and contact Lynk & Co Center. Improper maintenance of seatbelts may result in personal injury or death.
- If you find any foreign matter (such as food residues) in the buckle port when you check the seatbelt, please remove it in time, or contact a Lynk & Co Center.

Pregnancy safety

It is of vital importance for pregnant women to properly fasten their seatbelts when driving or riding in a car.

⚠ Warning!

- If the seatbelt is not properly fastened by the pregnant woman, the pregnant woman and the fetus may suffer serious injury or even death when emergency braking or collision occurs.

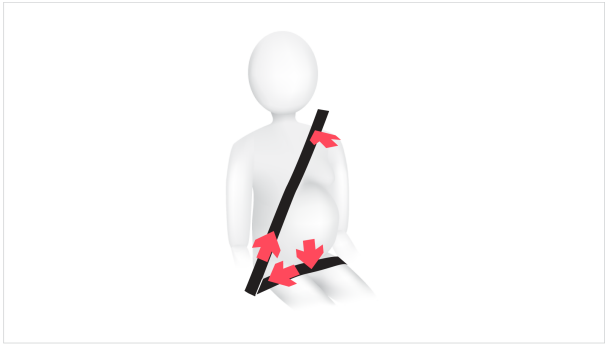

The diagonal portion should wrap over the shoulder then be routed between the breasts and to the side of the abdomen.

⚠ Warning!

- The seatbelt must never be allowed to ride upward. Remove all slack from the seatbelt and make sure it fits firmly to the body without any twists.
- When pregnant women use seatbelts, they should avoid touching the abdomen. The lumbar seatbelt should lay flat over the thighs and as low as possible under the abdomen.

A pregnant woman should always consult a doctor before operating a vehicle. To reduce the risk of injury to pregnant women and unborn babies, follow the following instructions when driving:

- As your abdomen grows during pregnancy, adjust the seat and the steering wheel so that you can easily operate the

pedal and the steering wheel to ensure your control of the vehicle.

- In this case, maximize the distance between the abdomen and the steering wheel.

Fastening/releasing a seatbelt

All occupants of the vehicle must fasten their seatbelts before driving.

Fastening a seatbelt


1. Adjust the front seat to the right position.
2. Slowly pull the seatbelt out of the retractor and insert the tongue into the buckle until a click is heard.

Note!

The retractor will lock if:

- it is pulled out too quickly.
- the brake is applied suddenly.
- the vehicle leans seriously.

3. As shown, the waist seatbelt should straddle the hip as low as possible.

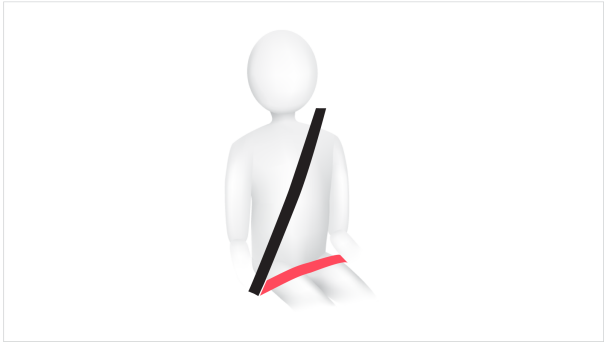

Waist seatbelt

4. Adjust the seatbelt height in the front seat to the appropriate position.
5. Make sure that the shoulder seatbelt slopes across the entire shoulder and across the chest as shown.



Shoulder seatbelt

⚠ Warning!

- Do not lean the backrest too far back. The seatbelt is designed to provide protection in a normal seating position.
- The seatbelt tongue should only be inserted into its intended buckle. Improper inserting will cause function failure of the seatbelt.
- Put the lap belt low and tight under the abdomen. Too high lap belt will increase the risk of injuries in an accident.
- Always route the shoulder belt over your shoulder and across your chest. Never put the belt behind your back, under your arm or across your neck. The seatbelt shall be away from your face and neck, but not falling off your shoulder.
- The seatbelt should not be around the neck or come into contact with sharp corners, and should not be pulled over or caught by fixed or fragile objects.

Releasing a seatbelt


Press the red releasing button on the seatbelt buckle and then let the seatbelt retract.

If the seatbelt does not retract fully, guide it back by hand so that it does not hang loose.

! Caution!

- When releasing the seatbelt, it is recommended that you hold the seatbelt before pressing the unlock button to prevent personal injury caused by the rapid retraction of the seatbelt.

Shoulder height adjuster

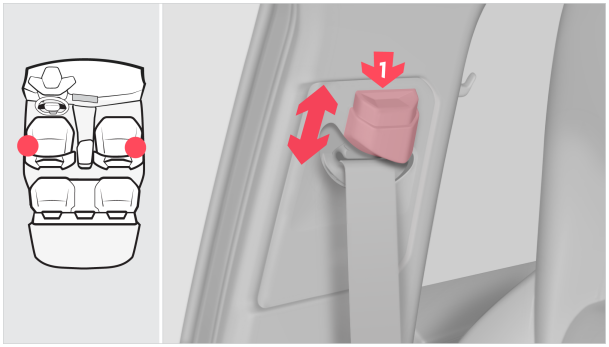

Front seatbelt height adjustment

1 Press the release button and adjust the seatbelt height up and down to the appropriate position, then release the button.

Seat belt pre-tensioner

Front seats are equipped with seatbelt pretensioners. In case of a serious collision, the front seatbelt pretensioners act to tighten the seatbelt so as to fix the occupants effectively and reduce the risk of injury.

When the seatbelt pretensioner deploys, a small amount of powder (smoke) will be released and a loud noise may be heard. This is a normal phenomenon and will not cause a fire. The smoke and dust formed when the pretensioner deploys could cause skin and eye irritation in the event of prolonged exposure.

If the vehicle encounters multiple collisions, the pretensioner will be activated in the first collision, and it will not be activated again in the second and subsequent collisions.

⚠ Warning!

- Do not touch the seatbelt pretensioner once it detonates. In the case of a collision, the pretensioner will turn hot and may burn your skin.
- After the seatbelt pretensioner detonates, replace it with a new one.
- If your eyes and skin are infected with dust (smoke), flush your eyes and skin immediately.

⚠ Warning!

- When the seatbelt pretensioner fails, the airbag fault indicator will light up. In this case, please stop the vehicle at a safe place immediately and contact a Lynk & Co Center.

Airbags

Airbags

The airbag supplemental restraint system is a passive auxiliary protection system, used with the seatbelt to provide additional protection for the heads, chests and abdomens of passengers.

The main parts of the airbag supplemental restraint system are:

- The electronic monitoring system (SRS control module and sensors)
- Two front airbags
- Two front side airbags
- Two head safety air curtains

The airbag system works only with the ignition on. Seatbelts and airbags work together. If the seatbelt is not used or is fastened incorrectly, the protection provided by the airbag in the event of a collision may be reduced or lost.

The airbag control module monitors the operation status of each system. When the airbag control module detects the collision event, it controls the airbag deployment or detonates the seatbelt pretensioner. In a collision where deployment occurs, the airbags are inflated with hot gas and deflate when being compressed and leaking in a short time. When this occurs, a small amount of powder (smoke) is released and a loud noise may be heard. This is a normal phenomenon and will not cause a fire.

⚠ Warning!

- The airbag system and seatbelt pretensioners can only be deployed once. After the airbag system and seatbelt pretensioner are activated, please contact a Lynk & Co Linker center for replacement as soon as possible.
- Affected by factors such as degree of impact, angle, speed and impact object, the airbag does not always deploy.
- The dust (smoke) formed when the airbag deploys could cause skin and eye irritation in the event of prolonged exposure. If your eyes and skin are infected with smoke and dust, flush your eyes and skin immediately.

Airbag fault warning light

When the ignition switch is set to gear II, the airbag system is in a self-checking state. If the following conditions appear in the airbag fault warning light, it indicates that the airbag system is faulty:

- The airbag fault warning light does not light up when the system is in self-inspection.
- After the ignition switch is set to gear II for several seconds, the icon will remain in on state.

⚠ Warning!

- If the airbag fault warning light is illuminated continuously during driving or after self-inspection, please stop the vehicle at a safe place immediately and contact a Lynk & Co Center.
- Defective repairs in the airbag system could result in malfunction and serious personal injury. Always drive to a Lynk & Co Center for repairing the airbag system.

Airbag precautions

The airbag system is a supplement to the seatbelt protection function, which is used to provide the best safety protection for passengers. When using airbags, please always follow the following precautions, otherwise it may cause serious consequences.

⚠ Warning!

- Do not place objects at the place where the airbag is deployed.
- It is strictly forbidden to alter, disassemble and install airbags and related components without authorization.
- Do not touch the relevant parts of the airbag immediately after the airbag deployment to avoid scalding.
- All occupants must fasten their seatbelts correctly and maintain correct sitting posture. Children who cannot use seatbelts should be provided with appropriate child seat devices.
- Do not use any electrical test equipment or device in the vicinity of airbag system components or wiring harness. The airbag could deploy and result in personal injury.

Triggering conditions of safety system

The airbag system and the other safety features are designed to deploy during certain collisions or impacts, depending on the crash severity, angle, speed and object impacted.


System	Triggered
Seatbelt pretensioner	In case of front, side/rear collision or rollover, and the ignition condition reached.
Front airbags	In case of front collision and that the ignition condition is reached.
Side airbags	In case of front/side collision or rollover and that the ignition condition is reached.
Head safety air curtains	In case of front/side collision or rollover and that the ignition condition is reached.

⚠ Warning!


- The airbag system can only provide one-time accident protection. If the airbag has been triggered, the airbag system components must be replaced.
- Do not drive with deployed airbags. You have to replace the safety systems of the vehicle as soon as possible. Contact a Lynk & Co Center immediately.
- The airbag and its installation area must be inspected for damage after any collision. Please contact a Lynk & Co Center for inspection.
- If the airbag is deployed, do not touch the internal components near the airbag storage areas (steering wheel, instrument panel, both sides of the roof rails or outer sides the front seats) since they will be very hot. Touching them could result in personal injury.

Situations when airbags may not deploy

The airbag deployment depends on the collision conditions. The vehicle speed, collision angle and force are the main factors. In the following situations the airbags may not deploy.

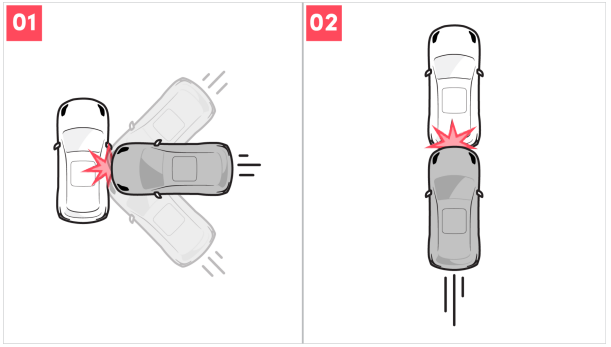

Examples on situations when airbags may not deploy. The white vehicle is illustrated as yours

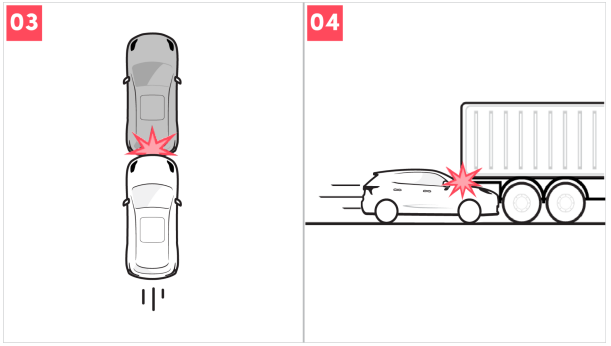

Examples on situations when airbags may not deploy. The white vehicle is illustrated as yours

01,02Front airbags do not normally deploy in a side impact collision, in a collision from the rear or in a rollover situation.

03The airbag may not deploy if the collision force does not reach the triggering condition of the airbag sensor. It can be collision situations like moving into a nonrigid object (such as snow drift or bush), rushing to a rigid, fixed object at a low speed, and collision of two moving vehicles with low relative speed.

04In collision with a container truck or the lower part of a large vehicle, where the force does not reach an airbag sensor.


The airbag will not deploy if:

- If the collision point is on a specific location (such as a tree or a pole) and the collision force is not large enough.
- the airbag system may fail.

ⓘ Note!

- The degree of damage to the body structure does not necessarily determine whether the safety system is triggered or not.

Front double airbags

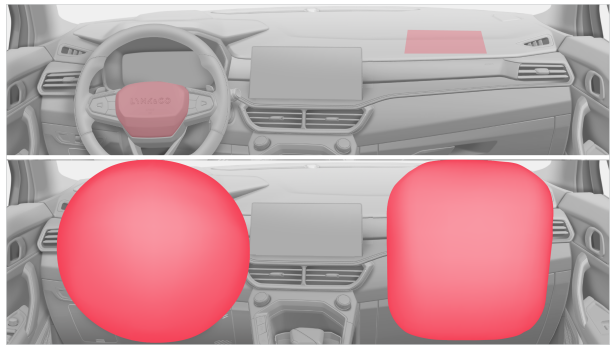

If the front airbag is triggered, the deployed airbag can reduce or avoid the risk of head and chest injury of the personnel in the front.

⚠ Warning!

- Do not install or place any accessories (such as drink holders, cassette holders or stickers,) on the steering wheel or on the instrument panel where the airbag is located. Such objects could result in personal injury if the airbag deploys.

Note!

The front airbag only deploys on the vehicle affected by the serious impact. Front airbag will not be deployed in all collision situations.

- Situations when front airbags may deploy , please refer to the *Airbags*(p. 22).
- Situations when front airbags may not deploy , please refer to the *Airbags*(p. 22).

Driver airbag

The driver's airbag is installed in the center of the steering wheel, and the steering wheel is marked with the word AIRBAG.

Passenger airbag

The passenger airbag is mounted above the glove box, and the instrument panel is marked with AIRBAG.



Passenger airbag warning icon


Warning!

- Passengers less than 140 cm in height must not be seated in front passenger seat, otherwise personal injury or death may occur.
- A rear-facing child safety seat shall not be used in front seat, as this may result in personal injury or death.
- The forward-facing child seat can only be installed on the front passenger seat when it is unavoidable, and the seat shall be positioned as far back as possible, otherwise the force generated by the rapid deployment of the airbag may cause child injury or death in an accident.

Note!

- The vehicle is not equipped with the passenger airbag switch, and the passenger airbag will always be activated.

Front side airbags

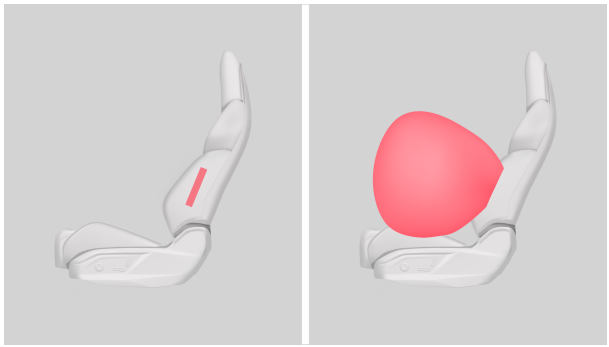

Front side airbag position and deployment

The front side airbag is installed on the outside of the front seat, which is marked AIRBAG. When the vehicle is subjected to a violent lateral impact, the front side airbags will be deployed between the occupant and the door panel to protect the occupant's shoulders to hips, minimizing injuries.


⚠ Warning!

- Do not put objects in the area between the outside of the seat and the door panel. Otherwise, when the airbag is deployed, it may lead to personal injury or death.
- Do not use the seat covers on the front seat backs. The seat cover may interfere with the deployment of the front side airbags, causing injury or death.

ⓘ Note!

- The front side airbags only deploy on the vehicle affected by the serious impact. The front side airbags will not deploy in all collision situations. For trigger conditions of the front side airbags , please refer to the *Airbags*(p. 22).
- For conditions under which the front side airbags may not deploy , please refer to the *Airbags*(p. 22).

Head safety air curtains

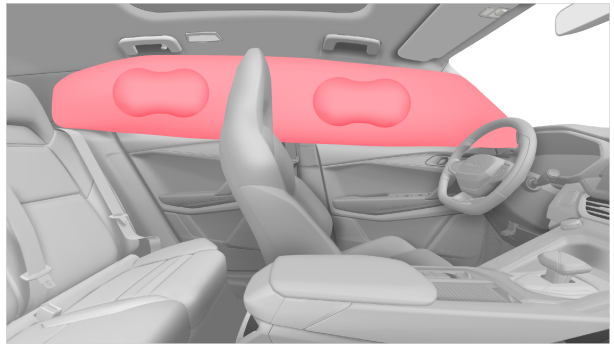

Head safety air curtains

The head safety air curtains are fitted along both sides of the roof to protect the driver and occupants in the outboard seats. The panels are marked with the word AIRBAG.

In a collision where deployment occurs, the head safety air curtains help prevent your head and the vehicle occupants' head from striking inside the vehicle in a side or frontal collision.

⚠ Warning!

- Never hang or tie heavy items onto the hooks on the roof. The hooks are only designed for light coats and jackets (not for solid objects such as umbrellas).
- Do not place too many items in the trunk or on the rear seats. If items are stacked too high, they may interfere with the deployment of the head safety air curtain, resulting in personal injury.
- Do not screw or install anything onto the vehicle's roof lining, door pillars or side panels. This could compromise the intended protection. Lynk & Co recommends only using peripheral products that are approved by Lynk & Co for fitting within these areas.

ⓘ Note!

The head safety air curtains only deploy on the vehicle affected by the serious impact. The head safety air curtains will not be deployed in all collision situations.

- Situations when head safety air curtains may deploy , please refer to the *Airbags*(p. 22).
- Situations when head safety air curtains may not deploy , please refer to the *Airbags*(p. 22).

Child safety

Child safety

Children should always be seated safely when traveling in the vehicle.

⚠ Warning!

You are solely responsible for the safety of children when driving.

The seatbelts on the vehicle are designed primarily for the size of adults. When there are infants or children in the car, suitable child safety seats should be used.

Lynk & Co recommends that you place the infant in the rear seat and use a child safety seat suitable for his age. Studies show that children are safer when properly restrained in the rear seat than in the front passenger seat.

⚠ Warning!

- Never let a child stand or kneel on any seat and do not allow a child in the cargo area. Serious injury or death to the child could occur in a collision or a sudden stop.
- Do not leave children unattended in the vehicle, and do not let children carry the remote key. Otherwise, accidents may occur due to mishandling of components (such as the shift lever) by children, which may result in personal injury or death.
- Before driving, close and lock the windows and doors to prevent children from opening the door or accidentally operating the electric window.
- Always place children in the appropriate child seat. Do not hold the child. Otherwise, when an accident occurs, the child may be harmed because of the lack of binding force.
- A rear-facing child safety seat shall not be used in front seat, as this may result in personal injury or death.
- The forward-facing child seat can only be installed on the front passenger seat when it is unavoidable, and the seat shall be positioned as far back as possible, otherwise the force generated by the rapid deployment of the airbag may cause child injury or death in an accident.
- Be sure to place the child in a suitable ISOFIX device that is appropriate for child's age, height and weight.

Child seat units

Choose an appropriate child seat units

There are various types of child safety seat units on the market and it is recommended that you use a child safety seat that is approved

and suitable for your child. The three basic child safety seat units are as follows:

- Rear-facing child seat
- Forward-facing child seat
- Booster cushion

Lynk & Co generally recommends infants and children before the age of 3-4 years be placed in rear-facing child seats. Forward-facing child seats can be used for children who are not suitable for rear-facing child seats due to their sizes. Booster cushions are used to help position a seatbelt on a child who are too large to fit in a forward-facing child seat.

Child seat compatibility

The table shows the appropriate locations in the car where different types of child seats can be installed.

	Front passenger seat (passen-ger airbag off)	Front passenger seat (passen-ger airbag on)	Outer rear seats	Center rear seat
Seating position suitable for universal belted	Yes[1]	No	Yes	No
i-Size seating position	n/a	No	Yes	No
Seating position suitable for lateral fixture	n/a	No	No	n/a
Largest suitable rearward facing fixture	n/a	No	ISO/R2	n/a

Largest suitable forward facing fixture	n/a	No	ISO/F3	n/a
Largest suitable booster fixture	n/a	No	ISO/B2	n/a

[1] Only when the front passenger seat is adjusted to the highest position.
[2] A child seat with a support leg may have some interaction with the center console. Check the compatibility of the child seat with the child seat manufacturer.

Recommended child seats

The tables in this section show recommended child seats for this car, with seat belt attachments and with ISOFIX/i-Size attachment.

ECE-R.129 classification is based on child height:

Child height	Manufacturer	Type	Accessory
40–105 cm	Maxi-Cosi	Pearl 360 & FamilyFix 360 base	ISOFIX + Support leg
61–105 cm	BeSafe	iZi Kid X3 i-Size	ISOFIX + Support leg
100–150 cm	Britax Römer	Kidfix i-Size[1]	ISOFIX + Belt


[1] Use this child seat with the included backrest. Make sure to attach the seat belt through the SecureGuard clip and using an XP-PAD.

ECE-R.44 classification is based on child weight:

Child weight	Manufacturer	Type	Accessory
22–36 kg	Graco	Booster Basic	Belt

Installing an ISOFIX child seat

ISOFIX are fast and easy to install.

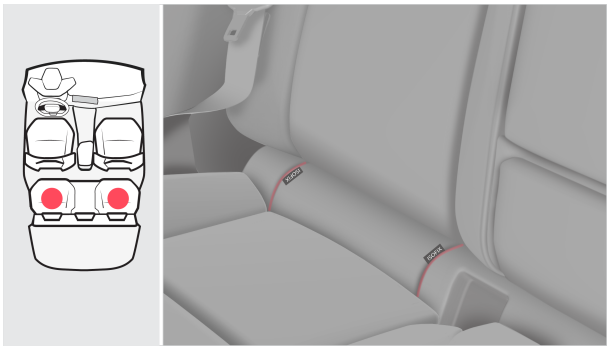

ISOFIX anchors

The ISOFIX anchors are located in both of the rear outside seats and they are indicated with the ISOFIX label.

Always comply with local regulations and refer to the manufacturer's instructions when installing a child seat. Put the child seat installation instruction book in the glove box so that they can be checked at any time.

Installing an ISOFIX child seat


Always follow the child seat manufacturer's installation instructions and use the ISOFIX anchors.

⚠ Warning!

- The ISOFIX lower anchors are only intended for use with child seats positioned in the outboard seating positions. For ISOFIX devices in the middle position, do not use these lower anchors. child safety seat If the child safety seat is not correctly secured, serious injury or death could occur to the child during collision or sudden brake.

Using top tether anchors

The vehicle is equipped with child safety seat top tether anchors in the rear side of the backrests.

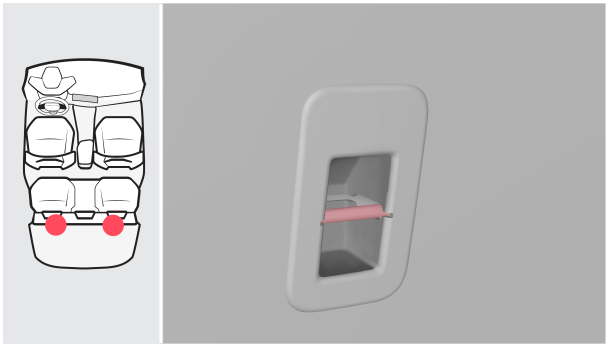

Always follow the child seat manufacturer's installation instructions to secure the child seat.

⚠ Warning!

- Never mount more than one child seat to a single tether or a single lower anchor. The increased load caused by multiple seats may break the tether/anchor and result in serious personal injury or death.
- Child safety seat anchors are designed to withstand only those loads imposed by a correctly fitted child seat. Under no circumstances are they to be used for adult seatbelts or harnesses. Failure to follow these warnings could result in personal injury in a collision.

ⓘ Note!

- The top tethers are intended for use with front-facing child seats. Lynk & Co recommends that small children should sit in rear-facing child safety seats as long as possible.

Safety assistance feature

Rollover Protection System

In the event of a vehicle rollover, the rollover protection system will be activated, the seatbelt pretensioner will tighten the seatbelt, and the head safety air curtains will be deployed at the same time to minimize injuries to occupants.


⚠ Warning!

- If the seatbelt is not used or used incorrectly, the protection provided by the rollover protection system will be reduced in the event of a vehicle rollover. Please be aware that no system can prevent all possible injuries that may occur in an accident.

KEYS, LOCKS AND ALARM

Keys

Remote control key

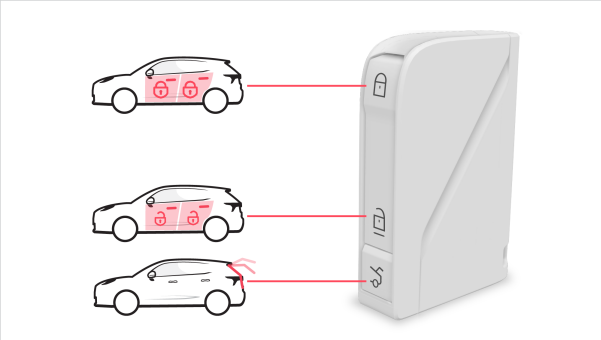

Remote control key

Your vehicle is supplied with remote control keys. You can perform the following operations by remote control keys.

Lock button: Press to lock all doors/tailgate and arm the alarm.

Unlock button: Press to unlock the all doors/tailgate and release the alarm.

Tailgate button: For vehicles equipped with mechanical tailgate, press and hold the button to pre-unlock the tailgate. For vehicles equipped with power tailgate, press and hold the button and the tailgate will open automatically.

If the vehicle is equipped with a keyless entry system, you can use the keyless entry function via the remote control keys to unlock/lock the vehicle., please refer to the *Keyless entry system*(p. 41)

You can also open/close the windows and sunroof with the remote control key., please refer to the *Power windows*(p. 104)

⚠ Warning!

- When you leave the vehicle, always switch off the ignition and take out the remote control key, and do not leave children or people in need of help alone in the vehicle.

Caution!

- Do not modify or throw the remote control key. Otherwise the key's function may be affected.
- Do not put the spare key and the remote control key together, otherwise the built-in anti-theft chip may interfere with each other and affect the function of the key.
- When you do not need the function of the remote control key, do not press the key on the remote control key at will. Otherwise, the vehicle may be unlocked accidentally or an alarm may be triggered.

Caution!

To prevent damage to the remote control key, follow the following precautions:

- Avoid impact, and do not try to bend the remote control key.
- Do not expose the remote control key to high temperature for a long time.
- Do not wet the remote control key or clean it in equipment such as ultrasonic cleaner.
- Do not place the remote control key near metal or magnetic materials.
- Do not place the remote control key near equipment that can generate magnetic field, such as induction cooker, electronic medical equipment.

Note!

- You can press the lock button on the remote control key twice to activate the lights for car searching. Then the turn signal lights will flash and the horn will sound.

Ordering additional keys

If you need to order another remote control key, go to a Lynk & Co Center. If a remote control key is lost, the others should be taken to a Lynk & Co Center to delete the code of the lost key from the system.

Key reminder


When the vehicle is started and all door is closed, if the remote control key is not in the vehicle, relevant prompt information will pop up on the instrument cluster.

Mechanical key

You can use the mechanical key supplied with the remote key to perform the following operations:

- Unlock/lock the door , please refer to the *Emergency door locking/unlocking*(p. 44).
- Activate/deactivate the child safety lock , please refer to the *Child safety locks*(p. 45).

Remove the mechanical key

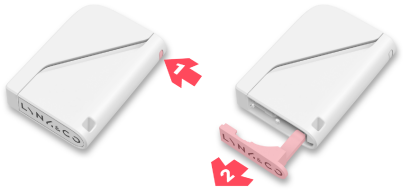

1 Press and hold the release button.

2 With the release button being pressed, pull the mechanical key out directly.

Note!

- With the release button being pressed, the mechanical key can slide out if the remote key is tilted a certain angle.


After using, insert the mechanical key into the slot.

Replacing the remote key battery


If the battery of the remote key is exhausted, the remote key may not work normally, such as failure to lock/unlock the vehicle, start the vehicle, etc. Please replace the battery with a new one.

1 Remove the mechanical key.


2 1 Press and hold the edge of the key cover.
2 Move outward and remove the key cover.

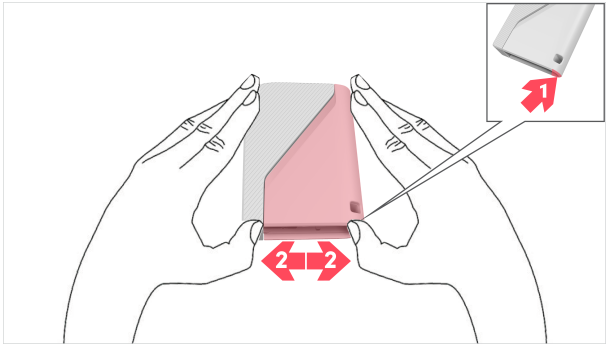

3 After removing the key cover, dismantle the cover at the upper end of the remote key battery, insert a new battery with + pole upward.

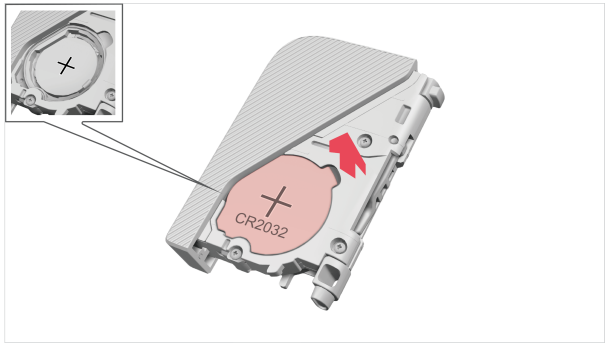

4 After replacing the key battery, press any key on the remote key to check whether the work indicator in the installation area of the mechanical key is illuminated.

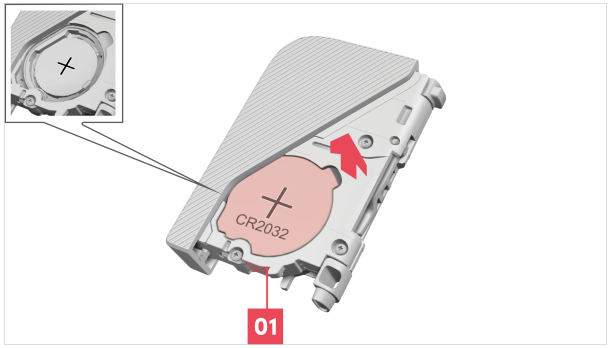

01 Working indicator

5 When refitting the remote key, follow the reverse steps.

6 Operate the button on the remote key, check and confirm that the key works normally.

⚠ Warning!

- The battery replaced is very small. If children swallow it carelessly, it may cause suffocation. Please keep the battery away from the children, otherwise it may cause serious injury or even death.
- Please dispose of the waste batteries according to the local regulations. Improper disposal of the waste batteries will damage the environment and endanger human health.

! Caution!

- When installing the remote key cover, be careful not to damage or deform it.
- When replacing the key battery, be careful not to lose the battery or any other small parts.
- Operate on the battery with dry hands, otherwise the battery may rust due to humidity.
- Do not touch or move any other parts in the remote key.

ⓘ Note!

If the remote key still can't work normally after replacing the battery, please contact Lynk &Co center in time for inspection and treatment.

Locks/unlocks


Lock/unlock indicator

You can acknowledge the lock/unlock status of the door via the direction indicators.

Locking: Turn signal lights turn on for several seconds and then turn off.

Unlock: Turn signal lights flash for several times.

Keyless entry system

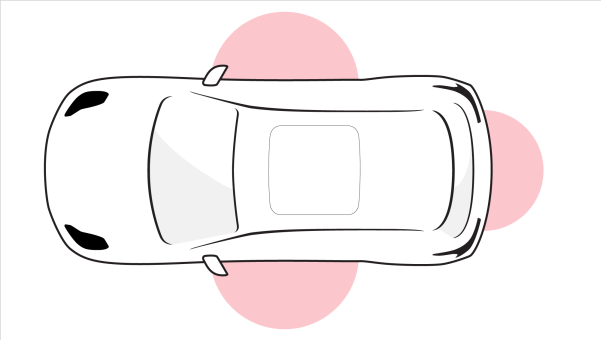

Function coverage area

For keyless entry into the vehicle, the remote key must be kept within the front door or nearby tailgate of the vehicle, as shown in the illustration.


The following may affect the function of keyless entry:

- If the vehicle is close to a radio, TV tower or a power station, etc.
- There are wireless devices around the vehicle, such as mobile phone, transmitter or radio.
- If the remote key touches or is covered by metallic material.
- If the remote key is close to an electrical device, such as computer.
- When the power of the remote key is low.

Keyless unlock/lock the door

Keyless unlocking

1. Make sure the remote key is within range and on the same side of the vehicle as the door to be opened.
2. Touch the inner sensor area on front door handle. The direction indicators flash twice to indicate that the vehicle is unlocked.

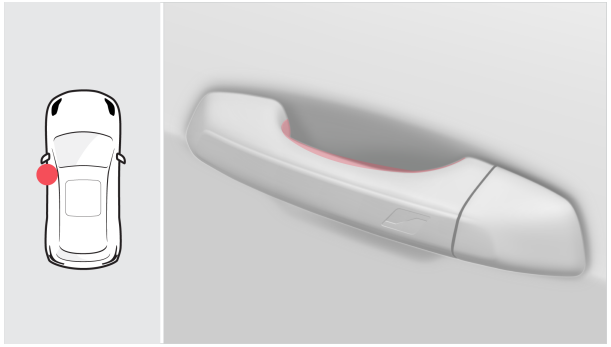

Inner sensor area in front door handle for unlocking

3 Pull the handle to open the door after it has unlocked.

Note!


- If no doors are opened after the vehicle is unlocked with the remote key unlock button or keyless unlock function, the doors will lock automatically after a certain period.

Keyless locking

1 Turn off the engine and take the remote key with you.

2 Close all the doors.

3 Touch the outer sensor area on front door handle. The direction indicators flash twice to indicate that the vehicle is locked.

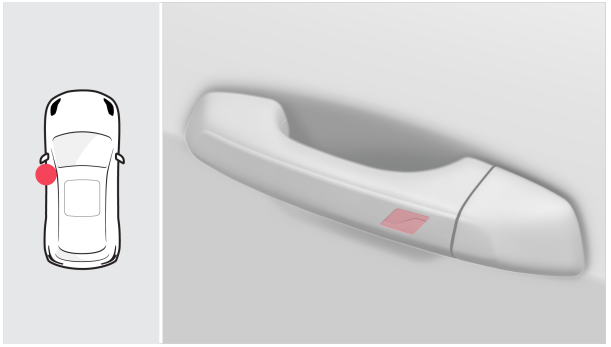


Outer sensor area in front door handle for locking

Keyless unlocking tailgate

When you carry the remote key, you can open the tailgate by the keyless access function.

1 Press the soft touch button on the tailgate and release to unlock the tailgate.

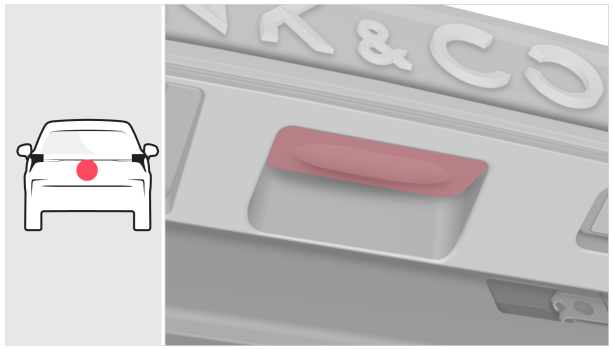

Note!

- On models equipped with the power tailgate, press the soft touch button and release to open the tailgate.

2After unlocking, pull upward to open the tailgate.

Caution!

- The electronic locking mechanism of the tailgate can be released only by pressing lightly. Pressing too hard may damage the touch button.

Automatic unlocking/locking function when you approach/leave the vehicle


You can unlock/lock the vehicle without pressing the button on the remote key, but only entering the coverage area of keyless entry function with the key. The vehicle will also be locked automatically when you leave the coverage area of keyless entry function with the key.

Note!

- The automatic vehicle unlocking/locking function when you approach/leave the vehicle can be activated/deactivated on the central display.

Central door lock system

You can lock/unlock the vehicle via the central lock button.

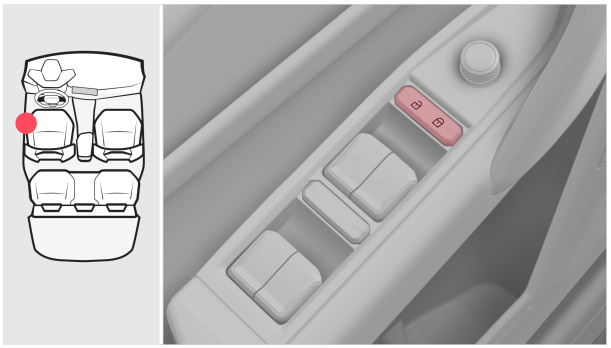

Central locking buttons with indicator lamp


Press the lock button on the driver's door to lock all of the doors and tailgate. The indicator on the button illuminates when the vehicle is locked.

Press the unlock button on the driver's door to unlock all of the doors and tailgate.

Emergency door locking/unlocking

When the power of the remote key is too low to lock/unlock the door, you can lock/unlock the door by the mechanical key. Steps for remove the mechanical key blade , please refer to the *Mechanical key*(p. 38).

Unlocking/Locking the driver door

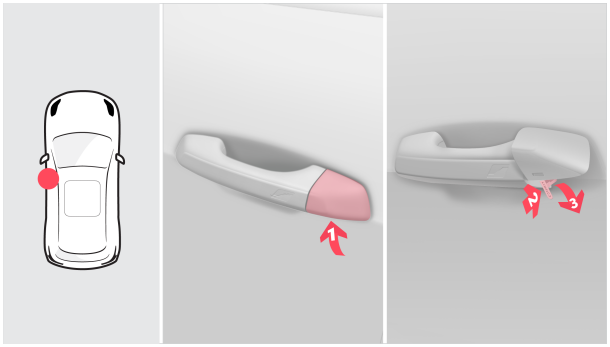

1 Insert the mechanical key and pry off the lock cover.

2 Insert the mechanical key.

3 Turn the mechanical key to unlock the vehicle.

4 Remove the mechanical key. Pull it again to open the door.


To lock the vehicle, just insert the mechanical key and turn it reversely.

Note!

- Unlocking the vehicle by the mechanical key will trigger the alarm. You can turn off the anti-theft alarm manually , please refer to the *Anti-theft alarm system*(p. 50).

Passenger emergency door locking/unlocking

If the electronic door lock fails, you can manually lock the passenger side door by following ways.

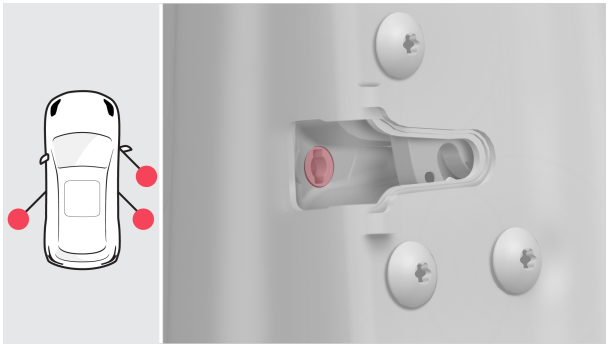

Emergency locking device

1 Push the mechanical key along the emergency lock hole to the inside of the lock.

2 Turn the mechanical key to lock the vehicle.

3 Remove the mechanical key, and close the door.

Pull the inner handle once from the inside of the car to unlock the door. Pull the handle again to open the door.

Note!

- The driver door can be locked by the mechanical key, and the other three doors can be locked by the emergency locking device.
- When the emergency locking device and the child safety locks are activated at the same time, only the emergency lock can be released by pulling the inside handle of the door, and you need to pull the outside handle of the door to open the door.
- When the vehicle is unlocked, please re-lock the vehicle when you leave to prevent property damage.

Child safety locks

When the child safety lock is activated, the rear door cannot be opened from the inside of the car, which can prevent children from opening the rear door at the wrong time. The child safety locks are located on the trailing edge of the rear doors and can be activated or deactivated when the rear doors are opened.



1 Deactivate the child lock, and the rear door can be opened from both inside and outside.

2 Activate the child lock, and the rear door cannot be opened from inside.


Opening/closing the mechanical tailgate

Opening the tailgate with the touch button on the tailgate

When you approaches the tailgate with the remote key carried, you can open the tailgate by the keyless entry function , please refer to the *Keyless entry system*(p. 41).

Opening the tailgate via the remote key

Press and hold the button on the remote key to pre unlock the tailgate, Gently press the soft touch button at the bottom of the tailgate and open the tailgate upward.

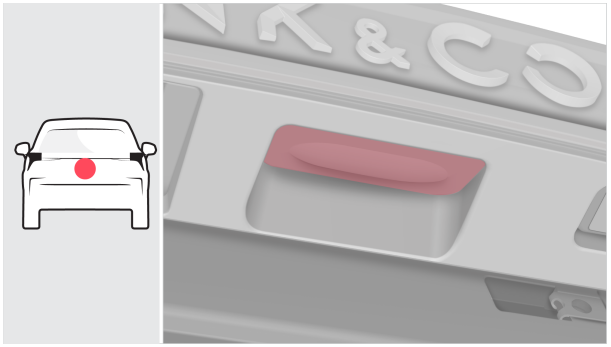

Closing the tailgate


Pull down the tailgate and close it with its inertia.

⚠ Warning!

- After closing the tailgate, please confirm that it is locked. Otherwise, the tailgate may suddenly open during driving, causing dangerous accidents.

Opening/closing the power tailgate

Opening/closing the tailgate with tailgate button on the dashboard

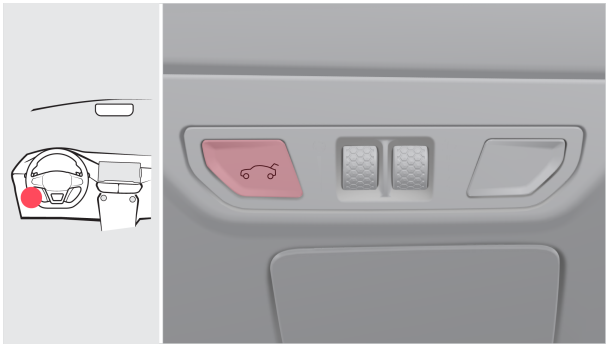

Tailgate button on the dashboard

ⓘ Note!

- The pictures are only for illustration, please refer to the actual vehicle.

Press and hold the button on the instrument panel to open the tailgate. Press the button and release to pause during the opening of the tailgate.

After the tailgate is opened, press and hold the button on the instrument panel to close the tailgate.

Opening the tailgate with the touch button on the tailgate

When you approaches the tailgate with the remote key carried, you can open the tailgate by the keyless entry function , please refer to the *Keyless entry system*(p. 41).


Opening/closing the tailgate with the remote key

Press and hold the button on the remote key and the tailgate opens automatically. After the tailgate is opened, press and hold the button on the remote key to close the tailgate.

Unlock near trunk

Take the smart key near the tailgate and stand for a period of time. The turn will flash to reminder you. After continuing to stand for a while, the power tailgate will automatically open, please refer to the *Keyless entry system*(p. 41).

Close the tailgate with buttons on the lower edge

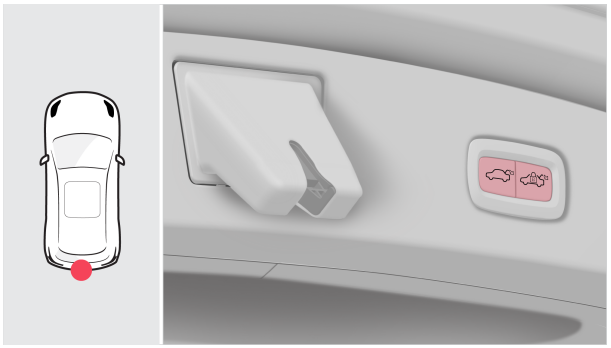

Buttons on the lower edge of the tailgate

- Press and release the button on the lower edge of the tailgate, and the tailgate will close automatically.
- Press and release the button on the lower edge of the tailgate, the tailgate will close automatically and all doors and the tailgate will be locked.

⚠ Warning!

- When closing the tailgate, always be careful not to bump your head on it.

Tailgate delay closing function

When all doors are closed and he electric tailgate is open and the legal smart key is carried,quickly press the same button on the lower edge of the tailgete twice to activate the dalayed clasing

funcion of the tailgate with an audible prompt. After leaving the vehicle with the smart key, the rear door will automatically close.

Note!

- If you do not leave the vehicle after activating the tailgete delayed closing, the tailgate delayed closing function will automatically close.

Setting the opening angle

You can set the opening angle of the tailgate as needed.

1 Open the tailgate to the demand position.

2 Press and hold the button or button on the lower edge of the tailgate.

3 When the setting is completed, there will be a prompt sound.

Warning!

- When opening the tailgate, make sure there are no pedestrians or obstacles in the tailgate opening path. Otherwise, personnel injury or property loss may occur.

Note!

- The opening position can be set on the center display., please refer to the *CARS*(p. 71)

Anti-pinch protection

When closing the tailgate, if an obstruction is detected, the tailgate will stop and return to the preset maximum angle position.


When opening the tailgate, if an obstruction is detected, the tailgate will stop.

Open the tailgate mechanically

In the case of the discharged battery, you can open the tailgate mechanically from inside the vehicle.


1 Fold the rear seat.

2 Use a screwdriver or similar tool to remove the protective lid.

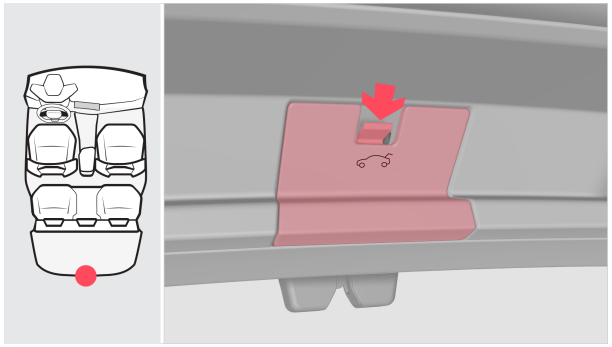

Protective cover at lower end of tailgate

3 Slide the lever upward as indicated to release the tailgate.

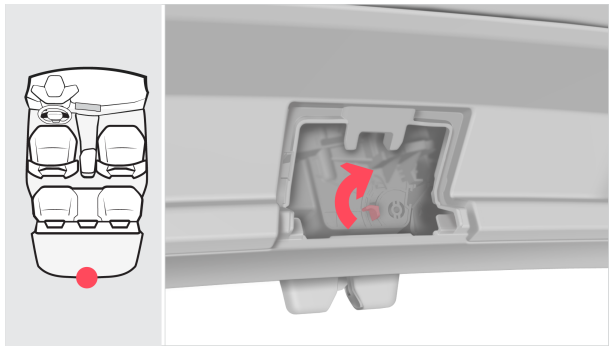

Control rod

4 Open the tailgate.

Anti-theft systerm

Anti-theft alarm system

If someone invades the vehicle illegally, the anti-theft alarm system sends out alarms through flashing of left and right direction indicators and sounds of the horn.

After the anti-theft alarm system is activated, the lock status of the vehicle is continuously monitored. The anti-theft alarm system will be triggered when it is detected that the door/hood/tailgate is opened with a not programmed key.

If the instrument cluster displays indicative information about the failure of the alarm system, it indicates that there is a fault in the alarm system. It is recommended to contact a Lynk & Co Center for inspection.

Arm/Disarm the anti-theft alarm system

When all doors, the hood and the tailgate are locked, the anti-theft alarm system is armed. After the vehicle is unlocked, the anti-theft alarm system is automatically disarmed , please refer to the *Remote control key*(p. 37).

ⓘ Note!

- If a side door is not closed, the vehicle cannot be locked/the anti-theft alarm cannot be activated.
- The alarm is automatically activated a few seconds after the vehicle is locked.
- When the tailgate and the hood are open, the alarm is partially enabled. The alarm will be completely armed once the tailgate/hood is closed.

Turning off the triggered anti-theft alarm

Use one of the following to turn off the triggered alarm:

- Put the remote key in the car and turn on the ignition.
- Press the button on the remote key.
- Put the remote key on the key sensing area and turn on the ignition switch if the vehicle has been unlocked with a mechanical key.

Immobilizer

The immobilizer is designed to help prevent unauthorized persons from starting the vehicle The vehicle can only be started by using a remote control key matched with the vehicle.

⚠ Warning!

This vehicle has an anti-theft feature, but it does not prevent all thefts and does not guarantee the absolute security of the vehicle.

ⓘ Note!

- The vehicle cannot be started if the remote control key or the transponder is damaged.
- If there is electromagnetic interference around the vehicle, such as power plants or signal towers, the immobilizer may not work properly.

If the instrument cluster displays indicative information about the failure of the immobilization system. It is recommended to contact a Lynk & Co Center for inspection.


INSTRUMENT

Indicators and warning

Indicators and warning lights

Note!

The following pictures or icons are for illustration only. Depending on the vehicle configuration, and the theme and settings of the instrument cluster, the relevant information displayed may be different or not applicable to your vehicle. Please refer to the actual vehicle for details.

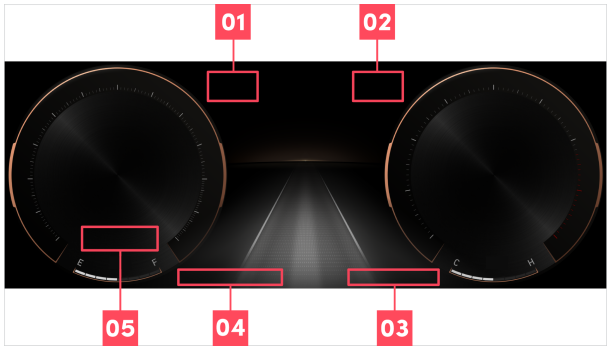

01 Upper left area (driving mode, position lights, left turn indicator, etc.)

02 Upper right area (high beam, right turn indicator, etc.)

03 Lower right area (door open, transmission failure, engine emission failure, abnormal tire pressure, coolant temperature, etc.)


04 Lower left area (electric parking brake system, auto hold, low fuel level, anti-lock braking system failure, etc.)

05 Middle left area (cruise control, lane keeping aid, etc.)

Note!

- When the ignition switch is turned on, the system will perform self-test. During the test, some warning lights and indicator lights may be on or flash briefly, which is not a malfunction.
- Certain warning/indicator symbols share the same position in the instrument cluster.
- The warning and indicator symbols indicate a number of different functions and possible faults. Certain warning and indicator symbols are accompanied by an audible signal.

Indicator symbols



Direction indicators: The appropriate indicator flashes when the direction indicator switch is activated. Direction indicators on both sides flash when the hazard warning light switch is turned on.



Position lights: The indicator illuminates if the position lights are activated.



Front fog lights : This indicator illuminates if the front fog lights are activated.



Rear fog lights: The indicator illuminates if the rear fog lights are activated.



High beam: This indicator illuminates if the high beam is activated.



Daytime running lights: When the daytime running lights work normally, this indicator illuminates.



Active High-Beam Control (AHB-C) : This indicator illuminates if the high beam is not turned on while the AHB-C is activated.



Active High-Beam Control (AHB-C) : This indicator illuminates if the high beam is turned on automatically while the AHB-C is activated.



ECO mode: This indicator illuminates when the driving mode is in economic mode.



Comfort mode: This indicator illuminates when the driving mode is in comfort mode.



Sport mode: This indicator illuminates when the driving mode is in sport mode.



Intelligent mode: This indicator illuminates when the driving mode is in Intelligent mode.



ESP OFF: This indicator illuminates when ESP is turned off via the ESP OFF button on the front tunnel console.



Electric Parking Brake (EPB): This indicator illuminates in red when EPB is activated. When Auto Hold is activated, this indicator turns on in green.



Speed Limit: This indicator illuminates when speed limit is activated.



Cruise Control (CC) : This indicator illuminates when CC is activated.



Adaptive Cruise Control (ACC) : This indicator illuminates when ACC is activated.



High-speed Coasting : This indicator illuminates when the high-speed coasting function is enabled.



Auto Wiping : This indicator illuminates when the auto wiping function is activated.



Door Open: This indicator illuminates when either of the four doors or the engine hood or tailgate is opened.



Low Fuel Level: If the indicator remains on and in yellow, it indicates that the fuel level in the fuel tank is too low.




Intelligent Start-Stop : When the intelligent start-stop system works, the indicator light turns on in green. If the indicator remains on and in yellow, it indicates that the intelligent start-stop system is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Lane Keeping Aid (LKA) : This indicator illuminates in green when LKA is enabled. If the indicator remains on and in red, it indicates that there is a problem with the LKA. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Automatic emergency braking system : This indicator illuminates in yellow when the automatic emergency braking function is deactivated. If the indicator remains on and in red, it indicates that the automatic emergency braking system is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Blind Side Detection (BSD) : When BSD is turned on and the function is activated, this indicator will be illuminated in green if the system can work normally, and go out after a few seconds. When the rear radar function is turned on, this indicator turns on in green. If the radar surface is covered by dust, this indicator turns on in yellow, and a text prompt appears on the instrument cluster. If the indicator remains on and in red, it indicates that rear radar is faulty. Please

stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Hill Descent Control (HDC) : This indicator illuminates in green when HDC is activated. If the indicator remains on and in yellow, it indicates that the HDC is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Pilot Assist : When the pilot assist is turned on and the function is not activated, this indicator is illuminated in grey. When the pilot assist is activated, this indicator turns on in green. When the pilot assist is degraded, this indicator turns on in orange. If the indicator remains on and in red, it indicates that there is a problem with the pilot assist. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Auto Hold: This indicator illuminates in green when Auto Hold is activated. If this indicator remains on and in red, it indicates that the Auto Hold is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.

Warning light symbols

Warning symbols indicate that some important functions have been disabled or there is a serious failure of the vehicle which may cause safety risks. Make sure the fault is corrected before driving.

Warning and malfunction messages appear in the instrument cluster. Certain messages are accompanied by an audible signal and/or an illuminated symbol.

⚠ Warning!


- When relevant warning lights are illuminated on the instrument cluster, the driver should pay attention to them. Failure to handle the noted condition(s) could result in vehicle damage or personal injury.



Red Warning Symbol: When a red warning symbol is illuminated, it indicates that some alarm or failure information is hidden. You can view alarm or failure information in the settings interface , please refer to the *Instrument cluster settings*(p. 62).



Engine Oil Pressure Low: If the warning light remains on, it indicates that the engine oil pressure is too low. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Gasoline Particle Filter (GPF) Fault: If the warning light remains on, it indicates that the GPF status is abnormal. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Coolant Temperature: If the warning light remains on and in red, it indicates that the engine is hot. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Seatbelt Reminder: This warning light illuminates in red if the passenger's seatbelt is unfastened. Please fasten your seatbelt, otherwise personal injury may be caused. If the warning light remains on after the seatbelt is

fastened, it indicates that the seatbelt is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Abnormal Tire Pressure: If the warning light remains on, the it indicates that the tire pressure is abnormal, and relevant warning information is prompted on the instrument cluster. If the warning light flashes for about 1 minute and then stays on, there is a dTPMS failure. Please stop the vehicle at a safe place immediately and contact a Lynk & Co Center.



Adaptive Cruise Control Fault: If the warning light remains on, it indicates that ACC is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Battery Charging Fault: If the warning light is on continuously, it means that the battery is faulty or the generator cannot supply power to the vehicle. Stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Electronic Stability Program (ESP): This warning light flashes when ESP is making an intervention. If the warning light remains on, it indicates that ESP is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Anti-lock Brake System (ABS) Fault: If the warning light remains on, it indicates that ABS is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Electronic Power Assist Steering (EPAS) Fault: If the warning light remains on, it indicates that EPAS is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Engine Emission Fault: If the warning light remains on, it indicates that the vehicle emission system is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Electronic Brake Force Distribution (EBD) Fault: If the warning light remains on, it indicates that the EBD is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Electric Parking Brake (EPB) Fault: If the warning light remains on, it indicates that the EPB is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Limp-home Mode: If the warning light remains on, it indicates that the current system has power limitation problem. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Airbag Fault: If the warning light remains on, it indicates that the airbag is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Hybrid System Fault: If the warning light remains on, it indicates that the hybrid system is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Transmission Fault: If the warning light remains on and in yellow, there is a minor transmission failure. If the warning light is illuminated continuously and in red, there is a serious transmission failure. Please stop the vehicle at a safe place immediately and contact a Lynk & Co Center.



Brake Fault: If the warning light remains on, it indicates that the brake fluid level is too low. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.



Engine System Fault: If the warning light remains on, it indicates that the engine system is faulty. Please stop the vehicle in a safe place immediately and contact a Lynk & Co Center.

Instrument cluster

Instrument cluster

Note!

- The following pictures or icons are for illustration only. Depending on the vehicle configuration, and the theme and settings of the instrument cluster, the relevant information displayed may be different or not applicable to your vehicle. Please refer to the actual vehicle for details.
- The following contents and illustrations take the same instrument cluster theme as an example. Details of theme settings , please refer to the *Instrument cluster settings*(p. 62).



01 **Speedometer**: displays the vehicle's speed in current state.

02 **Left Information Display Area**: displays information such as cruise control, adaptive cruise control and pilot assist.

03 **Driving Mode:** displays current drive mode

04 **Outside Temperature**: displays the current outside temperature. When the outside temperature drops to a certain level, a snowflake symbol is shown in the instrument cluster as a warning for slippery conditions.

05 **Gear Indicator Icon**: displays the gear status of transmission.

06 **Time**: displays current time.

07 **Tachometer**: displays the engine speed.

08 **Right Information Display Area:** displays relevant information such as trip, multimedia, telephone and settings.

09 **Coolant temperature**: displays the engine coolant temperature.

10 **Accumulative Mileage:** displays current accumulative mileage.

11 **Middle information display area**: displays information such as map and lane assist.


12 **Fuel gauge:** shows the remaining fuel level in the tank and the distance to empty.

Caution!

- Refuel as soon as possible when the fuel gauge icon turns yellow, otherwise it may affect your normal driving.
- Do not let the pointer of the engine tachometer in the red area, which may cause serious damage to the engine.

Operate the instrument cluster

Right keypad, steering wheel

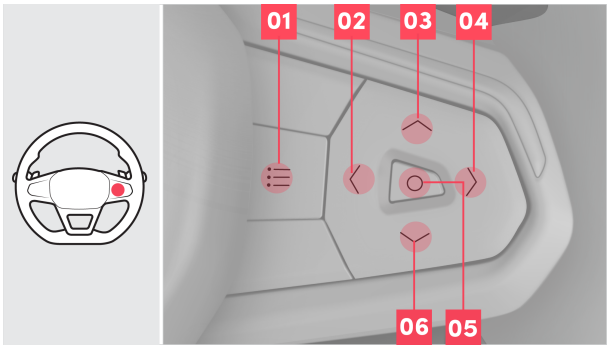

01 Menu: press and release this button to switch among information in the right information display area cyclically. Long press this key to enter the setting interface, and short press this key again to exit.

02 Left selection key: in the setting interface, briefly press this key to switch to the left; In the multimedia playing interface, briefly press this key to switch to the previous song.

03 UP: press this key and release to select the previous menu.

04 Right selection key: in the setting interface, briefly press this key to switch the menu to the right; In the multimedia playing interface, briefly press this key to switch to the next song.

05 Confirm: press this button to confirm the selection of a menu item and enter the submenu.

06 DOWN: press and release this key to select the next menu.

Other functions of the keys on the right side of the steering wheel , please refer to the *Operating center display*(p. 67).

Instrument cluster settings


Note!

- The following images or icons are for illustrative purposes only. Depending on the vehicle configuration, combination instrument theme, and settings, the displayed information may differ or be unsuitable for your vehicle. Please refer to the actual vehicle for specific relevant information.

Short press the ☰ key on the keyboard on the right side of the steering wheel to enter the driving information display interface, and then short press the ☰ key to cycle through**multi-media**、**phone**、**trip**.

- **Journey:**Enter the itinerary interface to view the following content:
  - **Journey 1:**You can view cumulative mileage, cumulative average fuel consumption, instantaneous fuel consumption, and cumulative average vehicle speed.
  - **Journey 2:**You can view single average fuel consumption, single average vehicle speed, single mileage, and instantaneous fuel consumption.
  - **Tire pressure:**You can check the current tire pressure.
- **Phone**:Enter the phone interface and select to view**Recent call list**;When selecting a call, use the confirm button to make a direct call. When there is an incoming call, use the confirm/ right selection key and select answer; Use the left selection key to reject incoming calls.
- **Multi-media** ：Enter the multimedia interface, you can choose to play media sources (Radio, USB, Bluetooth).

TRIP button

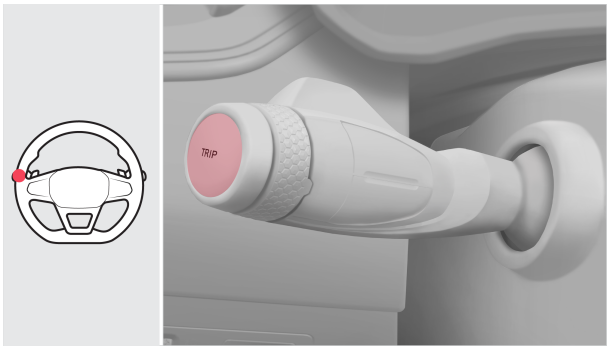

When the combination instrument displays the travel information, short press the TRIP button to cycle through the travel information; Long press the TRIP button to reset the travel 1 information (cumulative average fuel consumption, cumulative mileage, etc.); When the itinerary information is not displayed, short press the TRIP button to return the itinerary information.

Long press the ☰ key on the keyboard on the right side of the steering wheel to enter the settings interface. Use the left/right selection keys to enter**system**、**trip**、**notice**、**vehicle**interface.

- **System:**You can set the following content when entering the system interface:
  - Theme selection: After turning off the driving mode linkage function on the central display screen, different instrument themes can be manually selected; After activating the driving mode linkage, the instrument theme will switch with

the driving mode linkage and cannot be manually selected, please refer to the *Display*(p. 75).

- Time setting: 24-hour and 12 hour time display can be set.
- Unit setting: Set the units for temperature and tire pressure display.

- **Trip**:Entering the itinerary interface allows for the following settings:
  - Reset Travel: Reset the information for Travel 1.
  - Maintenance mileage: Display the maintenance mileage.
- **Notice**:Enter the notification interface to view and view vehicle notification information.
- **Vehicle**:You can set the following content when entering the system interface:
  - Set steering mode: Four steering modes can be set, including linkage with driving mode, comfort, standard, and sport.
  - Overspeed alarm: Enable/disable overspeed alarm.

CENTER DISPLAY

CENTER DISPLAY

Main interface

ⓘ Note!

- The following pictures or icons are for illustration only. Depending on vehicle configuration, software versions and settings, the relevant information displayed may be different. Specific situation should be based on the actual vehicle model.

Main interface could display the time, user status, etc. You can also click the activated application cards or multiple application cards to enter function interface.

Opening/closing center display

Operate via the right keyboard of the central display

The right keyboard of the central display can be used to switch the power supply and adjust the volume.



01 Press and release: increase the volume by one level. Press and hold: volume increases continuously.


02 Press and release: decrease the volume by one level. Press and hold: volume decreases continuously.

03 Press and release: open or lock the central display. After the central display is locked, the video and audio will be played in the background. Press and hold for about 1 s to enter the rest screen mode. Press and hold for 10 s and the entertainment host reboots.

Operating center display

Operate with steering wheel keypad

Media functions can be controlled using the left and right keypads of the steering wheel.

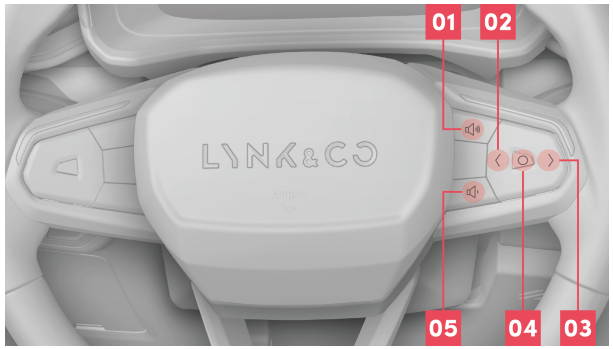

01 Press and release: increase the volume by one level.

02 Press and release: previous radio/song/video.

03 Press and release: next radio/song/video.

04 Press and release: play/pause radio/song/video.

05 Press and release: decrease the volume by one level. Press and hold: mute.

Vehicle function interface

Note!

- The following pictures or icons are for illustration only. Depending on vehicle configuration, software versions and settings, the relevant information displayed may be different. Specific situation should be based on the actual vehicle model.

You can slide the screen down the main interface lower edge of the center display screen to enter the vehicle function interface. The interface shows various vehicle functions.

The vehicle function interface allows you to activate/deactivate the following functions:



Wireless charging , please refer to the *Connect*(p. 75).



Touch screen sound , please refer to the *Sound*(p. 76).



Driving entertainment restrictions , please refer to the *Display*(p. 75).



Hill Decent Control , please refer to the *Hill Descent Control (HDC)*(p. 153).



Lane Keeping Aid , please refer to the *Lane assist system*(p. 169).



Rear Cross Traffic Alert , please refer to the *Rear Cross Traffic Alert (RCTA)* (p. 183).



Lane Change Assist , please refer to the *Lane Change Assist System*(p. 172).



Door opening warning , please refer to the *Door Open Warning (DOW)*(p. 186).



Rear Collision Warning , please refer to the *Rear collision warning (RCW)* (p. 185).



Rearview mirror folding when locking the vehicle , please refer to the *Power outside mirrors*(p. 97).



PAC-360 , please refer to the *Visual Park Assist 360 (Camera)*(p. 179).

ⓘ Note!

- Press and hold the icon to delete the icon shortcut, and click the Add button to add an icon shortcut.

Function settings

Climate control interface

Note!

- The following pictures or icons are for illustration only. Depending on vehicle configuration, software versions and settings, the relevant information displayed may be different. Specific situation should be based on the actual vehicle model.



You can slide the screen upward from the main interface lower edge of the center display screen to enter the climate control interface.



Click to set the air conditioning.



Click to turn front windshield defrosting on/off.



Click to turn rear windshield defrosting on/off.



Click to turn air purification on/off.



Click to turn on/off energy-saving mode.



Click to turn off the air conditioning.



Click to turn automatic air conditioning on.



Click to turn on/off the cooling function.



Click to turn on/off the maximum cooling function.



Click to switch between indoor and outdoor air circulation.



Click to synchronously adjust the temperature on the driver's side and the front passenger's side.

Air conditioning settings

You can set the following content in the air conditioning settings interface:

- **Air conditioning button sound**:Turn on/off the air conditioning button sound.
- **Air conditioning self drying**:Turn on/off the air conditioning self drying function. After the air conditioning self drying function is turned on and the vehicle is locked, if the conditions are met, the air conditioning will automatically turn on the blower for drying to avoid odor caused by damp and moldy evaporator.
- **Active cabin cleaning**:Turn on/off the active cabin cleaning function. After the active cabin cleaning function is activated, the air conditioning system will automatically turn on the blower to blow out any odors in the air conditioning ducts after unlocking the vehicle and before opening the doors.
- **Intelligent air volume mode**:Set the air conditioning outlet mode. When setting the temperature to display LO or HI, press the AUTO button to select Mute, Comfortable, or Strong, and adjust the air conditioning output accordingly.
- **Air conditioning interface holding time**:Set the holding time for the air conditioning interface. When there is no operation on the air conditioning interface, select 5 seconds, 10 seconds, or 15 seconds, and the system will exit the air conditioning interface according to the set time.

Application

ⓘ Note!

- The following images or icons are for illustrative purposes only. Depending on the vehicle configuration, software version, and settings, there may be differences in the displayed relevant information. Please refer to the actual vehicle model for specific information.



You can click on the icon in the navigation bar of the central display screen to enter the application interface. On this interface, tap the application icon to enter the corresponding application interface.

CARS



Click on the icon in the navigation bar of the central display screen to enter the vehicle settings interface.

Assisted driving and safety

Click on ,Driving assistance functions can be set and adjusted.

The following settings can be made in the assisted driving and safety menu:

Automatic emergency braking system(AEB)*

- **Automatic emergency braking:**Enable/disable automatic emergency braking, please refer to the *Auto emergency braking*(p. 174).
- **Forward collision warning:**Turn on/off front collision warning, please refer to the *Auto emergency braking*(p. 174).
- **Sensitivity:**Enable this function to set the level of collision warning sensitivity, please refer to the *Auto emergency braking*(p. 174).

Lane keeping assistance*

- **Lane keeping assistance:**Turn on/off lane keeping assistance, please refer to the *Lane assist system*(p. 169).
- **Auxiliary strength:**Set auxiliary strength, please refer to the *Lane assist system*(p. 169).
- **Alarm feedback method:**Set alarm feedback method, please refer to the *Lane assist system*(p. 169).

Side and rear radar assistance*

- **Lane change safety warning:**Enable/disable lane change safety warning, please refer to the *Lane Change Assist System* (p. 172).
  Warning sound: Turn on/off warning sound, please refer to the *Lane Change Assist System*(p. 172).
- **Rear lateral traffic warning:**Turn on/off rear lateral traffic warning, please refer to the *Rear Cross Traffic Alert (RCTA)* (p. 183).
- **Rear collision warning:**Turn on/off the rear collision warning system, please refer to the *Rear collision warning (RCW)* (p. 185).
- **Door opening warning:**Opening/closing the door triggers collision warning, please refer to the *Door Open Warning (DOW)*(p. 186).
  Warning sound: Set the level of door opening warning sound, please refer to the *Door Open Warning (DOW)*(p. 186).

Other settings

- **Hill descent control *:**Enable/disable hill descent control function, please refer to the *Hill Descent Control (HDC)*(p. 153).
- **Intelligent start stop:**Enable/disable intelligent start stop function, please refer to the *Intelligent Start & Stop* (p. 140).

Vehicle Settings

Click on ,Vehicle functions can be set and adjusted.

The following settings can be made in the vehicle settings menu:

Automatic folding of exterior rearview mirrors after locking *: Automatic folding of the exterior rearview mirror after opening/closing the lock, please refer to the *Power outside mirrors*(p. 97).

Rear trunk opening height *:Set the opening height of the trunk, please refer to the *Opening/closing the power tailgate*(p. 46).

Door lock

- **Lock reminder:**Set the alarm reminder type and anti-theft unlocking lock reminder when locking the car, please refer to the *Anti-theft alarm system*(p. 50).
- **Door unlocking mode:**Set the door unlocking to driver only/full vehicle.
- **Unlocking near the trunk *:**Turn on/off unlocking near the trunk, please refer to the *Keyless entry system*(p. 41).
- **Automatic unlocking when approaching vehicles *:**Turn on/off automatic unlocking when approaching vehicles, please refer to the *Keyless entry system*(p. 41).
- **Stay away from the vehicle and lock automatically:**Turn on/off automatic locking away from the vehicle, please refer to the *Keyless entry system*(p. 41).
- **Auto unlock after engine shutdown:**Turn on/off the automatic unlocking function when the vehicle is turned off.

Car window

- **Lock the car and automatically close the windows:**Turn on/off the car lock and automatically close the windows. When opened, lock the car and automatically close the windows. After closing, lock the car. Press the remote control key to close the windows, please refer to the *Remote control key*(p. 37).
- **Automatically close windows during rain:**Turn on/off automatic window closing during rainy weather, please refer to the *Power windows*(p. 104).

Wiper

- **Front wiper parking deceleration:**Turn on/off the front wiper parking deceleration function. After activating this function, the wiper speed slows down when the vehicle is in motion and stops.
- **Rear wiper linkage after reversing:**Turn on/off the reverse wiper linkage. When this function is enabled, if the front wiper is in the on state during reverse, the rear wiper linkage will be activated.

Atmosphere light mode

- **Stepless color change:**After activation, the ambient light will activate the stepless color changing mode, automatically changing colors, please refer to the *Interior lighting*(p. 94).
- **Breathing mode:**After being turned on, the brightness of the ambient light constantly changes, please refer to the *Interior lighting*(p. 94).
- **Linkage with vehicle speed:**After activation, the color of the ambient lights changes with the speed of the vehicle, please refer to the *Interior lighting*(p. 94).
- **Overspeed alarm:**After activation, when the actual speed is greater than 120km/h, the color of the atmosphere light turns red, please refer to the *Interior lighting*(p. 94).
- **Linkage with driving mode:**After activation, the color of the ambient lights changes with the driving mode, please refer to the *Interior lighting*(p. 94).
- **Custom:**Customizable selection of ambient light colors, please refer to the *Interior lighting*(p. 94).

Atmosphere light brightness adjustment: Adjusting the brightness of ambient lighting, please refer to the *Interior lighting*(p. 94).

Accompanying me home light: Set the lighting time for the accompanying me home light, please refer to the *Exterior lighting* (p. 88).

Vehicle information

Click on ⚙,The following functions can be set and adjusted:

- **Body color:**Display the color information of the vehicle.
- **License plate number:**Display license plate number information.
- **Car nickname:**Set your car nickname to synchronize with Bluetooth and hotspot names.
- **Vehicle identification code:**Display vehicle identification code information.

ⓘ Note!

- The configuration with * may not be applicable to your vehicle. Please refer to the actual vehicle for specific information.

System settings

Connect

click on the navigation bar ⠿ , enter the application interface , click**system settings-connect** , the following settings can be made in the connection.

Bluetooth

- **Bluetooth**: Turn on the Bluetooth device. When turning on, you can view available devices and paired devices.
- **Connection**: Perform device search/clear pairing/pairing/ connection.
- **Vehicle Name:** Modify the bluetooth device name.

ⓘ Note!

- After turning on the Bluetooth the vehicle for a period of time, the Bluetooth is turned off automatically.
- When the connection is activated, a Bluetooth icon appears in the status bar of the center display.
- The Bluetooth of your car can be paired in two ways: search phone on the car or search vehicle on your phone.

Wireless charging*

After the wireless charging function is turned on, the central display shows the charging status.

ⓘ Note!

- Keep all metallic objects away from the wireless charging pad. Metallic objects might lead to a very high temperature of the wireless charging pad.
- Keep credit card or other magnetic objects away from the wireless charging pad, to avoid magnetic information be erased.
- Keep the remote key away from the wireless charging pad to avoid low battery of the remote control key.
- For normal operation of the wireless charging function, please place the device in the center of the wireless phone charger.
- For normal operation of the wireless charging function, please put the key in the vehicle.
- For normal operation of the wireless charging function, please close the door.

Display

click on the navigation bar ⠿ , enter the application interface , click**system settings-display** , The following settings can be done in the display menu:

- **Central Control Brightness Adjustment**: adjust the brightness of the center display.
- **Linkage of Instrument Panel With Driving Mode**: With this function enabled, the display mode of instrument cluster will change with driving mode.
- **Driving Entertainment Restriction**: With this function enabled, video play is prohibited when the speed exceeds to a certain value.

- **DAY MODE:** To set the day mode.

Sound

click on the navigation bar ⠿ , enter the application interface , click**system settings-sound** , The following settings can be done in the sound menu:

- **Equalizer:** Set the sound output mode of playing music.
- **Balance and fader:** Adjust the sound focus.
- **Volume Adjustment**: adjust the volume of system , media volume and call volume.
- **Touch Tone Sound**: turn on/off the touch tone. The touch tone is turned on by default.
- **Climate Key Tone**: turn on/off the climate key tone.
- **Vehicle Speed Compensation**: when this function is turned on, the volume of entertainment system is adjusted according to the vehicle speed. You can set four status of OFF, LOW, MID and HIGH, and the default is MID.
- **Sound Mixing Way**: set the sound mixing mode to direct mixing or automatic mixing.

System

The following can be set in the system menu:

- **Software Update:** to update the software.
- **Storage space**: The usage of storage space is displayed.
- **About the host**: The basic information of the host version is displayed.
- **Factory Defaults:** This function is used to reset the system to the factory defaults.

- **Notice Setting**
  - **Notification Message Aggregation:** to turn on/off notification message aggregation.
  - **Voice Broadcast of Notification Message:** to turn on/off the voice broadcast of notification message.
  - **Hide Notification Contents**: With this function enabled, the contents of the notification message will be hidden.

Media function

Multimedia

⚠ Warning!

- When operating the multi-media, make sure the vehicle is parked in a safe place, set the gear lever to P position and activate EPB. Otherwise, traffic accidents may occur.

ⓘ Note!

- The following pictures or icons are for illustration only. Depending on vehicle configuration, software versions and settings, the relevant information displayed may be different. Specific situation should be based on the actual vehicle model.

Tap MULTIMEDIA in the center display to access these features. When using multi-media, only one format of audio files can be played at the same time.

Radio

FM/AM : You can switch between FM/AM stations for radio list search, radio favorites, radio playback and other operations.

DAB

DAB : You can listen to or watch the programs or information you want to receive via DAB, by adding favorites so you can find them next time.

Bluetooth

Bluetooth : You can connect the car via Bluetooth to play Bluetooth music.

USB

USB : You can insert a usb flash drive or use a USB connection to play USB music on a device such as a phone.

Call

When a phone is paired with the vehicle via Bluetooth, you can use the integrated hands-free system. You can make calls from contacts or history.

Tap the **Phone** in the center display to enter the main phone interface.


⚠ Warning!

- Do not use your mobile phone in places where there might be a high explosion risk. This includes filling stations, fuel storage areas or chemical factories, as well as places where the air contains fuel vapor, chemicals or metal dust. The phone being used might produce sparks and cause a fire or explosion. High frequency remote controls could be interfered with and cause an explosion.
- When using the phone, you must comply with the laws and regulations of the country or region where you are currently driving.
- Please be sure to operate as permitted by traffic conditions. If this is not the case, stop the vehicle while paying attention to road and traffic conditions and then operate while the vehicle is stationary.

INTERIOR COMPONENT

Steering Wheel

Steering wheel operation

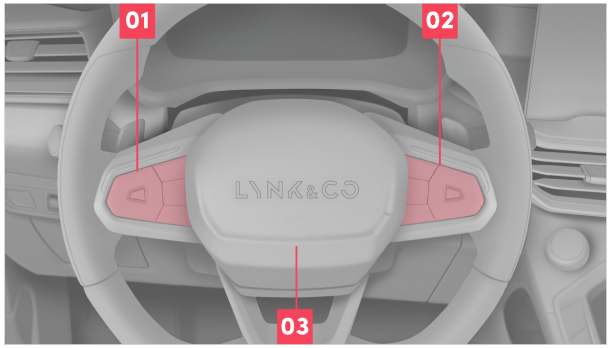

Note!

The pictures are only for illustration, please refer to the actual vehicle.

01 Left keypad, steering wheel

02 Right keypad, steering wheel

03 Horn switch

Left keypad, steering wheel


You can operate the cruise control by using the left keypad on the steering wheel. , please refer to the *Driver assistance system sensors* (p. 149).

Right keypad, steering wheel

You can operate the instrument cluster by using the right keypad on the steering wheel , please refer to the *Instrument cluster*(p. 61) . You can also operate the center display by using the right keypad on the steering wheel , please refer to the *Operating center display* (p. 67).

Steering wheel adjustment

You can adjust the steering wheel upward/downward and frontward/backward.

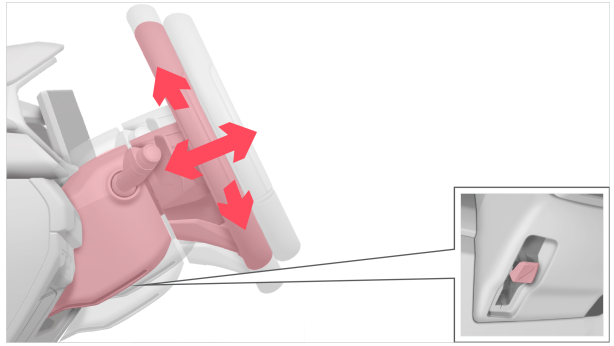

Steering wheel adjustment

1 Push the lever down to the bottom to release the steering wheel.

2 Adjust the steering wheel to a proper position.

3 Pull the lever back to lock the steering wheel in position.

4 Try to move the steering wheel up, down, in and out. Make sure you have securely locked it.

⚠ Warning!


- Driving without the steering wheel securely locked may cause unexpected steering wheel movement which could cause you to lose control of the vehicle.
- To avoid dangerous driving and accidents, the steering wheel can be adjusted only when the vehicle stops.
- Do not let children adjust the steering wheel, otherwise they may be injured.

Seats

Front seat adjustment

Power adjustment of front seats

You can use the electrical adjustment controls to set the position to achieve a safe and comfortable sitting position.

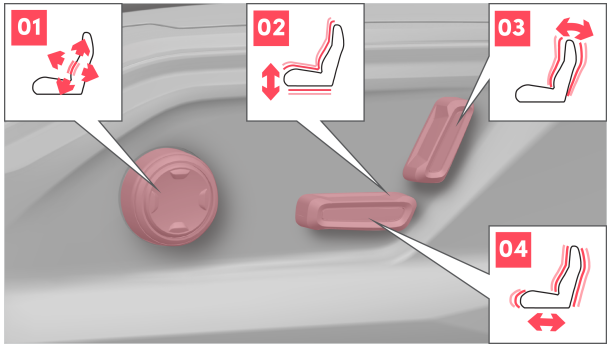

01 Adjust lumbar support by pressing the upper/lower/front/rear part of the control (for seats with electric lumbar support).

02 Adjust seat cushion height by moving the rear of the control up/down .


03 Adjust seat backrest angle by moving the control forward/rearward.

04 Adjust seat forward/backward by moving the control forward/rearward.

⚠ Warning!

- Do not place objects under the power seat or obstruct the movement of the seat, otherwise the motor for seat adjustment may be damaged.

Manual adjustment of front seats

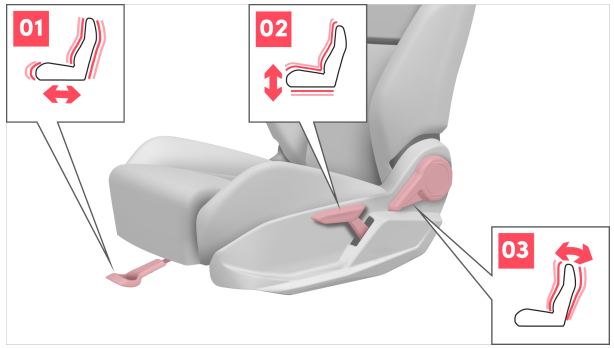

01 Adjust the seat forward/rearward by lifting up the handle and moving the seat, and make sure that the set is locked in place.

02 Adjust the seat cushion height by pumping this device up/down .


03 Adjust seat backrest angle by pulling up the adjusting handle.

⚠ Warning!

- Do not leave the child alone in the car. Children may operate the seat adjusting device accidentally, the children may be pinched and personal injury may occur.
- When moving the seat, do not place hands or other body parts under the pull rod assembly of the seat adjustment system.
- Do not adjust the seat while the vehicle is moving. Otherwise, the vehicle may lose control and personal injury may occur.
- Adjust the seat properly so the brake pedal can be fully depressed. In addition, position the seat as far rearward as comfort and control allow.
- Ensure that the front seat is locked in place before driving. Otherwise, the vehicle may lose control and personal injury may occur.
- Do not tilt the seat back too far back, otherwise the seatbelt protection cannot be guaranteed.

Rear seat folding/unfolding

The 6/4 split rear seat is foldable. Both sections of the rear seat backrest can be folded separately to enable you to transport long objects.

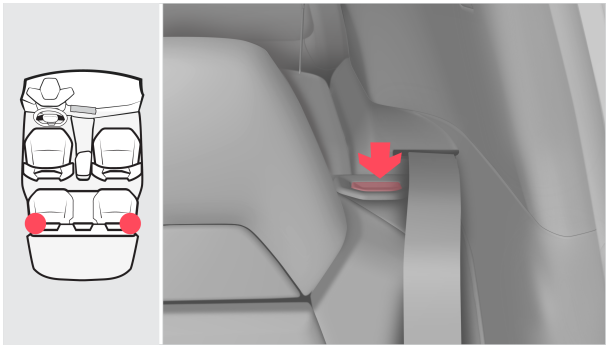

The lock device is on the outside of the outboard rear head restraints

Before folding the rear seats, the front seats may need to be adjusted forward so the rear seats can be folded forward fully.

1 Press the unlocking device as instructed to unlock the rear seat backrest.

2 Fold the seat backrest forward.

⚠ Warning!

Never allow passengers to travel in the trunk. Otherwise, personal injury or death may occur.

Caution!

- Remove the head restraints before folding down the seat backrest. If not, the head restraints may be damaged.
- Make sure no objects are left on the seat, fold the armrest and make sure the seatbelts are unbuckled. Otherwise, damage to the seat upholstery may occur.

Unfold the seat backrests in the reverse order.


Warning!

- Make sure the seat belts are visible and not caught behind the rear seat.
- Make sure the rear seat backrests are locked in place properly before using the rear seat.

Head Restraints

Head restraints supplement the other vehicle safety systems. They may provide additional protection in certain collisions, thus reducing personal injury.

Front head restraints

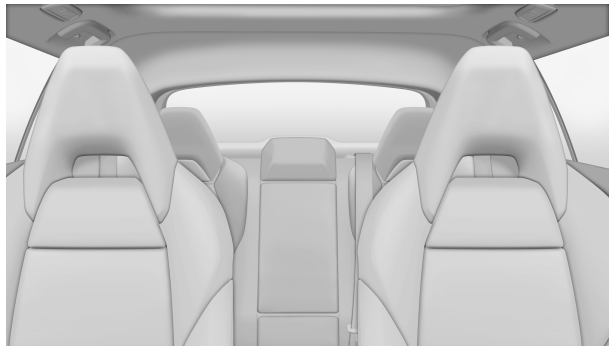


Note!

- The pictures are only for illustration, please refer to the actual vehicle.

The front seats are equipped with fixed head restraints.

Rear head restraints

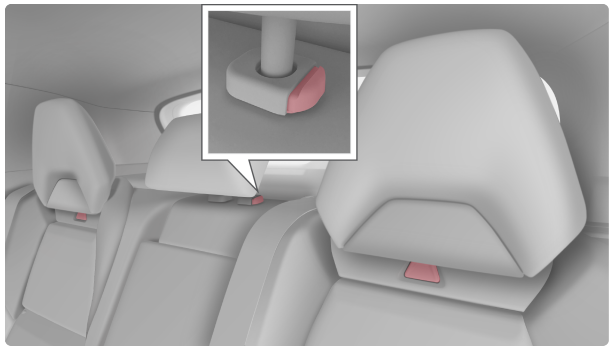

Rear head restraints button

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

Rear passengers can adjust the height of rear head restraints according to their height, so as to make the passengers' heads completely lean on the head restraints and the height of the head restraint is higher than the passenger's head.

1 Head restraints for side seats: lift up the head restraint, press and hold the trapezoidal button to release the head restraint.
Center seat head restraint: press the lock buttons on both left and right to release the head restraint.

2 Adjust the head restraint to an appropriate position, release the button and lock the headrest.

3 Push down on the head restraint to make sure it is locked in place.

Note!

- The lowest position of the rear center headrest is not the use position, you can adjust to appropriate position as required.

Remove the rear head restraints

1 Head restraints for side seats: lift up the head restraint, press and hold the trapezoidal lock button to release the head restraint.
Center seat head restraint: press the lock buttons on both left and right to release the head restraint.

2 Pull out the head restraint upwards.

⚠ Warning!

- Do not transport passengers in the rear seat with the head restraint removed from an occupied seat. The absence of a correctly adjusted head restraint can increase the risk of neck injury.
- Make sure the removed head restraints are stored securely. Otherwise, they can cause serious injury or death in the event of an accident or sudden braking.
- Never adjust the seat head restraints while driving.
- Install and use the seat head restraints correctly, otherwise, the expected protection will not be provided. This may increase the risk of head and neck injuries.

Install rear head restraints

1 Align the head restraint stalks with the holes in the seat.


2 Press and hold the lock button and push down the head restraint.

3 Adjust the head restraint properly and make sure it is locked in place.

Lights

Exterior lighting

Lighting control stalk

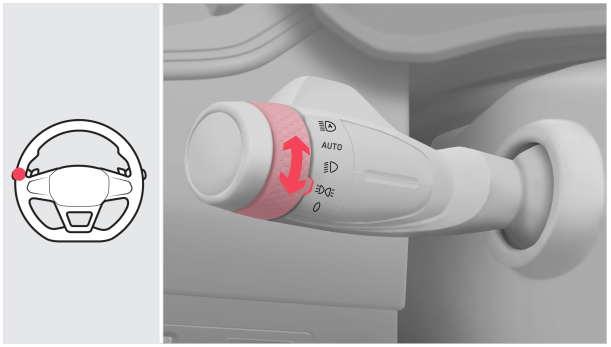

Turn the thumbwheel on the steering wheel stalk to select the type of exterior lighting

Note!

- The pictures are for illustration only, please refer to the actual vehicle.



Turn the thumbwheel to this position to enable AHB-C.

AUTO

Turn the thumbwheel to this position to enable auto activating/deactivating the front headlamps.

Note!

- If the surrounding is well-lighted, the front headlamps will not turn on automatically.



Turn the thumbwheel to this position to turn on the low beam.




Turn the thumbwheel to this position to turn on the position lamps. Turn the thumbwheel to this position to turn on the front position lamps, rear position lamps and rear license plate lamp.

0

Turn the thumbwheel to this position to turn on the daytime running lights while the engine is running.

High/low beam

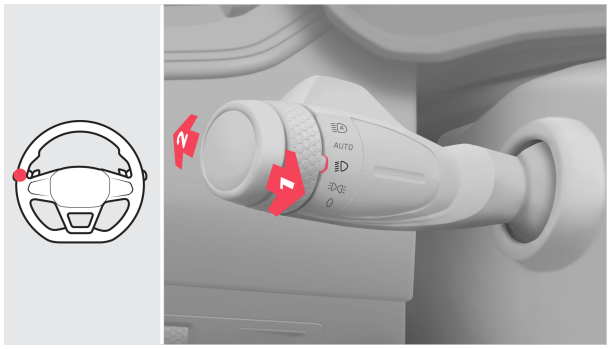


1 High beam flash. Pull the stalk toward you to activate this function.

2 Continuous high beam. Push the stalk forward to activate this function. It can only be activated when the thumbwheel for lights adjustment is turned to ≡D.

When the high beam is turned, the indicator ≡D on the instrument cluster lights up in blue.

Fog lamp

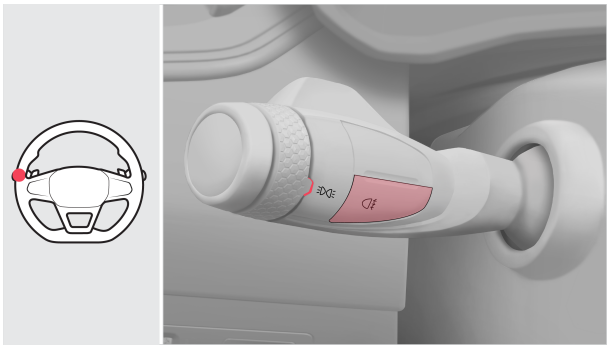


Rear fog lamp

With the position lamps turned on and the low beam turned on, press the rear fog lamp button to turn on the rear fog lamps.

When the fog lamps are turned on, the indicator ⊄ on the instrument cluster illuminates.

Turn signal lights

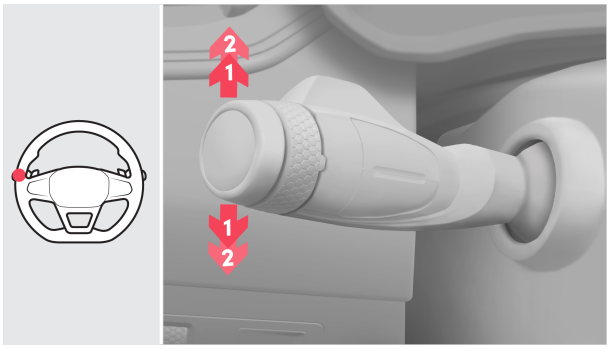


1 Move the stalk upward/downward briefly to flashes the turn signal for 3 times.

2 Move the stalk upward/downward fully to flashes the turn signal flashes continuously.

When the turn signal is activated, the direction indicator on the instrument cluster flashes.

Hazard warning lights

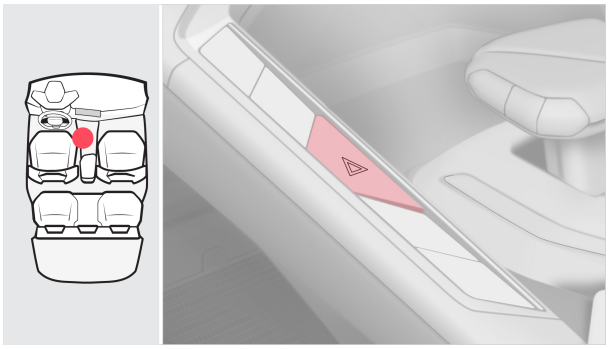

Hazard warning button

When the vehicle encounters a traffic accident, press the hazard warning button to activate the hazard warning lights.

Note!

- The hazard warning lights may also be switched on in the event of a crash or during emergency braking.


Brake lamp

The brake lamps (including high-mounted brake lamps) turn on when the brake pedal is depressed.

Reversing lamp

The reversing lamps are turned on are when the shift lever is in reverse (R) position.

Courtesy lamp on outside rearview mirror

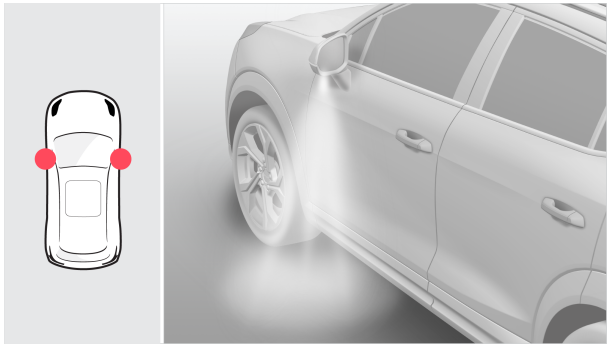

Note!

The pictures are for illustration only, please refer to the actual vehicle.

After the vehicle is unlocked/locked, the courtesy lamp on the outside rearview mirror lights up.

Welcome lights

After the vehicle is unlocked, the exterior lights flash and then turn on. After the vehicle is locked, the exterior lights turn off.

Home safety lights

After the vehicle is locked, some exterior lights can remain on for a period of time to provide lighting for you. You can enable the home safety lights as follows:


1 Switch off the engine.

2 Turn the thumbwheel to **0**, and turn to another position within a few seconds, and then turn back to **0** immediately.

3 Get off the vehicle and lock the doors.

You can set the lighting duration of the home safety lights through the vehicle setting interface on the center display., please refer to the *CARS*(p. 71)


Electric headlight leveling

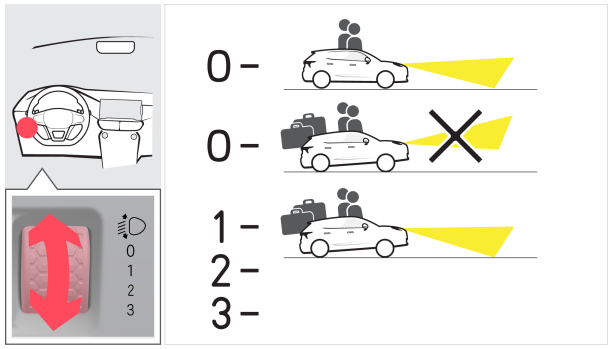


When there are occupants in the rear seats or the trunk is loaded with goods, the headlight beam may be raised. Turn the thumbwheel downward to adjust the beam to a proper height.

Auto activating/deactivating, front headlamp

The auto activating/deactivating feature of the front headlamps monitors the light intensity of the external environment via the rain and light sensor or the sun sensor. When the light is dim, this feature can turn on the low beam and the position lamps, and turn them off automatically when there is sufficient light.

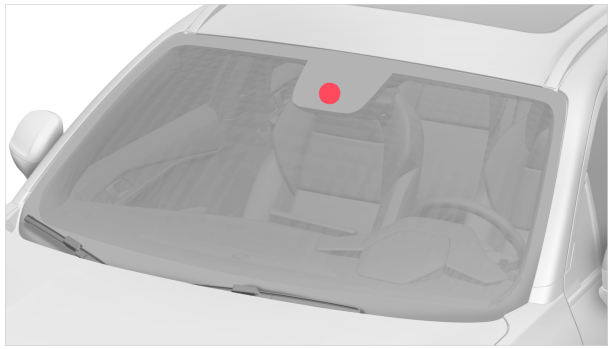

Rain and light sensor

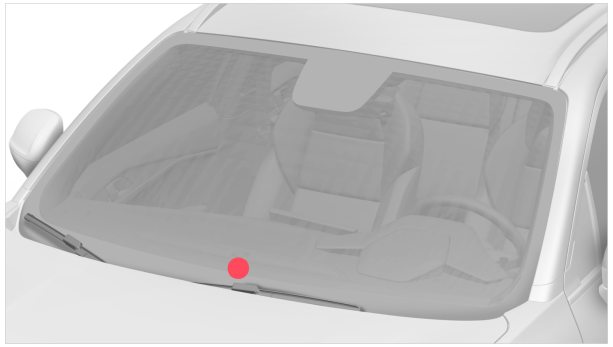

Sun sensor

⚠ Warning!

- The auto activating/deactivating feature of the front headlamps is only an auxiliary function. You are always responsible for driving safely and complying with current laws and traffic regulations.

! Caution!

- Do not block the rain and light sensor or sun sensor, otherwise the auto activating/deactivating feature of front headlamps may not function properly.
- In foggy or snowy weather, the auto activating/deactivating feature of the front headlamp may not work properly due to poor visibility.

Active high beam control (AHB-C)

AHB-C switches between high and low beams automatically by detecting the headlamps of oncoming vehicles or the taillights of the vehicle ahead.

When AHB-C is enabled, the on the instrument cluster illuminates in white. When AHB-C automatically turns on the high beam, the on the instrument cluster illuminates in blue. When AHB-C fails, the automatic high beam feature is protectively disabled. After AHB-C is disabled, the lighting mode is changed to low beam.

This feature is only active when all of the following conditions are met:

- The surrounding environment is in low light.
- The vehicle speed is higher than 40 km/h.
- The auto activating/deactivating feature of front headlamps is enabled and the low beam is turned on.
- When the thumbwheel is rotated to position, it will automatically reset to the **AUTO** position.

⚠ Warning!

- When the difference between light or dark is not sufficient (e.g. situation like fog and rain), AHB-C can not determine whether to turn on the headlamps or not.
- You are always responsible for manually switching between high and low beams according to traffic or weather conditions.

Limitations of active high beam control (AHB-C)

In the following situations, it may be necessary to switch between high and low beams manually:


- The use of windshield from second-hand market or non-genuine Lynk & Co windshield can have adverse effect on AHB-C.
- Driving in foggy or snowy weather.
- Driving on muddy and bumpy roads.
- Driving in areas with dim street lighting.

When AHB-C related fault message appears on the instrument cluster, it is suggested to contact a Lynk & Co Center for inspection.

Interior lighting

The vehicle is equipped with helpful and convenient interior lighting system. And if equipped with streaming mood light, you will have more helping lights and pleasant environment.

Light switches in overhead console

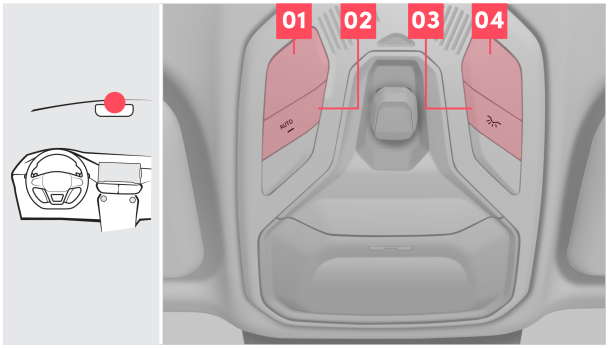

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

01 **Front left reading light switch**: Activate/deactivate the front left reading light.

02 **AUTO switch**: Activate/deactivate the auto function of front and rear reading lights.

03 **Front reading light switch**: Activate/deactivate the front reading light.

04 **Front right reading light switch**: Activate/deactivate the front right reading light.

Interior lights automatic functions


Press and release AUTO switch to activate/deactivate the auto function of front and rear reading lights. Meanwhile, the indicator on the button will illuminate.

Partial interior lights are turn on or off automatically as follows:

- Partial interior lights are turned on when the vehicle is unlocked or powered off;
- Partial interior lights are turned off when the vehicle is locked or started;
- Partial interior lights illuminate/go out when one of the side doors is opened or closed;
- Partial interior lights go out after all doors are closed when the vehicle is unlocked.

Reading lights

The front reading lights are located in the overhead console and the rear reading lights are located at rear side of the roof lining.

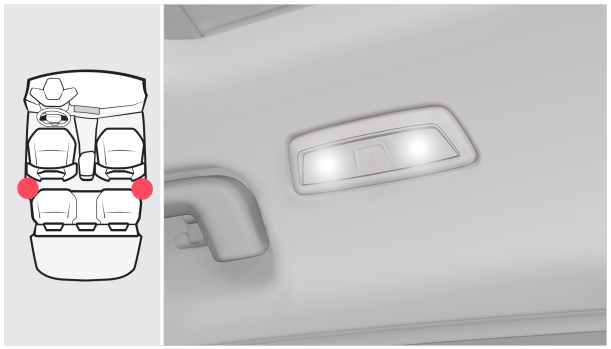


Rear reading light

Press and release the rear reading light panel to activate/ deactivate rear reading light.

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

Adjust light brightness

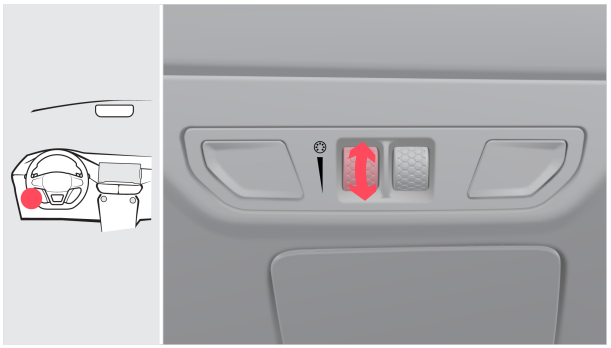

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

By rotating the dimmer can the brightness of instrument cluster and switch backlight be adjusted at the same time.

Note!

- At the lowest brightness, you may not feel the light.

Streaming ambient lights

The streaming mood lights are used to create a less dark and more pleasant environment when driving. You can control the ambient light by adjust it in the display setting interface on the central display , please refer to the *CARS*(p. 71).

Vanity mirror lights


The vanity mirror light is installed in the sun visor and it will be illuminated or go out when the cover is opened or closed.

Cargo compartment light

The trunk light illuminates or goes out automatically when the trunk is opened or closed.

Mirrors

Inside rearview mirrors

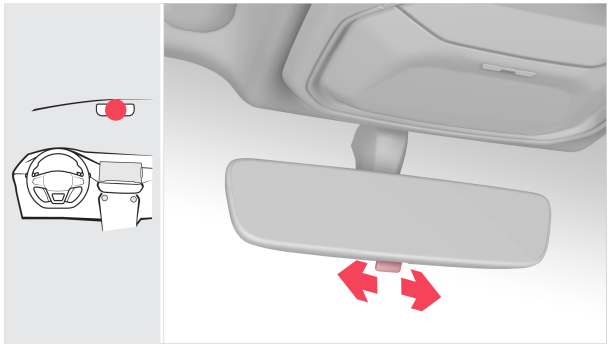

Manual dimming

When driving, the handle should be moved toward the vehicle head to the end. When there is a sharp light in the back of the car, the handle should be adjusted toward the tail of vehicle to the end to achieve the dimming function.


⚠ Warning!

Never adjust the inside rearview mirror while driving, otherwise you may lose control of your vehicle and cause an accident.


Power outside mirrors

You can adjust the outside mirrors using the mirror controls on the driver's side door.

1 Select **L** or **R** with the outside rearview mirror controls for the left or right outside rearview mirror correspondingly.

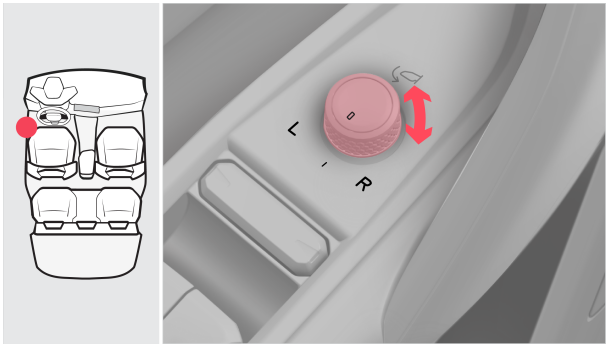

2 Adjust the angle (left, right, up, down) of the lens of the outside mirrors.

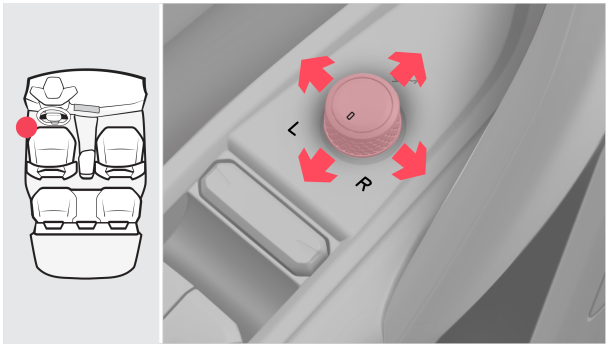

After adjustment, adjust the outside rearview mirror control button to the initial position.


⚠ Warning!

- Never drive a car with the outside rearview mirrors folded. This may reduce the rear vision area, thus leading to accidents.
- Objects seen in the outside rearview mirrors appear further away than they actually are. Adjust the seating position for driving before adjusting the outside mirrors.
- Do not adjust the outside rearview mirrors while driving. Otherwise, you may lose control of the vehicle, thus leading to accidents.
- Do not touch the outside rearview mirrors while they are moving, otherwise personnel injury and damage to the outside mirrors may occur.

Power folding/unfolding outside rearview mirrors

Folding the outside rearview mirrors

Set the mirror controls to the folding position, and the outside mirrors are folded.

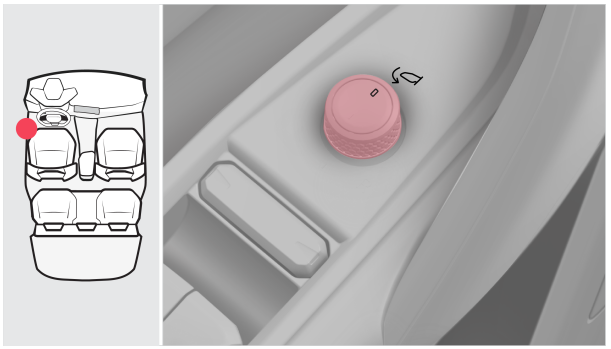

Unfolding the outside rearview mirrors

1 Set the mirror controls to other positions.

2 The outside rearview mirrors can be unfolded automatically.

Auto folding when locking the vehicle

The outside rearview mirrors will be folded automatically when you lock the vehicle and unfolded automatically when you unlock the vehicle.

You can also activate/deactivate the function of auto folding when locking the vehicle through the setting interface in the center display. , please refer to the *CARS*(p. 71).

Caution!

- When the temperature is too low, the outside rearview mirrors may temporarily lose their folding function due to ice formation, which is normal. Do not operate the outside rearview mirror controls at this time, otherwise the rearview mirrors may be damaged.


Note!

- After the vehicle is started, if the exterior rearview mirror is in a folded state, it will automatically open when the vehicle speed exceeds 15 km/h.

Wiper/washer

Front windshield wiper and washer

Front windshield wiper and washer

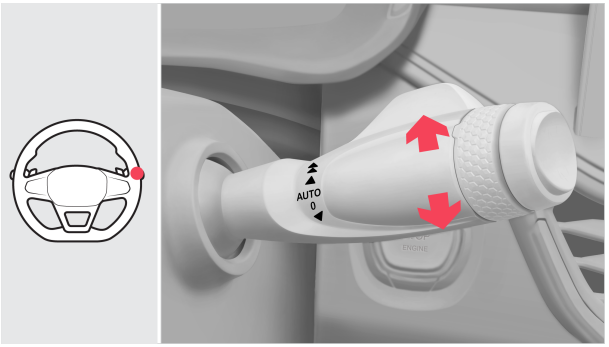

The INT and AUTO of front windshield wiper share the same position in the wiper lever

Single wiping

▼ Move the lever downward from the **0** position and wipe the windshield once.

Front windshield wipers off

0 Move the stalk to this position to switch off the windshield wipers.

Intermittent wiping

INT With the lever in this position, you can set the front windshield wiper interval by rotating the thumb wheel on the end of the lever up to increase the wiping speed or down to decrease the speed.

Auto wiping

AUTO Move the stalk to this position to use the auto wiping function.

Continuous wiping

▲ Move the lever to this position to make the front windshield wiper working at low speed.


▲▲ Move the lever to this position to make the front windshield wiper working high speed.

Caution!

- Before using the front windshield wipers, ice and snow should be removed from the windshield. Be sure the wiper blades are not frozen in place.
- The windshield should be thoroughly wet when the front windshield wipers are in operation. Otherwise, damage can occur to the front windshield wiper and the windshield.
- Check the blades regularly. Neglected maintenance can shorten the service life of the wiper blades.
- When the windshield is in a dry state, try to avoid using the front windshield wiper, otherwise it will scratch the glass and affect the service life of the wiper blade.
- If there is dust or leaves on the windshield, please clean it before using the windshield wiper, otherwise it will scratch the glass and affect the service life of the wiper blade.

Front windshield wiper with rain sensor

The vehicle equipped with rain & light sensor can automatically start the front windshield wipers depending on the intensity of the rainfall and adjust the wiping speed. The rain and light sensor is located in the windscreen.

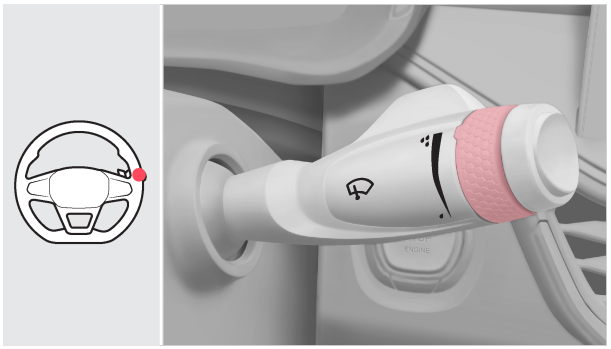

Adjust the wiping speed by rotating the thumbwheel on the end of the stalk

Rotate the thumbwheel on the end of the stalk up to increase the sensitivity or down to reduce the sensitivity.


Front wiper stop and slow down

When the vehicle stops while in motion, the front wiper will automatically reduce the wiper speed. You can turn it on/off through the central display , please refer to the *CARS*(p. 71).

Caution!

- Do not use the auto wiping function if there is any danger that the fluid will freeze on the windshield, otherwise your sight may be blocked.
- Deactivate the auto wiping function before activating the wiper blade service position or using an automatic car wash. Otherwise, damage could be caused by unexpected activation of front windshield wiper.

Windshield washers

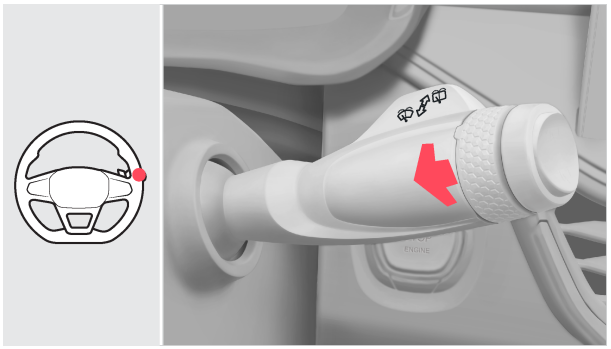


Push the right stalk along the steering wheel to start the front washer. The front windshield wipers will wipe several times.

Caution!

- Do not use the washers if there is any danger that the fluid will freeze on the windshield. Otherwise, your vision could be obscured.

Rear windscreen wiper and washer

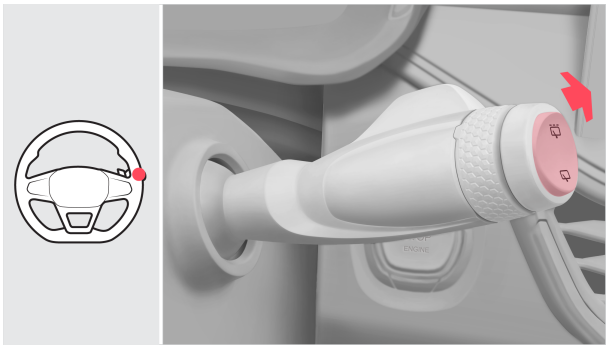

Press this button at the end of the right stalk for intermittent rear wiping.

Press this button at the end of the right stalk for continuous rear wiping.

Push the right stalk away from the steering wheel to start the rear washer.

Warning!

Before using the wipers, make sure that the ice and snow should be removed from the windshield. Be sure the wiper blades are not frozen in place.

ⓘ Note!

- The rear windshield should be thoroughly wet when the wiper is in operation. Otherwise, damage can occur to the wiper and glass.
- Check the blades regularly. Neglected maintenance can shorten the service life of the wiper blades.


Auto rear wiping when reversing

The rear windshield wiper automatically starts when the front wiper is activated and R gear is engaged. You can activate/ deactivate the rear windshield auto wiping function via the vehicle setting interface in the center display while reversing , please refer to the *CARS*(p. 71).

Windows and Sunroof

Power windows

The control panel on the driver's door can be used to open and close all the power windows in the vehicle, and to disable the controls for the passenger's power windows. When the controls for the passenger's power windows are not disabled, the passenger can use the control switch on the door to open and close the corresponding window.

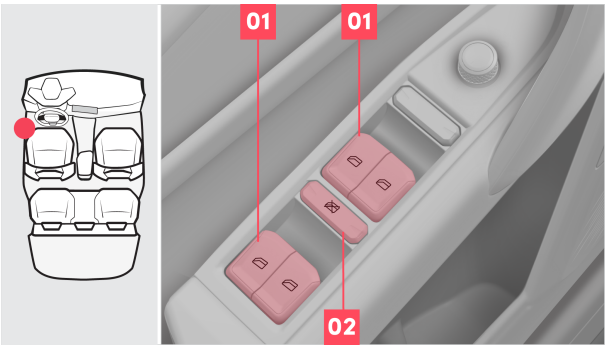

01 Power window switches

02 Window lock button (child protection)


⚠ Warning!

- Never leave children alone in the vehicle: they may operate the window buttons accidentally and be pinched, especially when unattended.

⚠ Warning!

- It is advised to switch on the window lock when there is a child in the vehicle. The driver is responsible for the operation of other passengers (especially the wrong operation of children), and shall guide other passengers to operate the windows correctly.

Power window switches

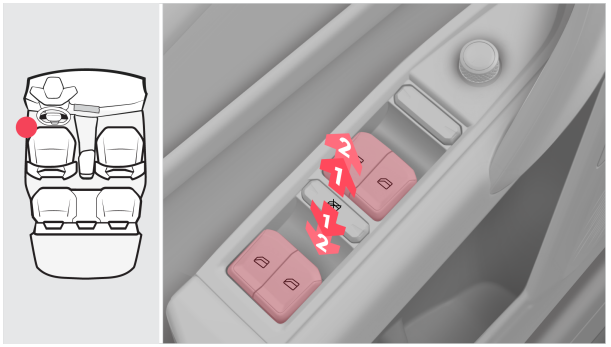

1 Manual up/down (pull/press to the first detent)

2 Auto up/down (pull/press fully)

Manual up/down

Lightly pull/press the switch to the first detent and hold. The power window closes/opens while the switch is being held.

Auto up/down

Fully pull/press the switch and release it. The window opens/closes completely when the switch is released.

Note!

- Operating the switch again stops the movement of the window.

Use the remote control key to open/close the windows

- Press and hold the unlock button on the remote control key to open the windows. Pressing the button again stops the window movement.
- You can enable the feature of auto window closing when locking in the vehicle setting interface on the center display. Then all the windows and the panorama sunroof will be closed at the same time when the lock button on the remote control key is pressed to lock the vehicle., please refer to the *CARS*(p. 71)
- When the feature of auto window closing when locking is disabled via the vehicle setting interface on the center display, you can press and hold the lock button on the remote control key to close all the windows and the panorama sunroof., please refer to the *CARS*(p. 71)

Warning!

- Do not use the remote control key to open/close the windows if the vehicle is outside of the field of your vision.


Window closing when raining

After the vehicle is locked, if a rain is detected by the rain sensor, the windows and the sunroof will be closed automatically.

One-touch ventilation

Lightly press any window control switch to the first detent and release immediately, to activate the one-touch ventilation function, and the corresponding power window will go down for a short distance.

Window lock button

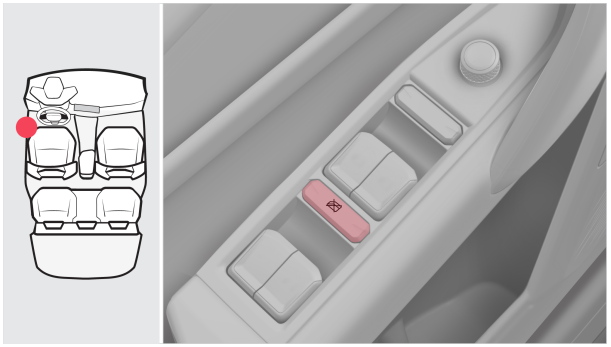

If there is a child in the vehicle, deactivate the controls for the passenger's power windows via the control panel on the driver's door for safety. In this way, the passenger's power windows cannot be operated with the control switches on corresponding doors.

Press the window lock button. The indicator in the button turns on to show that the windows on the passengers' side are deactivated.

Note!

- When the windows on the passengers' side are moving, they will stop moving immediately after the window lock button is pressed.

Anti-pinch function

The anti-pinch function is activated when the window is closed by automatic operation. If the window is obstructed while it is closing, it will be immediately opened.

Warning!

- Never leave children unattended in the vehicle. They may activate the window controls accidentally and be injured by a moving window.
- There is no anti-pinch protection when the window is almost closed.
- Make sure that all occupants have their hands, etc. inside the vehicle while the vehicle is in motion and before closing the windows.
- To ensure your safety and comfort when driving at high speed, close the windows before speeding up.

Window Initialization

The auto up/down function of the window will not operate properly if the battery has been temporarily disconnected or the vehicle software gets upgraded. If this happens, initialize the window with the window control switch on the door, as follows:

1 Switch the ignition on.

2 Pull the window switch up to close the window completely and continue to hold the switch up for an additional two seconds after the window is closed.

Caution!

- Initialization must be carried out to ensure that the anti-pinch function works properly and must be done for each window using the window controls on each door.

If the auto up/down function of the windows still fails to work normally after initialization, it is recommended to contact a Lynk & Co Center for inspection.

Panorama sunroof


You can use the controls on the overhead console to control the opening, closing and lifting of the panorama roof.

The panorama sunroof is provided with sun blind to provide protection in the strong sunlight.

⚠ Warning!

- Never allow a child to operate the panorama sunroof. Otherwise personal injury or death may result.
- Never leave children unattended in the vehicle. They may operate switches or controls accidentally, and personal injury may result.
- When opening or closing the panorama sunroof, the body parts near the panorama sunroof may be pinched, resulting in injury risk.

Wind deflector

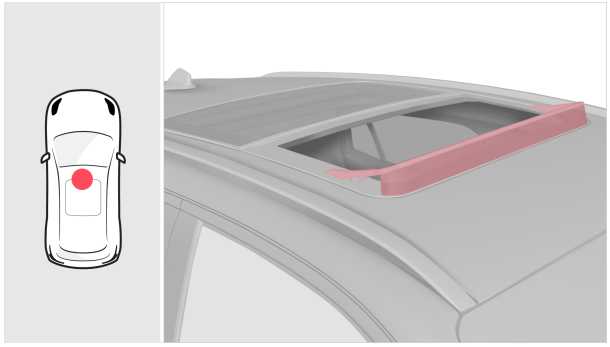


The wind deflector is raised automatically when the panorama sunroof is slid open. The wind deflector can block dusts and leaves, and disturb the airflow on the roof, thus reducing the noise when driving at high speed.

Open/close the panorama sunroof

Caution!

- Remove snow, ice or sand from the roof glass before opening.
- Do not allow anyone to stand up or extend any portion of their body out of the panorama sunroof while the vehicle is in motion or while the panorama sunroof is closing.
- Do not place any heavy objects on top of the sunroof.
- Remove the sand, rocks, leaves and other foreign matters in the panorama sunroof sliding rail in time to avoid jamming or failure to open and close normally during the panorama sunroof sliding process.

Set the ignition switch to mode I or above to operate panorama sunroof and sun blind

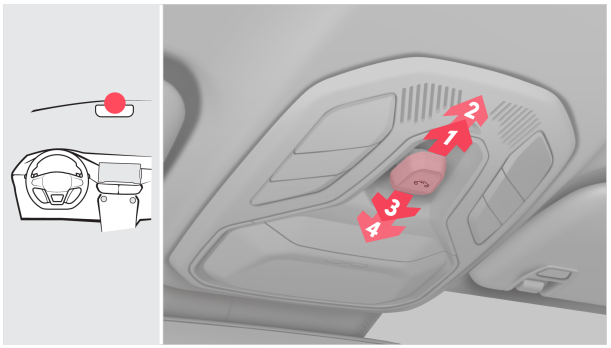

1 Slide open manually (press slightly to first stop position)

2 Slide open automatically (press as far as possible)

3 Slide closed manually (press slightly to first stop position)

4 Slide closed automatically (press as far as possible)

Manual sliding

1 Pull the control towards the rear of vehicle to the first stop position and hold it until the sun curtain is fully open.

2 Pull the control towards the rear of vehicle to the first stop position again and hold it until the panorama sunroof opens to the desired position.

Perform the above steps in reverse order to close the panorama sunroof/sun curtain in turn - move the control towards the front of the vehicle and hold until the panorama sunroof/sun curtain reaches the closed position.

ⓘ Note!

To open manually, the sun curtain must be fully open before the panorama sunroof can be opened. To close manually, make sure the panorama sunroof is fully closed before closing the sun curtain.

Auto sliding

1 Pull the control towards the rear of the vehicle to the limit position, and then release it. The sun blind moves automatically to the fully open position.

2 Pull the control towards the rear of the vehicle to the limit position again, and then release it. The panorama sunroof moves to the fully open position. The panorama sunroof stops if the control is operated again.

Repeat the above steps in the opposite direction to close the panorama sunroof/sun visor in turn - pull the control towards the front of the vehicle and release it.

Rapid sliding open/close


The panorama sunroof and sun curtain can be opened/closed simultaneously.

Slide open - Pull the control towards the rear of vehicle twice in quick succession and release it.

Slide close - Pull the control towards the front of vehicle twice in quick succession and release it.

The panorama sunroof/sun curtain moves to the fully open or closed position. The panorama sunroof/sun curtain stops if the control is operated again.

Tilting up the panorama sunroof

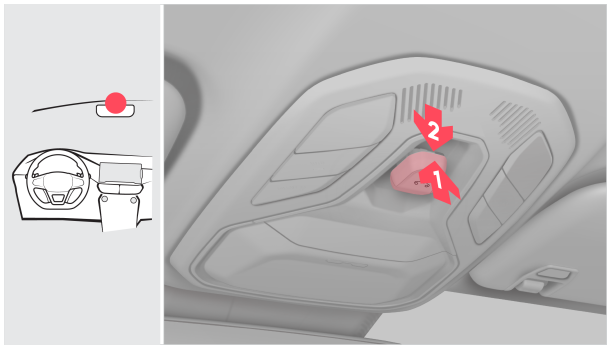

1 Tilt up the panorama sunroof by pressing the rear edge of the control upward.

2 Tilt down by pulling the rear edge of the control downward/ forward.

If the sun blind is fully closed when the tilt position is selected, it will move to open for approx. 50 mm.

Close using the remote control key

You can open/close the panoramic skylight with the remote key , please refer to the *Power windows*(p. 104).

⚠ Warning!

If the vehicle is not in your line of sight, do not use the remote key to open/close the sunroof.

Anti-pinch function

If the panorama sunroof or the sun curtain is suddenly blocked during closing, it will stop and move slightly in the opposite direction and stop.

When being closed from the tilt position, if the panorama sunroof is suddenly blocked, it will return to the tilt position.

⚠ Warning!

It is forbidden to extend any body parts, such as head, hand, out of the windows and panorama sunroof, otherwise, serious personal injury or death may result.

ⓘ Note!

The anti-pinch function is only effective during automatic sliding.

Climate

Climate overview

The climate system provides heating, dehumidification and ventilation and also cools and purifies the air inside the vehicle.

You can control all climate system functions by operating icons in the climate interface on the central display or buttons on the climate control panel.

You can activate/deactivate the climate ECO mode by tapping the **ECO button** on the climate interface of the center display.

⚠ Warning!

- For safety reasons, it is important that all the windows are kept free of ice, snow and condensation. These could result in poor visibility, thereby leading to accidents.
- Make sure that the view from the window glass is clear before starting.


! Caution!

- When the climate system is turned off, the air circulation will also be off, which may lead to fogging on the windows and affect your field of view.
- All windows should be closed for the climate system to work optimally.
- Clear snow, ice or blockages from the air inlet in front of the windshield to improve the operation of climate system.
- The use of climate system will increase the fuel consumption of the vehicle.

ⓘ Note!

- The climate system can be used to remove mist from the inside of the windows.
- The cooling and heating function only takes effect when the vehicle is started.

Manual climate

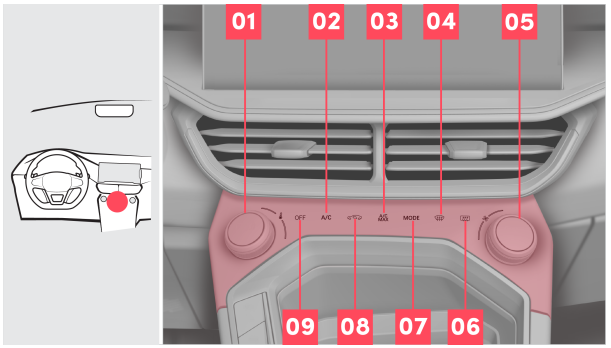

Manual climate control panel

01 Left knob (temperature adjust)

02 A/C button (air conditioning and cooling button)

03 Max cooling button

04 Windshield defrost button

05 Right knob (fan speed adjust)


06 Rear windshield defrost button

07 Blow mode button

08 Recirculation button

09 OFF button

Left knob (temperature adjust)

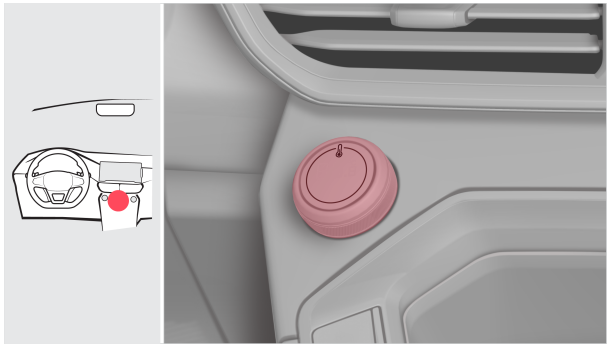

Manual climate control panel

You can set the climate temperature by turning the knob.

A/C button (air conditioning and cooling button)

You can turn on the climate system for cooling by clicking this button. Click this button again to deactivate the cooling function of the climate system.

Max cooling button

You can activate the max cooling function by clicking on the max cooling button. When the max cooling function is turned on, the internal circulation is turned on at the same time, and the logo on maximum cooling button and the internal circulation symbol are illuminated. At this time, the temperature set by the climate system is at the lowest, the air volume is the largest, and the blow mode is the blowing to face.


Note!

- The max cooling function can only be enabled after the vehicle is started.

Windshield defrost button

Click the windshield defrost button to remove ice or fog from the windshield and side windows quickly. Click this button to enable maximum defrosting. The indicator on the button illuminates when the function is activated.

Right knob (fan speed adjust)

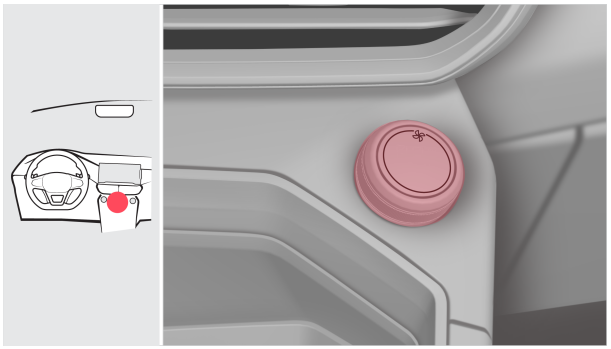

Manual climate control panel

You can adjust the air volume by turning the knob. The air volume can be adjusted by 8 levels (1 to 8). The central display shows the adjusted air volume at the same time.

Rear windshield defrost button

Click the rear windshield defrost button to activate the rear windshield defroster. The indicator on the button will be illuminated. It starts to defrost the rear windshield and the outside rearview mirrors.

Blow mode button

Click the blow mode button to switch among 5 modes: blowing to face, blowing to foot/blowing to face, blowing to foot, blowing to foot/blowing to window and blowing to window.

Recirculation button

You can switch between internal and external circulation of air by clicking the recirculation button. When the vehicle is in internal circulation, the internal ad external circulation indicator is illuminated, and air circulates inside the vehicle. This helps to quickly cool the air in the car or prevent outside air and peculiar smell from entering the car.

⚠ Warning!


- Do not use the internal circulation for a long time as it may lead to fogging of the windows as well as a decrease in the oxygen concentration and a rise in the carbon dioxide concentration in the vehicle.

! Caution!

Activate internal circulation when:

- Driving on a dusty road.
- To prevent traffic fumes from entering the passenger compartment.
- For better cooling when using the climate system.

Auto climate

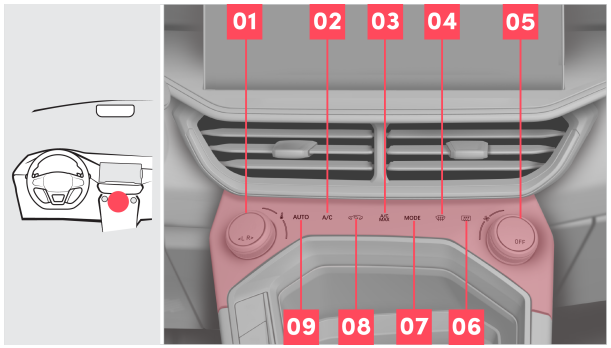

Auto climate control panel

01 Temperature adjust knob/bi-zone switch button

02 A/C button (air conditioning and cooling button)

03 Max cooling button

04 Windshield defrost button

05 Air volume adjust knob/OFF button


06 Rear windshield defrost button

07 Blow mode button

08 Recirculation button

09 AUTO button(Auto mode)

Temperature adjust knob/bi-zone switch button

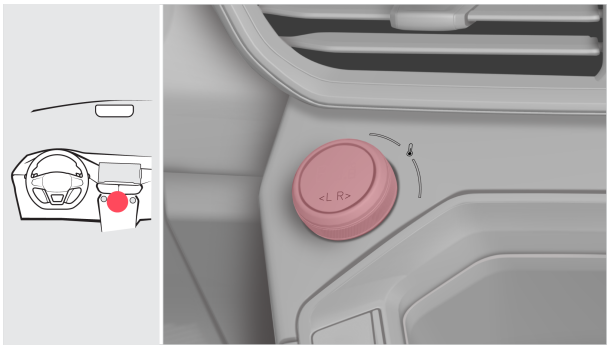

You can press the bi-zone switch button to switch among the three states of R, L and LR, and rotate the temperature adjust knob in the above three states to adjust the temperature on the front passenger side, or the driver side or both the driver and the front passenger side.

A/C button (air conditioning and cooling button)

You can turn on the climate system for cooling by clicking this button. Click this button again to deactivate the cooling function of the climate system.

Max cooling button


You can activate the maximum cooling function by tapping the max cooling button, and corresponding icon is illuminated. At this time, the temperature set by the climate system is at the lowest and

the air volume is at the maximum. The blow mode is switched to face blow.

Windshield defrost button

Click the windshield defrost button to remove ice or fog from the windshield and side windows quickly. Click this button to enable maximum defrosting. The indicator on the button illuminates when the function is activated.

Air volume adjust knob/OFF button

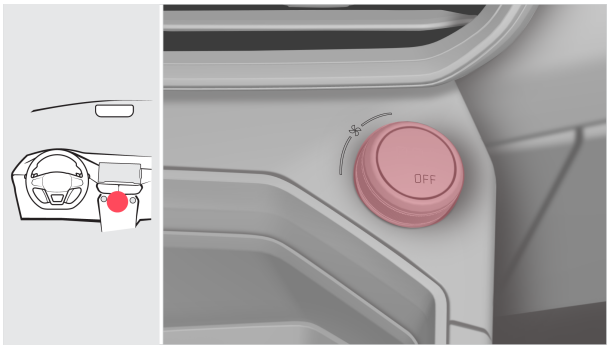

You can adjust the air volume by turning the knob. The air volume can be adjusted by 8 levels (1 to 8). The central display shows the adjusted air volume at the same time.

When the climate system is in the auto mode, you can control the air volume through the central display, which can be divided into three modes: mute, comfort, and strong. Normal air volume is provided with the comfort mode. When the mute mode is set, the air volume is reduced to reduce noise. When set to the strong mode, the air volume increases generally to adjust to the temperature you set more quickly.

You can turn off the climate system by pressing the OFF button.

Rear windshield defrost button

Click the rear windshield defrost button to activate the rear windshield defroster. The indicator on the button will be illuminated. It starts to defrost the rear window and the door mirrors.

Blow mode button

Click the blow mode button to switch among 7 modes: blowing to face, defrosting/blowing to face, blowing to face/blowing to foot/defrosting, blowing to foot/blowing to face, blowing to foot, blowing to foot/defrosting and defrosting.

Recirculation button

You can switch between internal and external circulation of air by clicking the recirculation button. When the vehicle is in internal circulation, the internal ad external circulation indicator is illuminated, and air circulates inside the vehicle. This helps to quickly cool the air in the car or prevent outside air and peculiar smell from entering the car.

⚠ Warning!

Do not use the internal circulation for a long time as it may lead to fogging of the windows as well as a decrease in the oxygen concentration and a rise in the carbon dioxide concentration in the vehicle.

Caution!

Activate internal circulation when:

- Driving on a dusty road.
- To prevent odors from entering the passenger compartment.
- For better cooling when using the climate system.

Note!

- In the auto mode, when internal circulation is set for a period of time to ensure fresh air in the car, the climate system will perform some external circulation within a short period of time and then switch to internal circulation.

AUTO button(Auto mode)

The automatic control of the climate system enables you to set your desired temperature for the interior of the vehicle. The airflow temperature, distribution and blower speed are then controlled by the vehicle to maintain your desired temperature.


You can activate/deactivate the auto mode of the climate system by clicking the AUTO button.

Note!


The auto mode will deactivate if one of the following occurs:

- Maximum defrosting is activated.
- Maximum cooling is activated.
- Click the blow mode button to change the blowing mode.
- The air volume is adjusted manually.
- Deactivate the climate cooling function.

Auto-controlled climate sensor

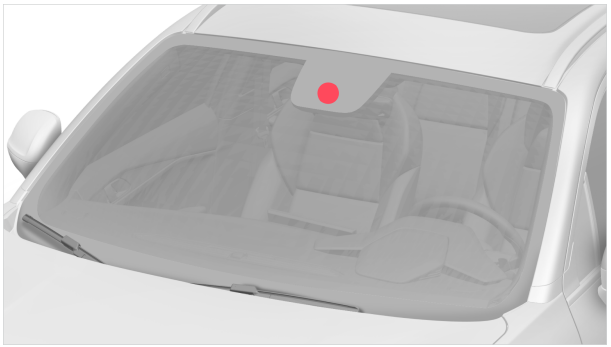

Rain light sensor(TYPE I)

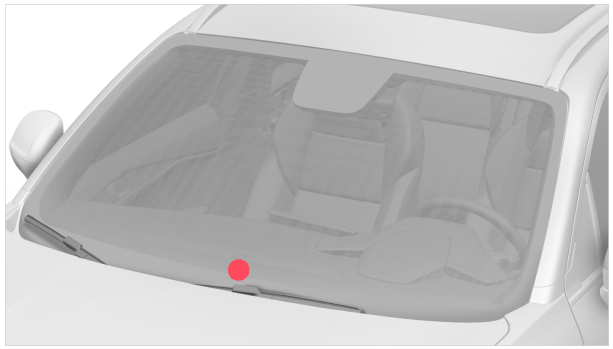

Solar sensor (TYPE II)

ⓘ Note!

- Do not block the rain light sensor or solar sensor, otherwise the comfort control of the auto-controlled climate system may be affected.

Air distribution

Outside air enters the vehicle through defroster vents, outlets of instrument panel and footwell outlets on the floor. Air distribution is automatically controlled when the auto climate control is in automatic (AUTO) mode (2- zone auto climate control system only).



Airflow at defroster vents: towards windscreen and front windows.




Airflow at outlets of instrument panel: towards the occupants' faces.



Airflow at footwell outlets on the floor: towards the occupants' feet.


Opening/closing the air vents

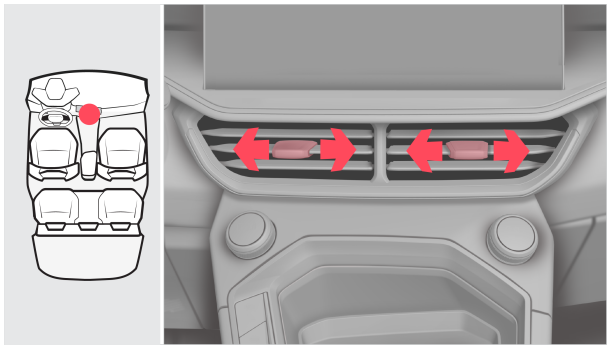

Air vents in the middle of instrument panel

Center left outlet of instrument panel: Adjust to the far right to close the outlet, adjust to the left to open the outlet.


Center right outlet of instrument panel: Adjust to the far left to close the outlet, adjust to the right to open the outlet.

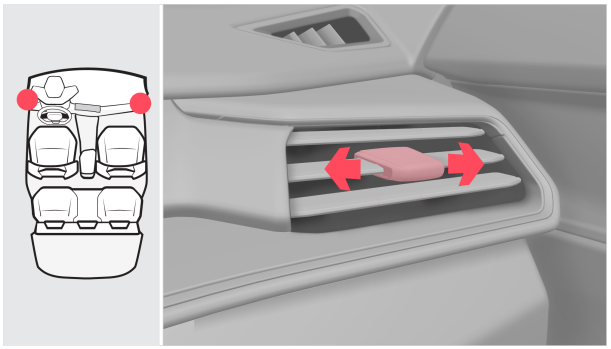

Air vents at both sides of instrument panel

Left outlet of instrument panel: adjust the control board to the far right to close the outlet and adjust to the left to open the outlet.

Right outlet of instrument panel: adjust the control board to the far left to close the outlet and adjust to the right to open the outlet.

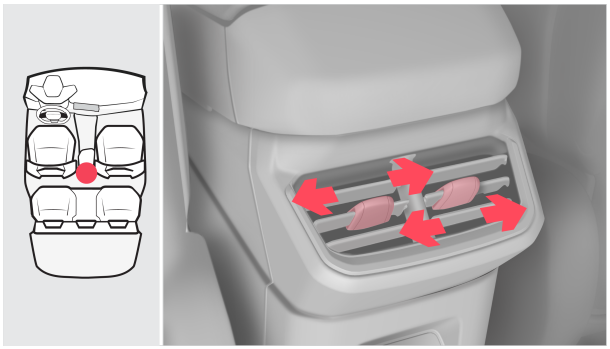

Air vents at rear tunnel console


Left outlet of rear tunnel console: Adjust to the far left to close the outlet, adjust to the right to open the outlet.

Right outlet of rear tunnel console: Adjust to the far right to close the outlet, adjust to the left to open the outlet.


⚠ Warning!

The air from the vents may be supercooled or overheated. Do not get near the air vents, or personal injury may occur.


Adjusting the air vents

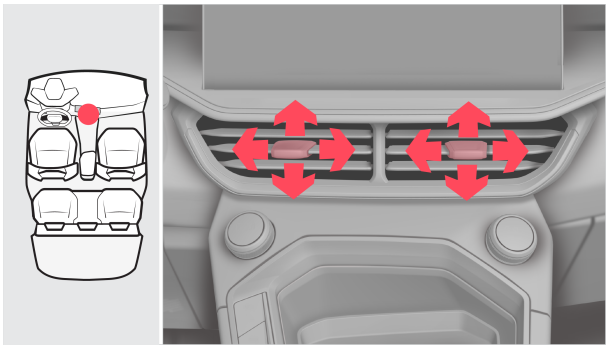

Air vents in the middle of instrument panel

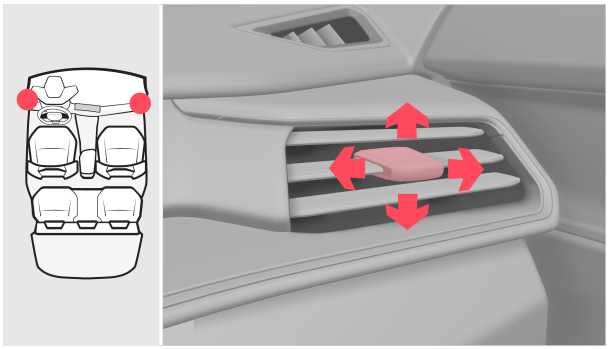

Air vents at both sides of instrument panel

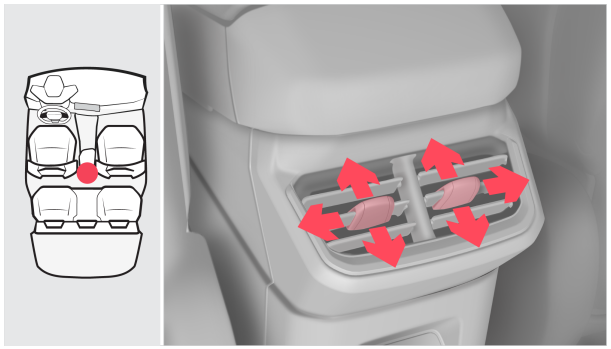

Air vents at rear tunnel console

Move the lever to the up, down or left/right to adjust the air flow direction.

Note!

The air flow directions can be controlled separately by the occupants on the left and right sides of the rear seats.

Clean zone air quality system

The function of clean zone air quality system is to clean the air inside passenger compartment and remove pollutants before anyone enters the vehicle.

The function is activated by pressing the button on the remote control key and deactivated after a door has been opened or the function will time-out after a period.

Note!

- After the clean zone air quality system is activated, you may hear noise from the air conditioning blower running at high speed, which is normal.

Air quality system

The (AQS) consists of a multi-filter, a control unit and an air quality sensor. The filter can remove fine dust particles and adsorb odors in the intake air, thereby reducing the amounts of odors and contaminants entering the vehicle.


The air quality sensor can monitor the content of pollutants such as nitrogen oxides and carbon monoxide in the air outside the vehicle. When the air quality sensor detects that the content of pollutants in the outside air reaches a certain level, the air intake closes and the air inside the passenger compartment is recirculated to avoid high pollution.

Note!

- You can activate/deactivate the AQS function by tapping the **AQS button** on the climate setting interface of the center display.

Power outlets/Multimedia devices

Using power outlets

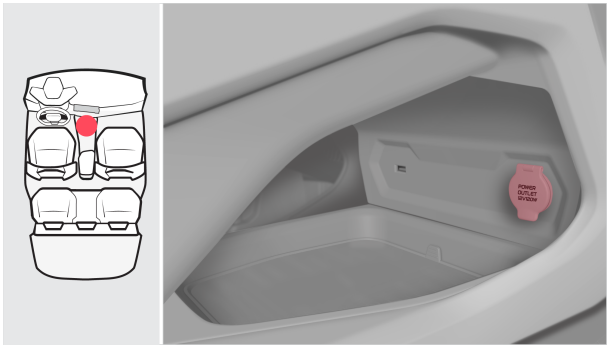

Power outlet in the front tunnel console

The power outlet supplies power to electrical accessories such as music players, cooler boxes and mobile telephones.

⚠ Warning!


- Do not use electrical accessories with rating higher than 12 V or 120 W.
- Do not put a finger or a foreign object (pen, etc.) into the power outlet and do not touch with a wet hand. You may get an electric shock.
- When not in use, be sure to close the cap. Do not allow water or any other liquids in contact with the power outlet.
- Do not drop metal objects into the socket, otherwise the socket will be short-circuited, resulting in equipment damage and/or personal injury.

! Caution!

- Do not connect devices with large or heavy plugs that could become loose while driving.
- Do not use devices that can cause interference with the vehicle's radio receiver or electrical system.
- Connected devices can retain heat when charging. Be aware so that it does not harm people or property.


Using USBs

USB interface of front tunnel console

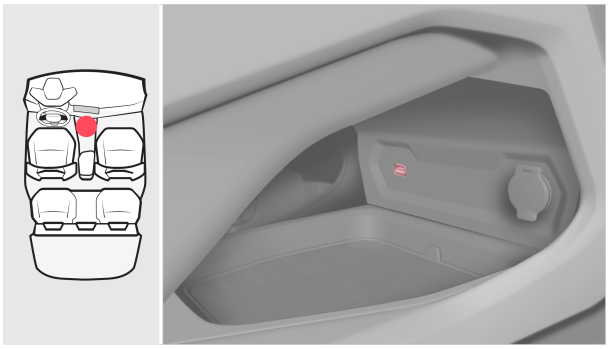


USB ports are arranged at the storage box under the front tunnel console. They are used for data transfer and charging mobile devices.

USBs in front armrest storage box

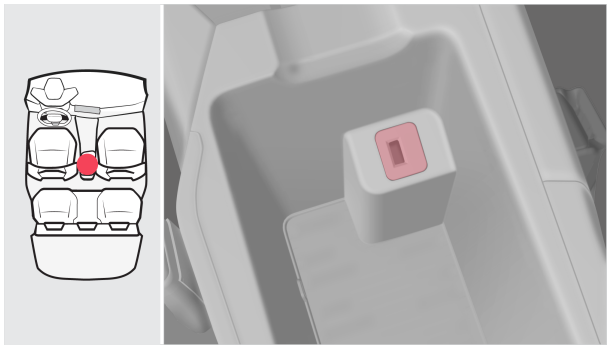

USB interface is set in the armrest box of front tunnel console. They are used for data transfer and charging mobile devices.

USB ports for rear passengers

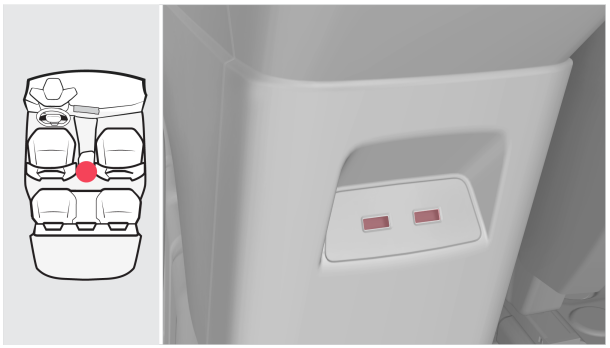


The two USB ports for rear passengers are located in the rear tunnel console. They are designed to charge mobile devices (phones, tablets) only.

Caution!

The output voltage is 5 V and the rated output current is 2.1 A. Do not connect devices such as fans or lights to these USB ports.

USB ports on roof

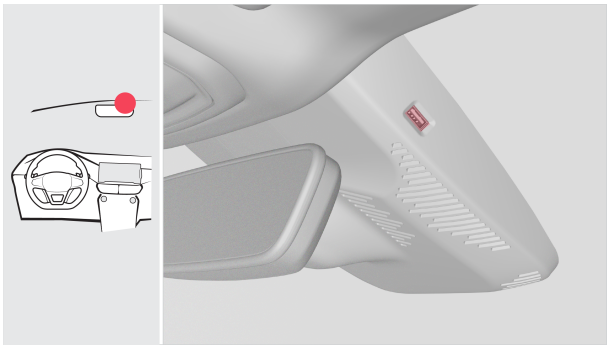

Note!

Depending on the different vehicle configurations, the position of USB ports may be different, and the pictures are for illustration only, please refer to the actual vehicle.

This USB port is located in the headliner of the roof at the front passenger side. It is specially designed for supplying power to rear mounted drive video recorder.

Caution!


Do not use excessive force when plugging a connector into the USB port.

Interior device of vehicle

Interior storage spaces

The following storage spaces are available in the passenger compartment.

Front seats compartment

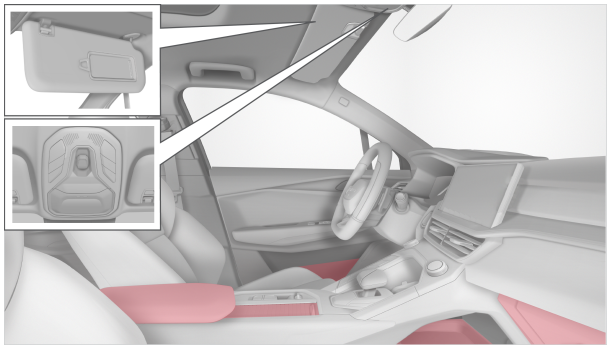

- Ticket/card holder on the sun visors
- Glove box
- Door storage space
- Glasses box, driver's side
- Front tunnel console
- Front armrest


⚠ Warning!

- The cup holders for the front seats are located at the front tunnel console. Drive carefully when the cup holder is used. Hot liquid can cause personal injury.

! Caution!

- Do not forcefully push improper containers into the cup holder, otherwise damage may result.

Rear seat compartments

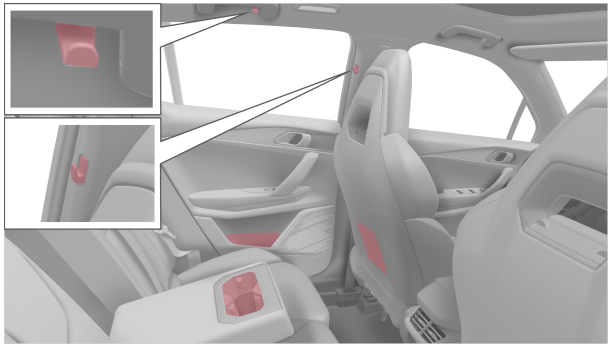


- Storage pocket behind the front seat backrest
- Door storage space
- Cupholder of the rear armrest
- Clothes hood

⚠ Warning!

- Keep loose objects in the glove compartment or other storage spaces. You should make sure that the object is fixed in place, otherwise it may cause personal injury to the occupants in the vehicle in case of emergency braking or collision.

Front tunnel console storage spaces

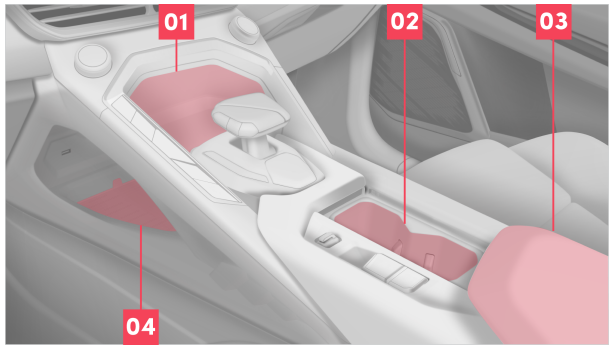

01 Front tunnel console storage box

02 Cup holders

03 Storage compartment

04 Storage board/wireless phone charging board


⚠ Warning!

- The cup holders for the front seats are located at the front tunnel console. Drive carefully when the cup holder is used. Hot liquid can cause personal injury.
- Do not use hard ceramic cups, glasses or other containers of fragile materials, otherwise personal injury may occur in case of traffic accident.

! Caution!

- Do not forcefully push improper containers into the cup holder, otherwise damage may result.

Using the front armrest

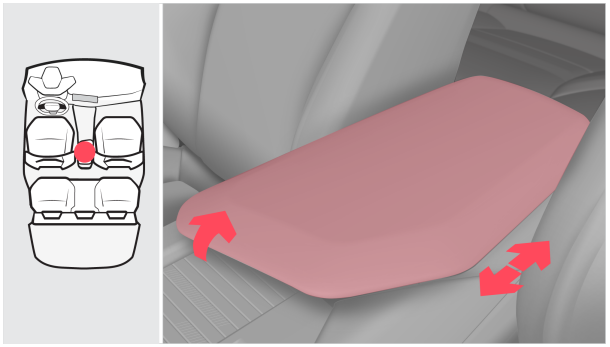


- Lift up the armrest as indicated.

- When the armrest is closed, you can adjust it back and forth to the right position.

To close it:

Press armrest down until it engages into place.

Using the rear middle armrest and cup holder

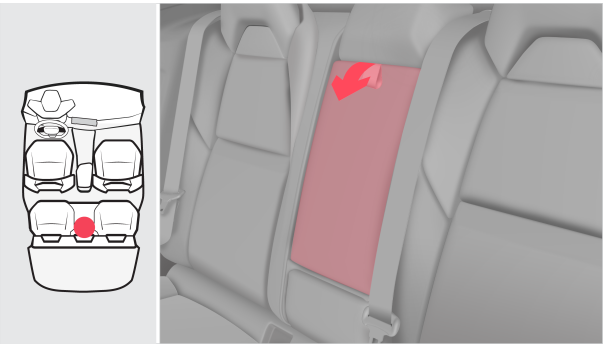

Pull the armrest forward and fold it down to use.

⚠ Warning!

- Do not put any hot drinks in the cup holder while the vehicle is moving. Personal injury may occur if the hot liquid is spilled.
- The rear center seat is not equipped with ISOFIX anchors. Do not place the child seat on the rear center seat, otherwise personal injury or death may be caused.
- Do not use hard ceramic cups, glasses or other containers of fragile materials, otherwise personal injury may occur in case of traffic accident.

! Caution!

- Do not forcefully push improper containers into the cup holder, otherwise damage may result.


Using sun visor and vanity mirrors

The sun visors protect you from sun glare while driving.

Using the sun visor


1 Unfold the sun visor down.

2 If the sunlight enters through a side window, you can disengage the sun visor and rotate it to the side.

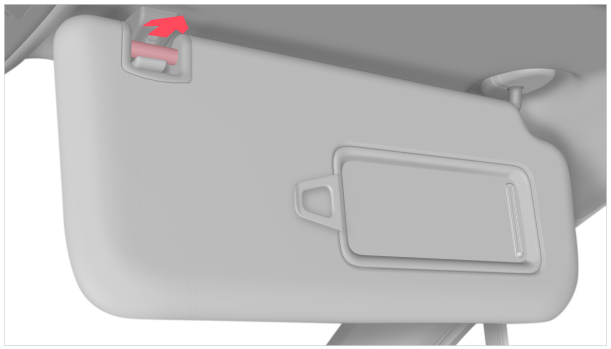

Release the sun visor.

Using the vanity mirror

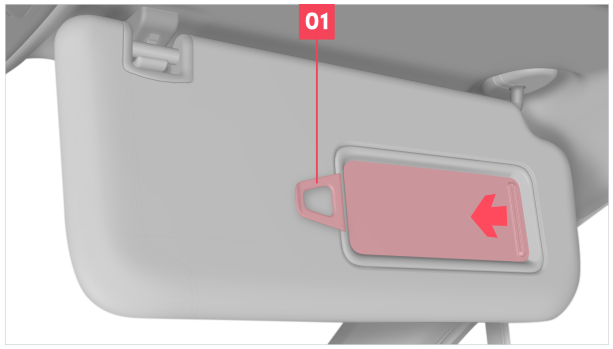

01 Card/ticket holder

Slide open the cover as indicated.

⚠ Warning!

When the vehicle is running, close the vanity mirror in the sun visor, otherwise the reflected light may cause accidents or personal injury.

ⓘ Note!

If the vanity mirror light is available, it will be illuminated when you slide open the cover.

STARTING AND DRIVING

Driving the vehicle

Driving requirements

Drivers must have a driver's license before they can drive on the road.


⚠ Warning!

- Do not drive under the influence of alcohol or drugs, do not drive when you are tired, and do not drive too fast. Please observe the road speed limit warning.
- Do not let yourself be distracted by passengers or by using electronic devices.
- The brake pedal should be installed properly so it can be depressed fully.
- Do not place any items in the driver's foot position, otherwise, moving items during driving may hinder the movement of pedals or jam the pedals that have been depressed.
- Be sure to fix the foot pad firmly as required to ensure sufficient pedal travel. Never use loose foot pads or stack them together.
- Wearing inappropriate shoes may hinder the correct use of the pedals, such as: pantshoes, high-heels and slippers. Please wear appropriate footwear to ensure proper use of pedals.
- Before driving, make sure that the occupants of the vehicle fasten their seatbelts and adjust their seat positions.
- Do not adjust the position of the display screen, steering wheel, seats, inside and outside rearview mirrors during driving, otherwise the vehicle may lose control.
- It is strictly forbidden for all passengers to extend their arms, heads or other parts of the body out of the car during driving.
- If you hear a change in the sound of the exhaust or you drive over something that strikes the underside of the vehicle, have the exhaust system checked by a Lynk & Co Center.
- In rainy and snowy days or after passing through areas with such as accumulated water, silt and mud, the braking effect may be weakened due to damp brake disc and brake friction lining. After washing the car or after the vehicle is wading,

depress the brake pedal lightly for several times to dry the brake.

Driving vehicles should abide by local laws and regulations and designated traffic regulations, always keep safe driving in mind.

Ignition mode

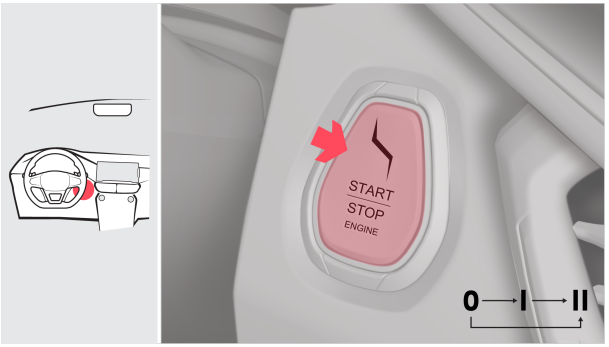

Note!

The pictures are only for illustration, please refer to the actual vehicle.

Different electrical systems are used in different modes and different functions are available in each mode.

Without depressing the brake pedal, the ignition mode will change as follows:

1 Ignition mode 0: Unlock the vehicle and open the driver door. A certain number of electrical functions can be used in this mode within a limited time period.

2 Ignition mode I: With the remote key detected, press and release the START/STOP ENGINE to change to mode I from 0. Certain convenience functions work, such as the center display.

3 Ignition mode II: With the remote key detected, press and release the START/STOP ENGINE to change to mode II from I. Both headlights and fog lights can be used. The system performs a self-test in seconds; most electrical equipment can be used in this mode.

Caution!

- If the electric equipment is still used after the engine is shut down, the battery power will be consumed. If the battery is discharged, the vehicle can not be started.
- After vehicle flameout, if the ignition switch is in Ignition mode I or Ignition mode II and the shift lever is in P gear, the ignition switch will automatically switch to Ignition mode 0 after 30 minutes to avoid excessive battery power consumption.

Starting

⚠ Warning!

Strictly follow the precautions mentioned below to help avoid accidents:

- Before starting the vehicle, check to make sure that the seat, steering wheel and outside rearview mirrors are adjusted to a safe and comfortable position.
- Before starting the vehicle, please check whether the brake pedal can be depressed fully.
- Start the vehicle according to local environmental laws and regulations.
- Please check whether the surrounding environment meets the conditions for starting the vehicle, and do not start the vehicle if not.
- Do not start the vehicle with combustible materials under it, otherwise it may catch fire due to contact with high temperature exhaust parts.
- If the engine has not reached the operating temperature, please avoid the engine at high speed and full throttle, otherwise the engine may be damaged.
- Do not take the remote control key out of the vehicle or use the START/STOP ENGINE button when the vehicle is in motion, as this may shut down the engine.
- The exhaust system or engine parts may be too hot. If there are any inflammables nearby, these high temperature parts may cause fire. Please check regularly before driving to ensure that no inflammable foreign matter enters the engine compartment or the exhaust system.

Start the vehicle via the START/STOP ENGINE button

1 Carry the remote control key into the car.


ⓘ Note!

The engine can only be started if a correctly coded remote control key is detected in the car.

2 Shift the gear lever to P position.

3 Press down the brake pedal fully.

4 Press the START/STOP ENGINE button and release to start the vehicle.

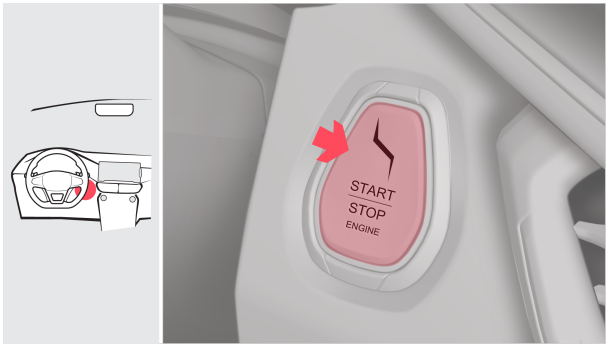

START/STOP ENGINE button


ⓘ Note!

The pictures are for illustration only, please refer to the actual vehicle.

Emergency vehicle start

If the key battery is low and cannot be detected, the message pops up in the instrument cluster to remind you no key detected. Follow the following steps to start the vehicle:

1 Put the remote control key into the key sensing area at the bottom of the central armrest storage box.

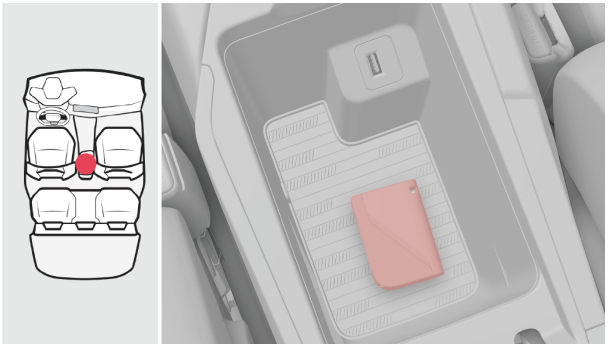

2 Follow the previously explained procedure to start the vehicle.

Caution!


If you fail to start the vehicle after several attempts, do not keep trying, as this may damage the engine. Contact a Lynk & Co Center for inspection.

The vehicle is switched off

Warning!

The engine must not be shut down until the vehicle has completely stopped.

1 Make sure the vehicle is stationary.
2 Please shift the gear lever to P position.
3 Activate EPB.
4 Press the START/STOP ENGINE button to switch off the vehicle.

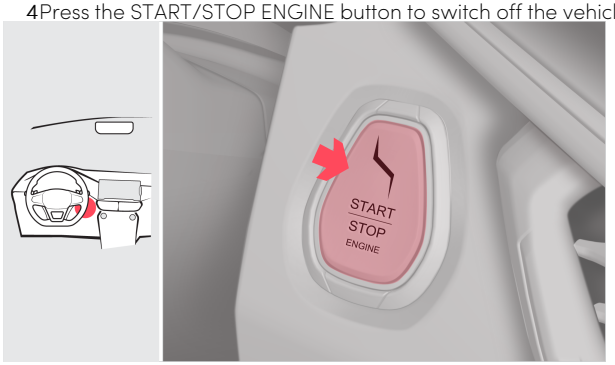

START/STOP ENGINE Button

⚠ Warning!

- Do not park on combustible materials. If there are inflammable materials under the vehicle body, they may catch fire by exposure to the exhaust and high temperature parts.
- Do not leave children or animals unattended in the car. Carry the remote control key and lock the vehicle when leaving the vehicle.

Alcohol interlock

An alcohol interlock can be used to ensure that individuals under the influence of alcohol are prevented from driving the car. Before the car can be started, the driver must perform a breath test.

To install an alcohol interlock device, contact a Lynk & Co Center or an approved service partner.

ⓘ Note!

- The alcohol interlock is an aid, and it does not exempt the driver from responsibility. It is always the driver's responsibility to be sober and to drive safely.

Use the alcohol interlock

To activate the alcohol interlock:

1 Sit down in the driver's seat.

2 Depress the brake pedal.

3 A notification is shown on the driver display when the alcohol interlock is ready for use.

4 Breathe into the alcohol interlock according to the alcohol interlock manufacturer's instructions.

5 The test result is shown on the driver display.

It is not possible to drive the car if the alcohol interlock detects breath alcohol over the limit of local regulations where the interlock was installed.

The alcohol test is valid until the car is turned off and the driver door is opened.

Driving modes

Driving modes

There are three modes to choose from, including ECO, Comfort and Sport modes. Under different driving modes, the handling performance and ride comfort of the vehicle are also different. You can choose a driving mode based on factors such as personal needs and specific road conditions.

ECO

ECO mode: when driving forward, upshift in advance and downshift with delay automatically, which can effectively reduce the engine speed and obtain better fuel economy.

Comfort

Comfort mode: This mode is the default mode. The vehicle is always in comfort mode when it starts or if another drive mode can no longer be used in a certain situation. Driving experience is more comfortable and less steering force is required.

Sport

Sport mode: This mode helps to enhance the maneuverability and driveability experience, so you can enjoy driving. This increase in sporty characteristics is accompanied by a reduction in power assistance and a increase in vehicle acceleration for the steering and more immediate steering response.

Intelligent


Intelligent mode: In this mode, the system will automatically match the appropriate driving mode based on the driver's operating habits.

ⓘ Note!

You can set the instrument panel to follow the driving mode linkage on the central display screen, please refer to the *Display* (p. 75).

- After activating the linkage between the instrument panel and the driving mode, the theme of the instrument panel changes with the driving mode.
- After turning off the linkage between the instrument panel and the driving mode, the background color of the instrument panel changes with the driving mode.

Using the drive mode lever to select a drive mode

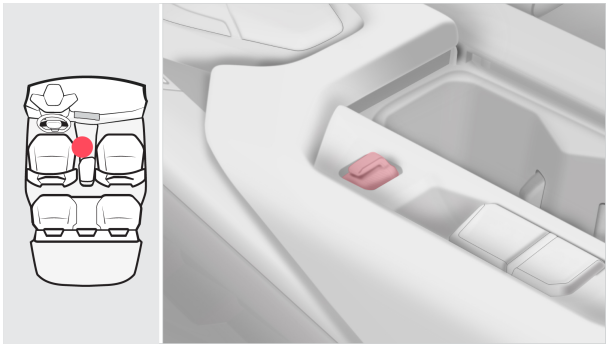

Drive modes lever


You can switch among different drive modes circularly by pulling backward the drive mode lever in the front tunnel console. Vehicle characteristics change accordingly with the selected drive mode.

Transmission

AT

Automatic transmission can improve driving convenience. The automatic transmission also has a manual mode that allows you to shift gears manually. The gear shift indicator in the instrument cluster indicates the current gear mode.

Gear modes

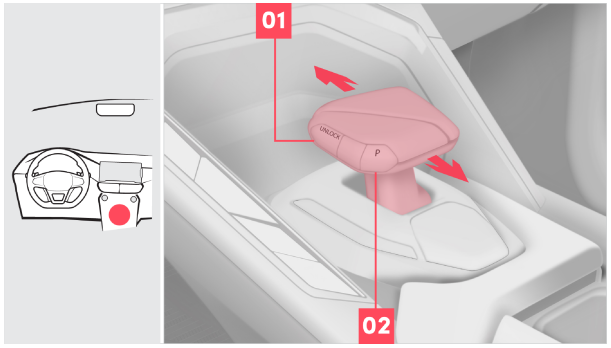

Gear lever operation


Note!

The pictures are only for illustration, please refer to the actual vehicle.

01 Shift unlock button

02 P gear button

The gear lever can be operated to shift into different gears: reverse gear (R), neutral (N), forward gear (D), and enable manual shift mode (M).

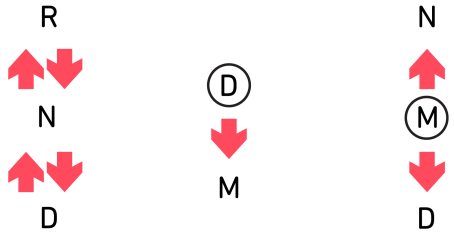

Selecting gear modes

Shift between the following gears as follows: R, N and D.

- **D-N**: Push the shift lever toward the front of vehicle once.
- **N-D**: Depress the brake pedal and push the shift lever toward the rear of vehicle once.
- **N-R**: Depress the brake pedal, press the gear unlock button (located on the left side of the shift lever handle), and push the shift lever toward the front of vehicle once.
- **R-N**: Push the shift lever toward the rear of vehicle once.

- **R-D**: Depress the brake pedal and push the shift lever toward the rear of vehicle twice.
- **D-R**: Depress the brake pedal, press the gear unlock button, and push the shift lever toward the front of vehicle twice.

Press the P gear button (located on the left side of the gear lever handle) to activate the P gear. Press the gear unlock button, depress the brake pedal and push the gear lever toward the front/ rear of vehicle once to deactivate the P gear.

Manual shift (M) mode can only be selected from D gear position. Press the unlock button, and push the shift lever toward the rear of vehicle twice until M gear is enaged.

⚠ Warning!

- Do not shift the gear lever to P when the vehicle is moving. Otherwise, the transmission may be damaged and the vehicle may lose control.
- Do not shift the gear lever to R when the vehicle moves forward. Otherwise, the transmission may be damaged and the vehicle may lose control.
- Do not shift the gear lever to the D position when the vehicle moves backwards. Otherwise, the transmission may be damaged and the vehicle may lose control.

Park - P

Press the P gear button to engage the P gear. P gear is used to stop or start the engine.

⚠ Warning!

- When parking, EPB shall be used in addition to the P gear.
- When the P gear function fails, a warning message will be displayed in the instrument cluster to remind the driver.
- If the engine is switched off, an audible signal sounds to remind you to select P if you open a door.

⚠ Warning!

If the engine is running, P will be activated automatically when all of the following occur:

- The vehicle is stationary.
- The driver's door is open.
- The driver's seatbelt is released.
- No pedals are depressed.

Caution!

- Only when the vehicle is stationary can the parking gear (P) be engaged, otherwise the transmission will be damaged.
- The engine can only be started when the electronic gear lever is in P or N position.

Reverse - R

You can reverse the car by shifting into the R gear. Always stop the vehicle completely before shifting to R.

Neutral - N

No gear is engaged when neutral is selected and no power is transmitted from the engine to the driving wheels, and the engine cannot assist in braking. The engine can be started when the transmission is in N.

⚠ Warning!

When the vehicle is going downhill, the electronic gear lever must not be placed in N, otherwise the engine braking effect cannot be used to assist the service brake.

Drive - D

Normal driving gear (automatic transmission). When accelerating/ decelerating in this gear, the transmission can shift gears automatically. The vehicle must be stationary when the gear lever is moved from R to D.

Kickdown

For smooth shifting and engine performance, the transmission downshifts automatically if the vehicle's speed becomes too low for the selected gear.

To help avoid excessive engine speed that might cause engine damage, the transmission control module has a downshift protection feature that in some situations may prevent a downshift or kickdown. During kickdown, the transmission may shiftdown by one or more gears, depending on the engine's speed. And it will shift up automatically when maximum engine speed is reached for a specific gear.

Gear shift indicator

The gear shift indicator in the instrument cluster illuminates R (Reverse), N (Neutral), D (Drive), P (Park) or M (Manual) according to the currently selected gear.

In the manual gear shift mode, shifting gears at the right time can realize significant fuel savings. The gear shift indicator shows the currently selected gear. If no gear shifting is performed when the vehicle speed is high or low enough, an symbol will be displayed on the instrument cluster.

▲ Shifting up

▼ Shifting down

Shift lock

Shift lock is an safety feature of automatic transmission. It ensures the gear lever can only be shifted between N or P position when the brake pedal is depressed and the ignition is in mode II.

Engage the P gear before leaving the vehicle. However, if the engine is shut down:

- P will be deactivated automatically while gear is in R or D.
- The reminding message Shift to P displays while the gear is in N.

Manual shift mode

You can select the manual shift mode with the gear lever.

Note!

The gear shift can be carried out with the shift paddle.

Select the manual shift mode with the gear lever

Press the unlock button in D gear, push the gear lever towards the rear of the vehicle twice to switch to the manual shift mode. An M appears in the instrument cluster to indicate manual gear shifting mode is currently selected.

The transmission may downshift automatically if engine speed (rpm) is too low. This helps prevent engine damage.

To exit the manual shift mode:

Push the shift lever towards the front of the vehicle, and it can be shifted from M to N, and push the shift lever towards the rear of the vehicle, and it can be shifted from M to D.

Kickdown

For smooth shifting and engine performance, the transmission downshifts automatically if the vehicle's speed becomes too low for the selected gear.

To help avoid excessive engine speed that might cause engine damage, the transmission control module has a downshift protection feature that in some situations may prevent a downshift or kickdown. During kickdown, the transmission may shiftdown by one or more gears, depending on the engine's speed. And it will shift up automatically when maximum engine speed is reached for a specific gear.

Gear shift indicator

The gear shift indicator in the instrument cluster illuminates R (Reverse), N (Neutral), D (Drive), P (Park) or M (Manual) according to the currently selected gear.

In the manual gear shift mode, shifting gears at the right time can realize significant fuel savings. The gear shift indicator shows the currently selected gear. If no gear shifting is performed when the vehicle speed is high or low enough, an symbol will be displayed on the instrument cluster.

⬆ Shifting up

⬇ Shifting down


Gear shift paddle

You can also enter the temporary manual shift mode and upshift or downshift through the shift paddle.

Activating the gear shift paddle on steering wheel

- When the transmission is in the manual shift mode (M), the gear shift paddle can be used to upshift or downshift.
- When the transmission is in D gear, turn one of the gear shift paddles toward the steering wheel, and the temporary manual shift mode will be activated. The corresponding gear position is displayed on the instrument cluster.

Select the manual shift mode with the shift paddle

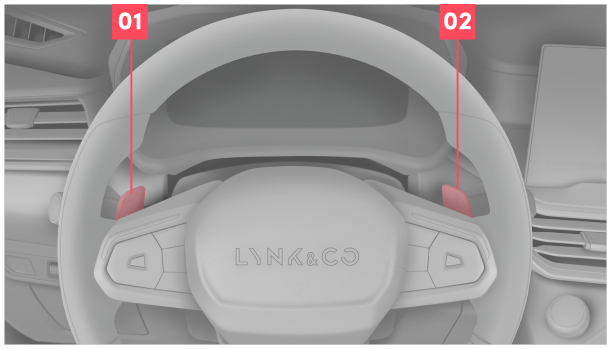

Steering wheel gear shift paddle

01 Decrease the speed

02 Increase the speed

Note!

The pictures are only for illustration, please refer to the actual vehicle.

The operation of the gear shift paddle is as follows:

- Move the paddle + and release to shift up by one gear.
- Move the paddle - and release to shift down by one gear.

Note!

When you use the shift paddle for shifting, pay attention to whether the vehicle speed meets the shift requirements.

The transmission may downshift automatically if engine speed (rpm) is too low. This helps prevent engine damage.

To exit the manual shift mode:

- Move the paddle + and hold for a few seconds.
- No action for a period of time after entering the temporary manual shift mode.


Note!

The steering wheel gear shift paddle cannot be deactivated if engine braking is in progress.

Auto start/Stop

Intelligent Start & Stop

You can turn on/off the intelligent start stop function on the central display screen interface, please refer to the *CARS*(p. 71)

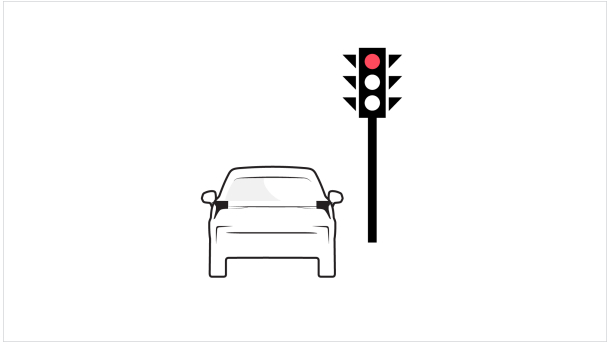

Traffic light intersection

The intelligent start/stop system may shut down the engine automatically if the vehicle is stopped under such conditions as traffic jam or in stop-and-go traffic, and restart the engine when you release the brake pedal.

The intelligent start/stop system is designed to reduce fuel consumption and emissions. This function makes sure that fuel is only used when your vehicle is actually driving by temporarily shutting down the engine.

The intelligent start/stop system is available only after the engine has already been started. It is enabled with a normal engine start if certain requirements are fulfilled.

Caution!

Always disable the intelligent start/stop function before driving through water. Engine damage can occur if water enters the air filter during the engine auto restart.

Auto stop function

When the intelligent start/stop is activated, you can realize the auto stop function in the following ways.

1 Keep the brake pedal depressed.
2 The engine stops automatically.

Limitations of automatic stop function

The engine does not stop automatically if one of following conditions occurs:

- The vehicle has not reached a sufficient speed after several consecutive auto stops.
- Your seatbelt is unfastened.
- The battery power is below the minimum permissible level.
- The battery's temperature is below or above the permitted limit.
- The engine is not at normal operating temperature.
- The ambient temperature is too low or to too high.

- The environment in the passenger compartment deviates from the set values.

Automatic start function

The intelligent start/stop system can be activated when the engine is started normally.

When the intelligent start/stop is activated, you can realize the auto start function in the following ways.

1 If EPB is disabled, release the brake pedal.
If EPB is enabled, release the brake pedal and depress the accelerator pedal slightly.

2 The engine starts again automatically.

Limitations of automatic start function

If any of the following situations occur, the engine will not automatically start again after an automatic stop：

- You haven't fastened your seat belt properly。
- Shift the gear lever into P gear。
- Driver's side door open。

Brake systems

Brake system

The brake systems consist of foot brake and EPB, where the foot brake is used to reduce the speed and EPB is used to prevent the vehicle from moving when stopped and start smoothly. In addition to EPB, the vehicle is also equipped with Auto Hold. When Auto Hold is enabled and when the vehicle is stationary at a traffic light or on a slope, the vehicle is hold automatically without requiring you to depress the brake pedal. The brake is released automatically to assist the driver start smoothly.

ⓘ Note!

If the operating conditions (e.g. unfastening the seat belt or opening the driver's door, etc. after the brake pedal is released) are not met, the Auto Hold function will be exited and EPB will be activated automatically.

The brake pad wear indicator induces a high frequency squeal noise when the brake pad is getting to the minimum safe thickness.

If you hear a consistent high frequency squeal noise while braking or freewheeling, and also the noise does not disappear, stop the vehicle at a safe place, check the brake pad and contact a Lynk & Co Center.

⚠ Warning!

- The braking performance can be significantly reduced after the brake pad reaches the wear limit. In that case, replace the brake pad as soon as possible.
- After washing the car or after the vehicle is wading, depress the brake pedal lightly for several times to dry the brake. Otherwise, the braking performance may be reduced by water immersion, which may lead to personal injury in case of emergency.
- On long downhill roads, please reduce the speed and shift into lower gear. In this way, the braking effect of the engine can be fully utilized to reduce the load on the brakes. If auxiliary braking is necessary, do not depress the brake pedal all the time, but intermittently, to prevent the brake components from being worn and overheated. Otherwise, the braking performance may be reduced, which may lead to personal injury in case of emergency.

Foot brake

The foot brakes are assisted by vacuum pressure, which is only generated when the engine is running.

⚠ Warning!

- If the engine is shut down while the vehicle is in motion, the vacuum pressure for the brakes will not work. You need to put more pressure on the brake pedal.
- Do not place foot on the brake pedal while driving. Failure to follow this can cause wear and overheating of the brake parts and prolong the braking distance.

Symbol in instrument cluster



If this symbol remains illuminated, it indicates that the brake fluid level is too low. Stop the vehicle in a safe place immediately and contact a Lynk & Co Center.


Emergency brake warming lights(EBL)

When the vehicle speed exceeds a certain number and the deceleration speed exceeds a certain limit, the direction indicators on both sides will also automatically flash to remind the driver of the rear vehicle and prevent rear-end collision.

Electric Parking Brake (EPB)

You can use EPB to keep the vehicle stationary.

Electric parking brake (EPB) manual apply

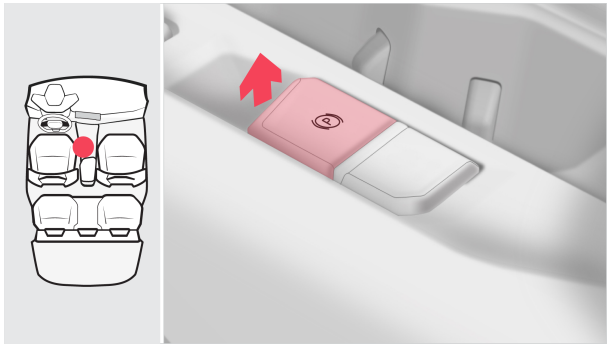

Enable EPB manually

With the ignition switched on and the vehicle stationary:

1 EPB switch is pulled up.

2 Release the brake pedal.

EPB auto apply

When the vehicle shuts down at a speed lower than 2 km/h, EPB is automatically applied.

Note!

When the EPB function is enabled, the EPB switch indicator and the parking brake indicator on the instrument cluster turn on.

Disable EPB auto apply

If the EPB auto apply function is not required (such as using some types of automatic washing equipment), you can press and hold the EPB switch until the ignition is turned off, then the EPB is in the released state, and the EPB will not be applied automatically.

Manual emergency brake

In an emergency, pulling the EPB switch can activate the brake when the vehicle is in motion. After the EPB switch is released, the brake is released.

Warning!

During the normal driving, please use the foot brake and never use the EPB brake, otherwise, accidents or personal injury or death may occur.

Symbol in instrument cluster




The symbol illuminates when the EPB is applied.



If this symbol is illuminated continuously, the EPB system has failed.

EPB manual release

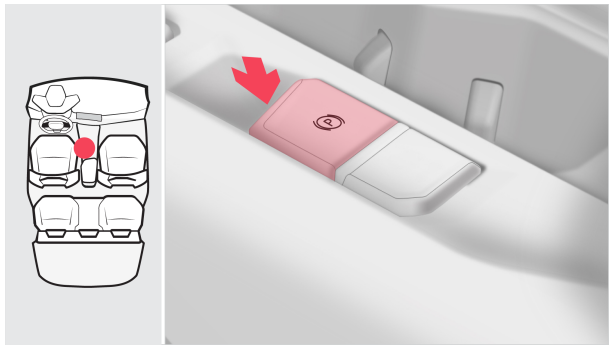

Release EPB manually

With the ignition switched on and the vehicle stationary:

1 Depress the brake pedal.
2 Press the EPB switch.
3 Release the brake pedal.

EPB auto release

With the driver's door closed and the seat belt buckled:

1 Depress the brake pedal.
2 Start the vehicle and release the brake pedal.
3 The gear lever is shifted to D or R position.
4 Depress the accelerator pedal.

EPB is automatically released and the corresponding indicator on the instrument cluster turns off.

Auto Hold


When Auto Hold is switched on, the vehicle will be hold automatically if it comes to a stop. If the operating conditions (e.g. unfastening the seat belt or opening the driver's door, etc. after the brake pedal is released) are not met, the Auto Hold function will be exited and EPB will be activated automatically.

Auto hold function keeps the vehicle stationary when it stops at an intersection or in stop-and-go traffic. This can relieve you from keeping on the brake pedal. As soon as you depress the accelerator pedal, the brakes are released.

⚠ Warning!

When Auto Hold is activated, it is not possible to keep the vehicle stationary under any circumstances (such as on a slippery or snowy surface), and you are always obliged to drive safely.

Turn on Auto Hold

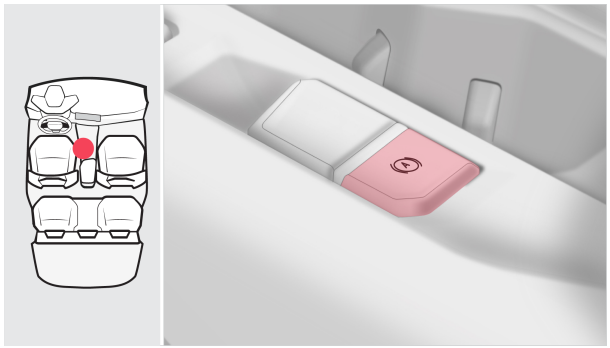

Auto Hold button

The Auto Hold function is turned on when the following conditions are met:

- The vehicle is started.
- The driver's door is closed.
- Fasten your seatbelt.
- Press the Auto Hold button and the Auto Hold button indicator turns on.

Turn off Auto Hold

The Auto Hold function is turned off when any of the following conditions occur:

- The vehicle is switched off.
- The driver's door is opened.
- Press the Auto Hold button and the Auto Hold button indicator turns off.
- Unfasten your seatbelt.

Enable Auto Hold

After starting the vehicle, the Auto Hold function is turned on. During driving, depress the brake pedal until the vehicle is stopped completely. After releasing the brake pedal, the Auto Hold function is enabled and the vehicle remains stationary.

Symbol in instrument cluster



This indicator turns on when the Auto Hold function is enabled. The brakes keep the vehicle stationary when it has stopped.



The indicator illuminates when EPB is used to keep the vehicle stationary.

Fuel and emissions

Refueling



The symbol in the instrument cluster is illuminated when the fuel level gets low. Refuel as soon as possible with fuel of the recommended grade. The arrow indicates the side of the vehicle where the fuel filler flap is located.

⚠ Warning!

Please observe the following warnings and precautions before refueling the vehicle, otherwise vehicle damage or personal injury or death may occur.

- Be sure to extinguish all smoking items and open flames, and avoid sparks or smoking during refueling.
- Power off the vehicle before refueling. Do not attempt to start the vehicle during refueling.
- Before touching the refueling gun, always touch another metal part of the vehicle away from the fuel filler neck, refueling gun or other fuel source, to discharge the existing electrostatic buildup. This prevents the electrostatic buildup from creating sparks and igniting fuel vapors.

⚠ Warning!

Always avoid inhaling fuel vapor and getting fuel splashes on your skin or in your eyes. Keep fuel away from children. If you or others come into contact with fuel, observe the following:

- If fuel comes into contact with the skin, wash away immediately.
- If fuel spills into your eyes, wash them thoroughly with clean water, remove contact lenses immediately (if worn), and seek medical assistance immediately.
- If fuel spills on clothes, please take off the contaminated clothes immediately.

⚠ Warning!

Please observe the following warnings and precautions in the process of refueling the vehicle, otherwise vehicle damage or personal injury or death may occur.

- Do not use your mobile phone when refueling. The phone signal can cause electrostatic buildup and ignite fuel vapors.
- Remove the fuel filler cap slowly. If a hissing sound is heard, wait until this stops before completely removing the cap. In hot weather, pressurized fuel may spray out the filler neck and cause injury.
- Insert the refueling gun into the fuel filler neck securely when refueling.
- It is strictly forbidden to start the vehicle until the refueling is completed, and the fuel filler cap and fuel filler flap are securely closed.
- Stop filling the tank after the fuel nozzle automatically clicks off.
- Do not overfill the fuel tank. When the fuel tank is overfilled, the pressure of the fuel tank will lead to oil leakage, fuel splash and even fire.

Caution!


- Fuel spillage must be prevented, otherwise, it may damage the paint on the surface of the vehicle.
- Fuel is highly flammable. If you handle fuel incorrectly, there is a risk of fire and explosion.
- Always refuel with unleaded fuel so as not to damage the catalytic converter.

Note!

Under normal circumstances, the fuel pipes do not need to be replaced during the service life.

Refueling

1 Press on the rear part of the fuel filler flap to open.

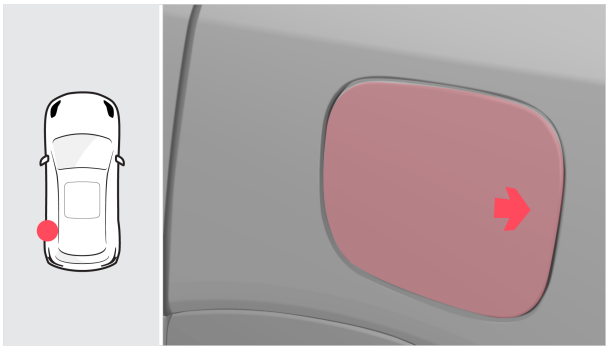


Fuel filler flap

Note!


Before opening the fuel filler flap, the vehicle shall be unlocked. If the vehicle is locked, press the unlock button on the remote control key or unlock the vehicle by other means.

2 Turn the fuel filler cap counterclockwise as indicated to open it slowly.

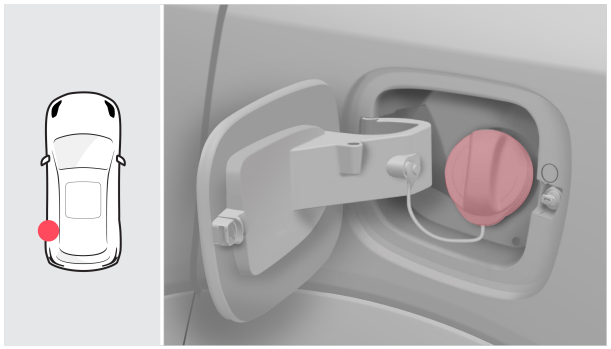

Fuel filler cap

3Place the fuel filler cap on the fuel filler flap as shown.

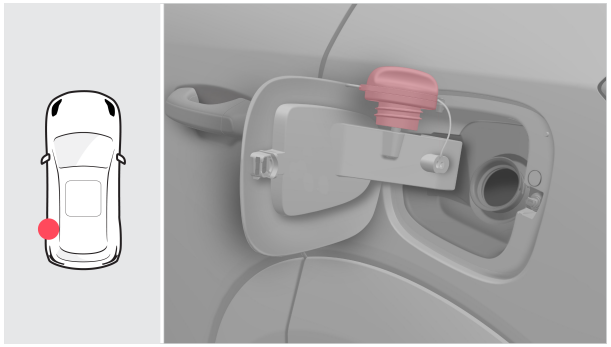

4Fill with the correct fuel .

Caution!

When refueling, please insert the refueling gun into the filler completely to prevent the fuel from leaking out.

5Close the fuel filler flap by turning it clockwise until clicking sounds are heard.

6Close the fuel filler flap until it is correctly back in position.

Vehicle emissions

The Euro VI emission level is fulfilled when the Lynk & Co vehicles levels the factory. your vehicle's emission level can consult Lynk & Co Center for assistance.

gasoline particulate filter

- Some models is equipped with a gasoline particulate filter (GPF), which can filter the exhaust gas to capture particulates and reduce pollutant emissions.
- When the GPF is full, the GPF status indicator in the instrument cluster illuminates to warn that GPF needs to be inspected or repaired. Please contact a lynk & Co Center for consultation and treatment as soon as possible.

Warning!

- When the vehicle is parked in a narrow space such as a garage and the engine is not shut down, do not close the garage door to avoid serious personal injury or even death caused by inhaling excessive exhaust gases.
- Make sure the exhaust system does not leak.

Drive assistance system

Drive assistance systems

The vehicle is equipped with a number of drive assistance systems. Some of these systems are standard, some are optional, and may not be suitable for your vehicle.

Support provided by the drive assistance system includes: help you maintain a set speed or a set distance to a vehicle ahead, or warn you of a potential collision situation. If necessary, active braking may be activated by some systems. Certain optional systems can also assist in parking in proper situations.


⚠ Warning!

- The drive assistance system is an auxiliary function for the driver, and it cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- It is advisable to read through all the information related to drive assistance systems.

Driver assistance system sensors

The windshield camera can detect lane markers, traffic signs, and vehicles and pedestrians ahead.

Windshield camera, driver assistance system

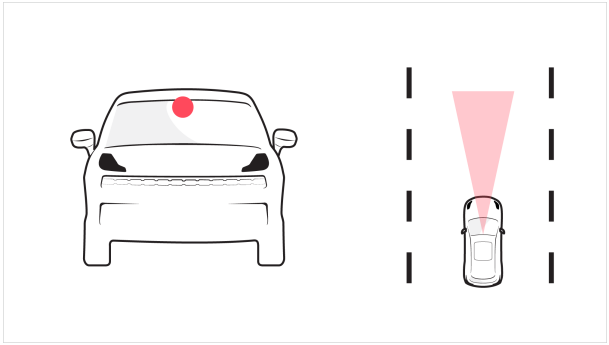

Lynk & Co recommends the use of only genuine Lynk & Co windshields. After the windshield has been replaced, the windshield camera have to be re-calibrated to ensure proper function. Go to a Lynk & Co Center for help. The windshield camera is used in the following systems:

- Highway assist
- Lane assist system
- Adaptive Cruise Control (ACC)
- Automatic emergency braking system
- Active high beam control (AHB-C)

! Caution!

Keep the windshield clean. If the windshield camera is blocked, some driver assistance systems may not work properly.

For more information about front camera, rear camera and door mirror cameras, , please refer to the *Visual Park Assist 360 (Camera)*(p. 179).

Limitations of the windshield camera for driver assistance system

The windshield camera has some limitations:


- Adverse weather conditions such as heavy rain or snow or dense fog may reduce the function of systems that depend on the windshield camera or cause the systems to temporarily stop functioning.
- Strong sunlight, reflections from the road surface, ice or snow covering the road, accumulated water, a dirty road surface, or unclear lane markers may drastically reduce the windshield camera's capacity to detect lane markers, a pedestrian or another vehicle.
- Never place any objects or decals on the windshield in front of the windshield camera. This could cause one or more of the systems that utilize it to stop functioning.
- If the temperature in the passenger compartment is very high, the windshield camera may be temporarily disabled for a period. After cooling down to a low enough temperature, the windshield camera automatically resumes operation after restarting.
- If a crack, scratch or stone chip occurs in the section of the windshield in front the windshield camera, it is recommended to contact a Lynk & Co Center for repair/replacement.
- Lynk & Co recommends the use of only genuine Lynk & Co windshields. After replacing the windshield, it is recommended to contact a Lynk & Co Center to recalibrate the windshield camera to ensure proper function of the windshield camera.
- For the windshield camera to function properly, make sure that the windshield is free of dust, ice and snow, and wash the windshield regularly using a mild (special) vehicle cleaning agent.

! Caution!

- The warning message pops up in the instrument cluster when there is dirt or snow around the windshield camera. After cleaning up the dirt or snow, if the warning message in the instrument cluster does not disappear, stop the vehicle at a safe place and contact a Lynk & Co Center.
- If the windshield or control unit is replaced during maintenance, or the windshield camera is not calibrated, please recalibrate the windshield camera.
- It is recommended that the windshield camera/windshield be repaired and replaced by a trained and qualified Lynk & Co service technician, otherwise some driver assistance systems may not function properly.
- When the windshield fogs up, turn on the windshield defroster, to ensure the normal operation of the windshield camera.

Rear microwave radar

The rear microwave radar is located on the inside of the rear bumper.

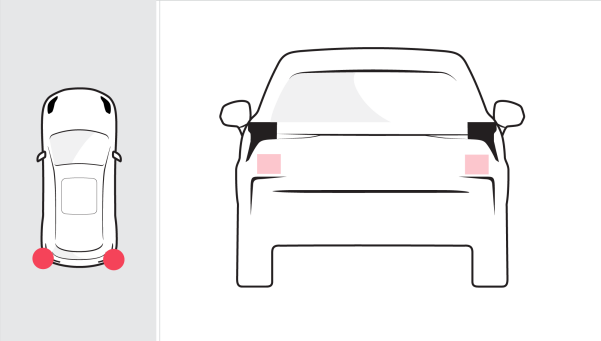

Rear microwave radar position

The rear microwave radar is used by the following systems:

- Lane Change Assist System
- Rear Collision Warning (RCW)
- Rear Cross Traffic Alert (RCTA)
- Door Open Warning (DOW)

The rear microwave radar has some limitations:

- Do not install accessories (such as license plate decorative frame, decal, etc.) on the rear microwave radar and its surrounding area. Otherwise, the rear microwave radar working range may be affected and some driver assistance systems may not function properly.
- The rear microwave radar will be interfered by other radio devices or strong radar reflections.
- In some situations the rear microwave radar may detect a vehicle later than expected or not detect other vehicles at all.
- When the vehicle is traveling on some winding, narrow, hilly roads or entering or exiting tunnels, the rear microwave radar may not be able to detect vehicles traveling behind.
- Do not strongly strike the sensor on the rear bumper and its surrounding area.
- If there are cracks/scratches or stone chips in the bumper area where the rear microwave radar is located, the performance of the rear microwave radar could be affected.
- For proper operation of the rear microwave radar, the radar-related area of the rear bumper must be kept free of dirt, ice, snow, and should be cleaned regularly.

Caution!

- Keep the area of the rear microwave radar clean. If the rear microwave radar is blocked, some driver assistance systems may not work properly.
- The warning message pops up in the instrument cluster when there is dirt or snow around the rear microwave radar. After cleaning up the dirt or snow, if the warning message in the instrument cluster does not disappear, stop the vehicle at a safe place and contact a Lynk & Co Center.
- It is recommended that the rear microwave radar/rear bumper be repaired and replaced by a trained and qualified Lynk & Co service technician, otherwise some driver assistance systems may not function properly.

Electronic Stability Program (ESP)

EPS helps you to stabilize the vehicle in oversteer and understeer situations. When oversteer or understeer is detected, the system will

apply braking on one or more wheels to improve your control of the vehicle stability.

The ESP has a number of subsystems:


- Anti-lock Brake System (ABS)
- Electronic Brake Force Distribution (EBD)
- Brake Assist System (BAS)
- Traction Control System (TCS)
- Hill Start Assist (HSA)
- Hill Decent Control (HDC)
- Ready Alert Brake (RAB)

⚠ Warning!

- ESP is a supplementary aid and cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- Do not modify the vehicle's suspension. The EPS may not operate properly and the vehicle's handling performance could be adversely affected. This could result in an accident and personal injury.

Enable/disable Electronic Stability Program (ESP)

You can enable/disable ESP via the ESP OFF button on the front tunnel console. Press and hold to disable ESP, press and release to re-enable ESP.

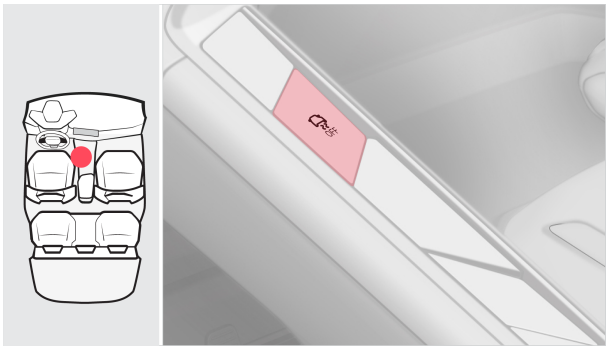

ESP OFF button



If your vehicle gets stuck in a snow, sand or some other conditions, ESP can help the vehicle out of trouble. If the vehicle adhesion limit is exceeded, stop the vehicle and wait for rescue. , please refer to the *Indicators and warning lights*(p. 55).



The indicator on the instrument cluster turns on to show that ESP is disabled.

! Caution!

- The vehicle will get less stability control after the ESP is disabled.

Anti-lock Brake System (ABS)

ABS can prevent each wheel from locking during emergency braking or when braking on slippery surfaces, avoid side slipping or drifting, and maintain vehicle stability.

⚠ Warning!

- Stopping distances are longer on rough, gravel or snow covered roads. So be sure to keep a safe distance from the vehicle in front, otherwise accidents may be caused, resulting in personal injury or death.

ⓘ Note!

- During braking, you may hear some noise from the engine compartment and feel some vibration through the brake pedal. This is a normal phenomenon caused by ABS when it's working, and not a malfunction.
- When ABS stops operating, the feel of the brake pedal reverts to its non-ABS condition.

Hill Start Assist (HSA)

HSA makes it easier to pull away when the vehicle is on a slope without the need to use EPB.

HSA keeps the vehicle stationary on a slope for about 1.5 s after the brake pedal is released. This allows you time to move your foot from the brake pedal to the accelerator pedal. When sufficient engine torque is applied, the brakes are released automatically. This is an advantage when pulling away on a slope, for example from a vehicle parking ramp, traffic lights or reversing uphill into a parking space.

HSA can still work even when Auto Hold is disabled.

⚠ Warning!

- HSA can not replace the parking brake. When you leave the vehicle, always apply the parking brake and select P mode.
- Be prepared to press the brake pedal if the vehicle begins to roll backwards. The HSA cannot prevent the vehicle from rolling backwards on a slope under all load or road conditions.

Hill Descent Control (HDC)

HDC can operate the accelerator pedal to increase or decrease the speed on downhill gradients. So that you can concentrate completely on steering. This function is particularly useful when driving down steep hills with rough terrain, and where the road may have slippery patches.

⚠ Warning!

HDC is a supplementary aid and cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.


ⓘ Note!

- There is a sound in the engine compartment when HDC is working, which is normal.

Activating Hill Descent Control (HDC)

HDC is activated when the following conditions are satisfied at the same time:

- The vehicle is moving at low speed on a steep slope.
- The HDC button is pressed.
- The driver releases the brake pedal and the accelerator pedal.

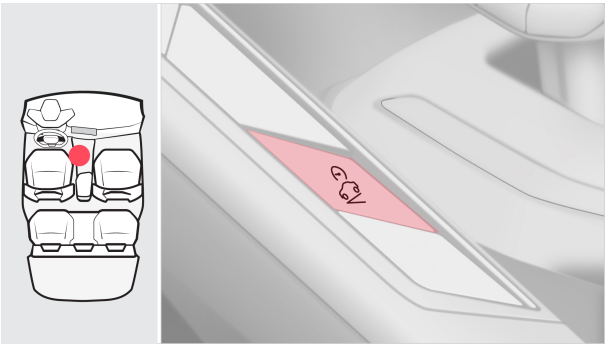

HDC button

Note!

The pictures are for illustration only, please refer to the actual vehicle.

For some models, HDC can also be enabled/disabled via the vehicle function interface on the center display vehicle function interface., please refer to the *Vehicle function interface*(p. 68)

Caution!

It is recommended that the maintenance on components of HDC should be carried out by a trained and qualified Lynk & Co service technician, otherwise HDC may fail to function properly.

Note!

- When HDC is activated, the feeling of depressing the accelerator pedal and the engine response will change.


Electronic Power Assist Steering (EPAS) System

EPAS can provide assistance when the driver turns the steering wheel, enhancing the controllability and stability of the vehicle and facilitating steering.

Speed Limit

The speed limit prevents you from exceeding a preset maximum speed. It is designed to assist you to follow speed limit.

Instrument cluster prompt information

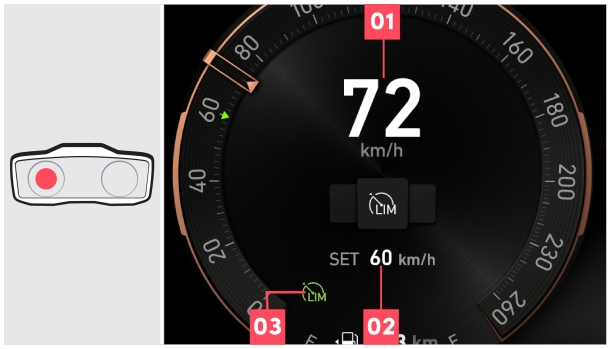

Speed limit information on instrument cluster

01 Vehicle current speed

02 Set maximum speed


03 Speed limit indicator

⚠ Warning!

- The speed limit cannot cover all driving situations and traffic, weather and road conditions.
- The vehicle must always be driven according to current traffic/ road conditions.
- The driver must take action if the speed limit does not maintain the speed within the set limit.
- You are always responsible for operating the vehicle in a safe manner and observing posted speed limits.

Enable speed limit

Speed limit indicator If you want to enable the speed limit to control the vehicle speed, you must put the speed limit into the preparation mode before enabling the speed limit.

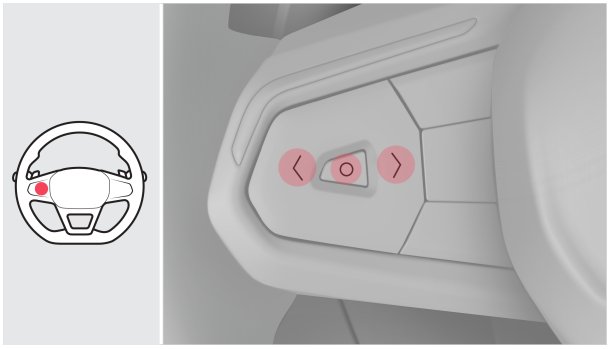


1 Press the setting button on the steering wheel, and select to use the speed limit function through the left and right switch buttons.

2 Press the setting button on the steering wheel to enable the speed limit function, and the combination instrument displays the green speed display indicator icon.

Note!

- The maximum speed limit can also be readjusted when the speed limit is active.
- When the self driving speed is below 30km/h, the maximum speed limit is 30km/h; When the self driving speed is above 30km/h, the maximum speed limit is the current self driving speed.


Adjusting the maximum speed limit

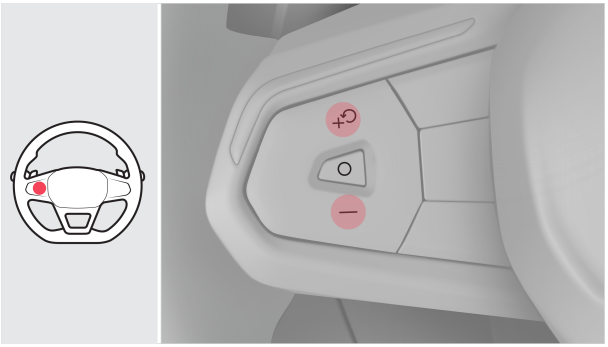

Different speed limit values can be set after the speed limit is enabled:

- Press and release the acceleration/deceleration key on the left keypad of the steering wheel, to increase/decrease the speed limit by 5 km/h each time. Press and hold to increase/ decrease the speed limit by 1 km/h continuously.
- Adjust the speed limit via the acceleration/deceleration key on the left keypad of the steering wheel until the desired speed value is reached.

Disable speed limit

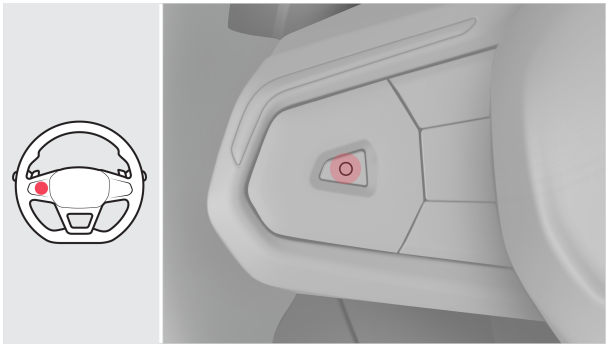


Press the set key to temporarily disable the speed limit.

Note!

The speed limit is now temporarily deactivated and you can exceed the set speed limit when driving the vehicle.

During overtaking, you may need to have the vehicle speed higher than the set speed limit. You can fully depress the accelerator pedal until the the speed limit value flashes, at which time the speed limit is temporarily disabled. You can then overtake the other vehicle. Always use a safe speed when overtaking a vehicle. Once your speed drops below the speed limit, the speed limit value stops flashing and the speed limit is automatically resumed.

Resume speed limit from standby mode

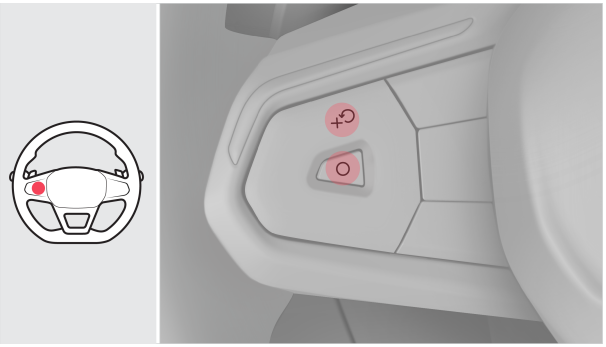


You can reactivate the speed limit function in the following ways:

- Press the reset button on the left keyboard of the steering wheel.
- Press the setting key on the left keyboard of the steering wheel.

Cruise Control (CC)

CC helps you maintain a set speed, making driving more relaxed on highways and long, straight roads in regular traffic flows.

Instrument cluster prompt information

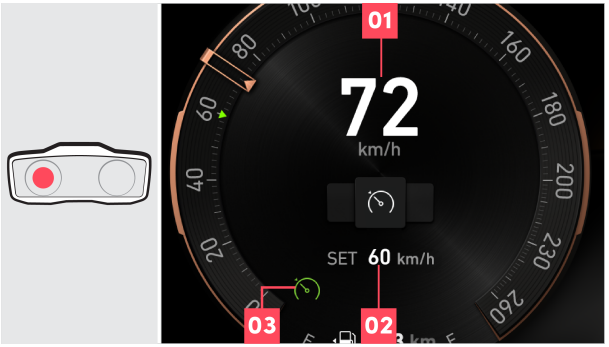

Instrument cluster prompt information

01 Vehicle current speed

02 CC set speed

03 CC symbol

The left information display area in the instrument cluster displays CC symbol and the set speed.


⚠ Warning!

- Do not use CC on winding roads and in bad road conditions. Otherwise, the vehicle may lose control, thus causing accidents and result in personal injury or death.
- You must take action if CC does not keep a suitable speed or distance to other vehicles.
- You are always responsible for driving safely and complying with current laws and traffic regulations.

Caution!

- It is recommended that the maintenance on components of the cruise control system should be carried out by a trained and qualified Lynk & Co service technician, otherwise the cruise control system may fail to function properly.

Turning on the Cruise Control (CC)

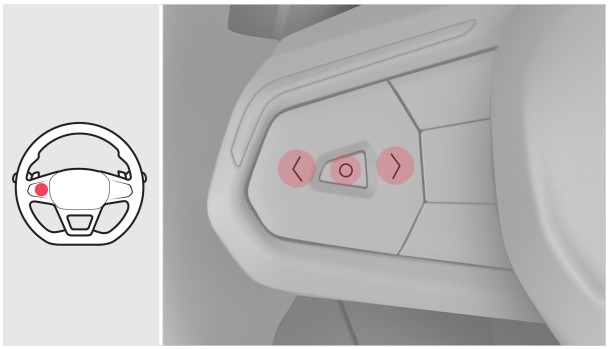


1 Press the SET button on the steering wheel, and select cruise control with the left or right switch button.

2 Press the SET button on the steering wheel to activate CC, and the instrument cluster displays the green CC symbol.

Note!

- When the cruise control system is faulty, the cruise control cannot be activated.
- Putting CC in standby mode will not activate it. CC is only activated when the SET button is pressed.

Setting the Cruise Control (CC) Speed

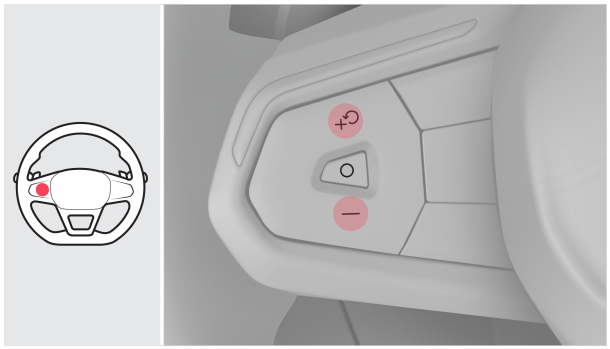

Adjusting the speed

After the cruise control system is activated, the cruise control speed can be adjusted:


- Press the +/- button on the left side of the steering wheel briefly to change the set speed value in steps of + or - 5 km/h. Press and hold to change the set speed value in steps of + or - 1 km/h continuously.
- Adjust the cruise control speed via the +/- button on the left the steering wheel until the desired speed value is reached (the speed at this time is the set cruise speed).

A temporary increase of speed by depressing the accelerator pedal, such as accelerating during overtaking, does not affect the setting. The vehicle speed returns to the last stored value when the accelerator pedal is released.

⚠ Warning!

- The vehicle may not maintain the set speed when going up or down steep hills. If this happens, drive without the cruise control.

Turning off the Cruise Control (CC)

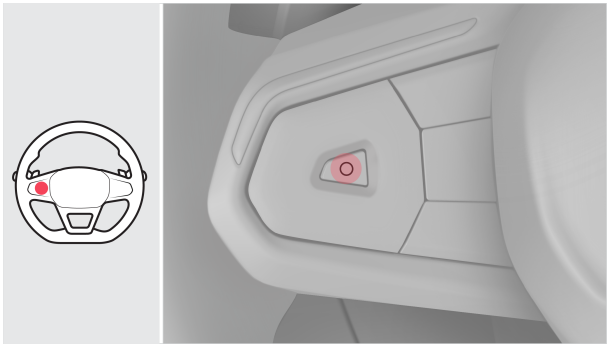


Press the SET button to pause CC temporarily.

CC is disabled temporarily when one of the following occurs, and you must immediately take full control of the vehicle.

- The brake pedal is depressed.
- The gear lever is moved to N position.
- The vehicle loses traction.

Resume Cruise Control from standby mode

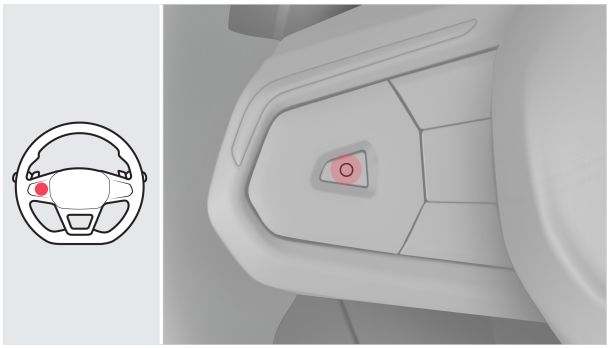

You can resume the cruise control in the following ways:

Press the SET button on the steering wheel to activate the cruise control, and the instrument cluster displays the green CC symbol.

Caution!

- There may be a significant increase in speed after CC is resumed.

Adaptive Cruise Control (ACC)

ACC is designed to assist you by keeping a set speed or a set inter-vehicle distance to the vehicle ahead.

You can switch the driving assist feature to ACC with the left/right button on the steering wheel.

You can set a desired speed or inter-vehicle distance. When the system detects that the vehicle ahead moving slower than the set speed, your vehicle's speed will be automatically adapted to ensure a proper distance from the vehicle ahead. If there are no other vehicles travelling slower ahead of you, the vehicle automatically returns to the set speed.

ACC is designed to smoothly regulate speed according to driver intention and front traffic situation. However, due to the limitations of the front camera, the system may brake unnecessarily or not. You are always responsible for applying the brakes in situations that require immediate braking.

Warning!


ACC is a supplemental aid to the driver. It cannot cover all driving situations and traffic, weather and road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations. Attention must be paid to the following situations, otherwise accidents may occur, resulting in serious personal injury or even death:

- You must intervene if ACC does not maintain a suitable speed or suitable distance to the vehicle ahead.
- ACC is not a collision avoidance system. You are always responsible for applying the brakes if the system does not detect another vehicle.
- ACC may not react to animals or small vehicles, such as bicycles and motorcycles. It may also not react to slow moving, parked or approaching vehicles, or stationary objects.
- Do not use ACC in demanding driving conditions such as city driving or other heavy traffic situations, in slippery conditions, when there is a great deal of water or slush on the road, during heavy rain or snow, in poor visibility, on winding roads or on ramps etc.

Caution!

- It is recommended that the maintenance on components of ACC should be carried out by a trained and qualified Lynk & Co service technician, otherwise ACC may fail to function properly.

Instrument cluster prompt information

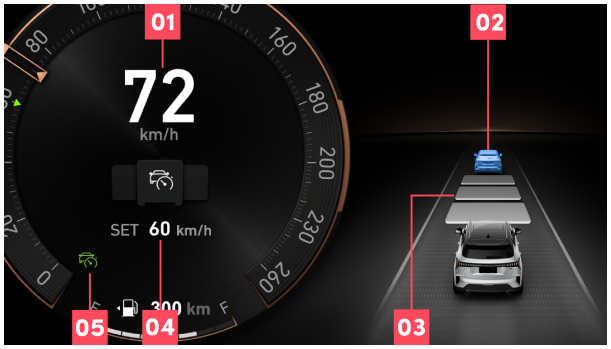

01 Current speed

02 Target vehicle

03 Inter-vehicle distance

04 ACC set speed


05 ACC indicator symbol

The left information display area in the instrument cluster displays ACC symbol and the set speed.

Note!

- ACC can regulate the vehicle's speed by accelerating and braking. The brakes may emit a sound when they are being modulated by the ACC system. This is normal.
- When ACC controls the vehicle to follow the vehicle ahead, and it gets too close, it may trigger the auto emergency braking.

Turning on Adaptive Cruise Control (ACC)

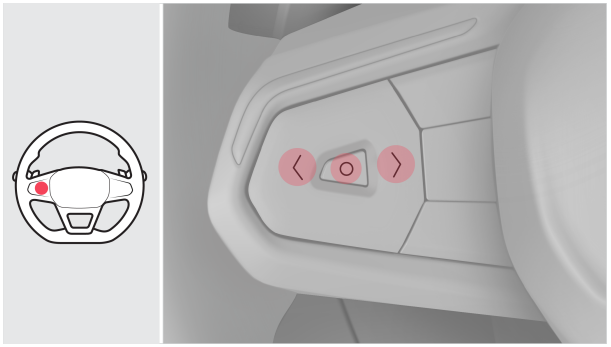


1 Press the SET button on the steering wheel, and select the adaptive cruise function with the left or right switch button.

2 Press the SET button on the steering wheel to activate ACC, and the instrument cluster displays the green ACC icon.

Note!

- When the vehicle speed is below 30 km/h, the ACC target speed is 30 km/h; When the vehicle speed is above 30 km/h, the ACC target speed is the current vehicle speed.

Setting the Adaptive Cruise Control (ACC) Speed

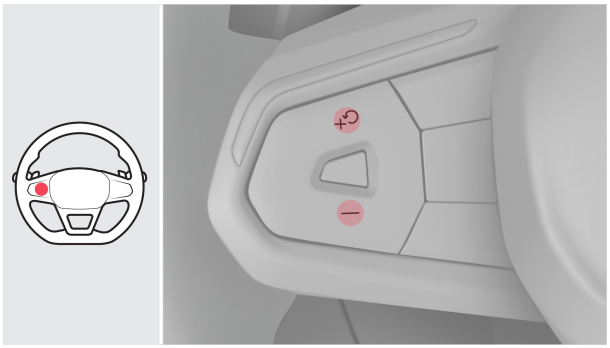


After ACC is activated, you can adjust the set speed:

- Press the +/- button on the left side of the steering wheel briefly to change the set speed value in steps of + or - 5 km/h. Press and hold to change the set speed value in steps of + or - 1 km/h continuously.
- Adjust the speed with the +/- button on the steering wheel until the desired speed value is reached (which is the set speed for ACC).

Note!

- A temporary increase of speed by depressing the accelerator pedal, such as accelerating during overtaking, does not affect the setting. The vehicle speed returns to the last stored value when the accelerator pedal is released.

Setting the inter-vehicle distance for Adaptive Cruise Control (ACC)

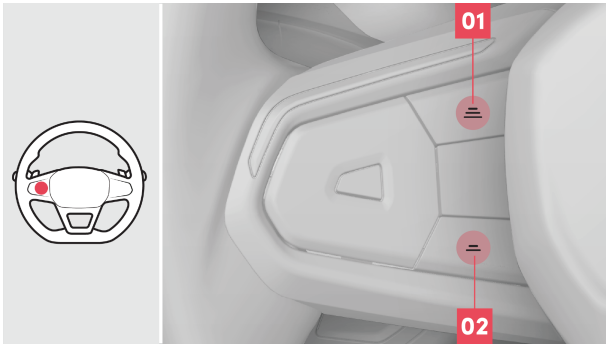

01 Increase time interval key

02 Reduce time interval key

You can increase the inter-vehicle distance by pressing the increase time interval key and reduce the inter-vehicle distance by pressing the reduce time interval key. The inter-vehicle distance will be displayed on the instrument panel with one to three horizontal

bars. The more bars there are, the longer the distance between vehicles will be. Every time the vehicle is started, the longest inter-vehicle distance is set by default.

In order to follow the vehicle ahead as stably as possible, the ACC allows the inter-vehicle distance to vary in certain situations. At low speeds, if the set inter-vehicle distance is short, ACC increases the distance to the vehicle ahead slightly.


⚠ Warning!

- The driver is always responsible for regulating the vehicle speed. Otherwise, in the event of an unexpected traffic situation, if the inter-vehicle distance is short, the time available for you to react will be more limited, which may lead to serious personal injury and even death.
- Only inter-vehicle distances permitted by local traffic regulations may be used.

ⓘ Note!

- If ACC does not seem to react when it is active, this may be because the set inter-vehicle distance does not allow an increase in speed.
- The higher the speed, the longer the inter-vehicle distance should be.

Turning off Adaptive Cruise Control (ACC)

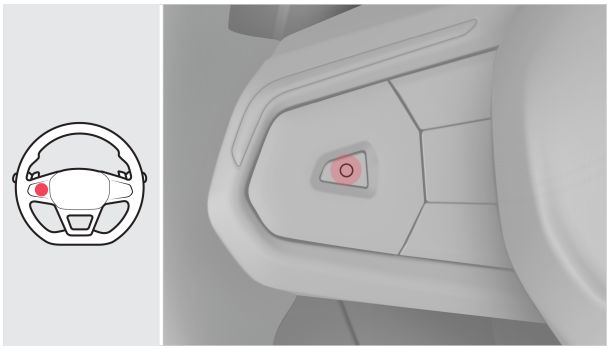

ACC can be paused temporarily by pressing the SET button or by depressing the brake pedal.

ACC will be automatically deactivated if:


- The driver seatbelt is unbuckled.
- Any one of the four doors and the two covers is open.
- The engine is shut down.
- In manual mode.
- The gear lever is not in D position.
- TCS enabled.
- HDC enabled.
- ABS enabled.
- ESP turned off.
- EPB engaged.

- The vehicle speed is too high.
- The close target to follow is lost.
- Automatic emergency braking enabled.
- Transmission oil temperature too high.

⚠ Warning!

- If this happens, a corresponding message appears in the instrument cluster as a reminder. At this time, you must take full control of the vehicle, and if necessary, depress the brake pedal to keep a safe distance from the vehicle in front, otherwise an accident could be caused, resulting in serious personal injury and even death.

Resume Adaptive Cruise Control (ACC) from standby mode

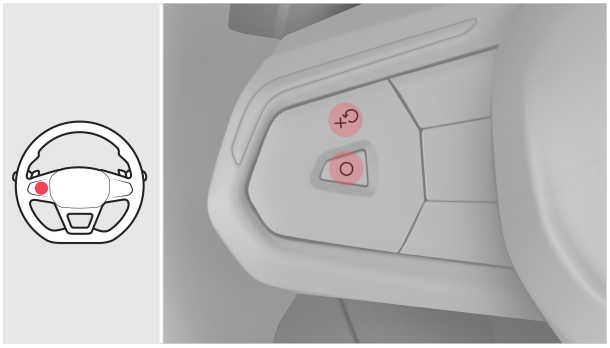


Press the +/- button or the SET button on the steering wheel to resume ACC at the previous set speed.

Caution!

- There may be a significant increase in speed after ACC is resumed.

Changing target vehicle for Adaptive Cruise Control (ACC)

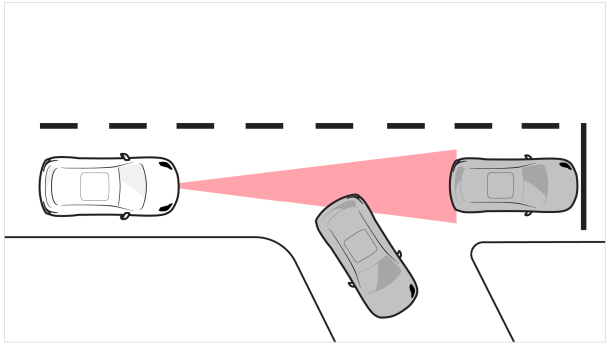

The target vehicle turns suddenly and there is a new stationary vehicle ahead

When the vehicle is following another vehicle at a low speed by using ACC, ACC will apply emergency braking if the target to follow changes from a moving vehicle to a stationary one.

⚠ Warning!

- You must always pay attention to the surrounding vehicles. If the target to follow is changed from a moving vehicle to a stationary one, the system may not respond to the changed target or not in time, and you must depress the brake pedal actively.

Limitations

Bear in mind that the ACC is primarily intended for use when driving on level road surfaces. The function may have difficulty in keeping the correct distance from the vehicle ahead when driving on steep downhill slopes or with a heavy load. In this case, be extra attentive and ready to brake. For details of the windshield camera , please refer to the *Driver assistance system sensors* (p. 149).

Highway assist

Highway assist can help you with cruise control and maintain the vehicle in the middle of the lane at the same time.

You can switch the driving assist feature to highway assist through the left/right button on the left of the steering wheel.

You can set a desired speed or inter-vehicle distance. When the front camera detects a vehicle ahead moving slower than the set speed, your vehicle's speed will be automatically adapted to help keep a distance from that vehicle. If there are no other vehicles travelling slower ahead of you, the vehicle automatically returns to the set speed.

Highway assist is designed to smoothly regulate speed according to driver intention and front traffic situation. However, due to the limitations of the front camera, the system may brake unnecessarily or not. You are always responsible for applying the brakes in situations that require immediate braking.

⚠ Warning!


Highway assist is a supplemental aid to the driver. It cannot cover all driving situations and traffic, weather and road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations. Attention must be paid to the following situations, otherwise, accidents may be caused, resulting in personal injury or death:

- You must intervene if highway assist does not maintain a suitable speed or suitable distance to the vehicle ahead.
- Highway assist is not a collision avoidance system. You are always responsible for applying the brakes if the system does not detect another vehicle.
- Highway assist may not react to animals or small vehicles, such as bicycles and motorcycles. It may also not react to slow moving, parked or approaching vehicles, or stationary objects.
- Do not use highway assist in demanding driving conditions such as city driving or other heavy traffic situations, in slippery conditions, when there is a great deal of water or slush on the road, during heavy rain or snow, in poor visibility, on winding roads or on ramps etc.
- Highway assist cannot identify road edges, such as walls, guardrails, curbs, lawns, green belts, asphalt joints, etc. You must keep control of the vehicle at all times.
- Highway assist cannot work under complex road conditions, such as: heavily congested road conditions, complex traffic changes, crossings, intersections, ramps, lane line losses, etc., which requires driver supervision and takeover. Highway assist is designed to provide comfort experience under suitable road conditions, and the driver is fully responsible for safe driving.

! Caution!

- It is recommended that the maintenance on components of the highway assist should be carried out by a trained and qualified Lynk & Co service technician, otherwise the highway assist may fail to function properly.

Highway assist buttons

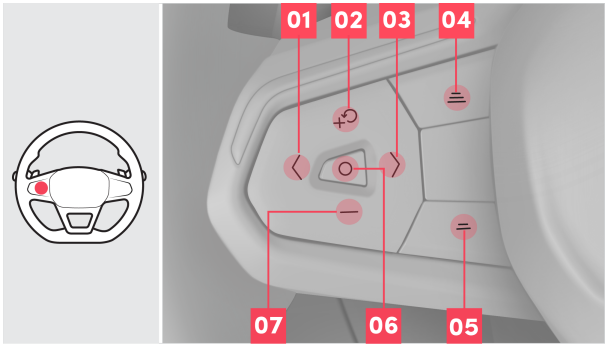

01 Left selection key

02 Acceleration key

03 Right selection key


04 Increase time interval key

05 Reduce time interval key

06 Set key

07 Deceleration key

Instrument cluster prompt information

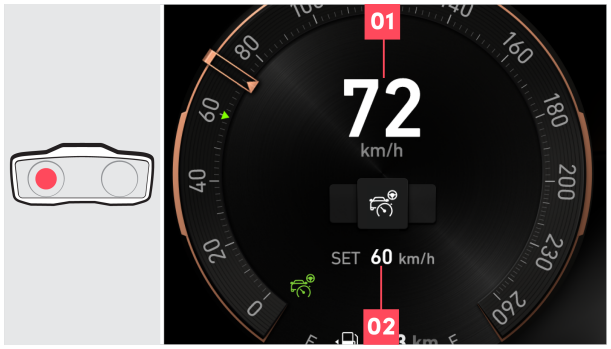

01 Current speed

02 Highway assist set speed

The left information display area in the instrument cluster displays highway assist symbol and the set speed.

Note!

- Highway assist can regulate the vehicle's speed by accelerating and braking. The brakes may emit a sound when they are being modulated by the highway assist system. This is normal.
- When highway assist controls the vehicle to follow the vehicle ahead, and it gets too close, it may trigger the auto emergency braking.

Highway assist symbol and message



01 Highway assist indicator: gray indicates the system is in standby mode, green indicates the system is enabled, and orange indicates the system is degraded.

02 Target vehicle: gray when highway assist is in standby mode. When highway assist is enabled, this symbol is blue when the distance to the target vehicle is larger than or equal to the set inter-vehicle distance, or within the set distance but far away enough. The color of the symbol changes to yellow when the distance is reduced, and changed to red when it is too close.

⚠ Warning!

When the target vehicle symbol is displayed in red on the instrument cluster, you must take control the vehicle to ensure the safety, otherwise an accident may occur, resulting in serious personal injury and even death.

Cruise control

The activation of highway assist, adjustment of the cruise speed and setting of the inter-vehicle distance are the same as those for ACC. , please refer to the *Adaptive Cruise Control (ACC)* (p. 160)

ⓘ Note!

- After highway assist or ACC is enabled, the left/right button on the left of the steering wheel can be pressed to switch between them, which is then directly enabled.
- When highway assist is enabled, you must hold the steering wheel with both hands. The system monitors this condition continuously. If the hand off time exceeds a certain period, a hand off warning message is displayed on the instrument cluster to remind you to hold the steering wheel firmly with both hands. If you don't respond appropriately, highway assist is disabled the second time the hand off warning is displayed.

Keep the vehicle in the middle of the lane

When highway assist is enabled, lane lines on both sides are identified, and the system can control the vehicle to be in the middle of the lane. When the vehicle is traveling at a low speed, if one or both lane lines are lost, highway assist can carry out lateral control according to the vehicle ahead or the traffic flow on both sides. When the vehicle is traveling at a high speed, if one or both lane lines are lost, the lane centering feature will be disabled, which means that the vehicle cannot be kept in the middle of the lane by the system.

! Caution!

When the vehicle follows the vehicle ahead at a low speed, highway assist can control the steering wheel torque according to the traveling track of the vehicle ahead, and control the lateral movement of the vehicle following the vehicle ahead. At this time, you need to pay special attention to the traffic conditions on both sides of the vehicle.

Highway assist degradation

When LKS is disabled, highway assist is degraded with only ACC available, which cannot control the vehicle to remain in the middle of the lane.

Lane assist system

Under certain specific conditions when the vehicle is driving on expressway or main roads, if the vehicle is leaving from its lane, the lane assist system can give an alarm through sound, vibration and image, or keep the vehicle in its own lane by steering control.


The lane assist system consists of two subsystems:

- Lane Departure Warning (LDW)
- Lane Keeping Aid (LKA)

⚠ Warning!

- The lane assist system is an auxiliary function for the driver, it does not deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- The lane assist system only assists you to keep the vehicle in its lane and cannot completely replace your operation. You must always keep control of the vehicle and take full responsibility for the vehicle.

Lane Departure Warning (LDW)

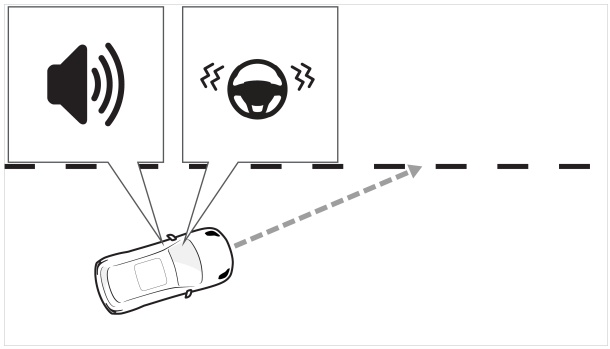


LDW warns the driver in the following ways when the vehicle is about to run off the road or exit the lane without a turn signal set in the respective direction or set in the wrong direction.

- Sound + colored lane lines in the instrument cluster
- Vibration + colored lane lines in the instrument cluster
- Sound + vibration + colored lane lines in the instrument cluster


Lane Keeping Aid (LKA)

LKA can be set in any of the two modes: weak and strong, to provide two levels of assistance.

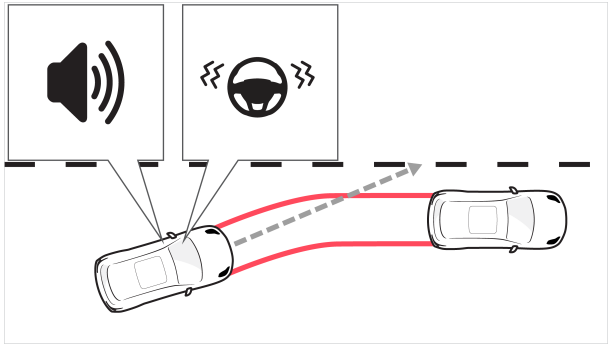

Weak assistance

LKA provides a small steering input to bring your vehicle back towards the center of the lane when the vehicle is about to run off the road or exit the lane without a turn signal set in the respective direction or set in the wrong direction. If the steering control fails, the system alerts the driver with audible warning and/or vibration in the steering wheel.

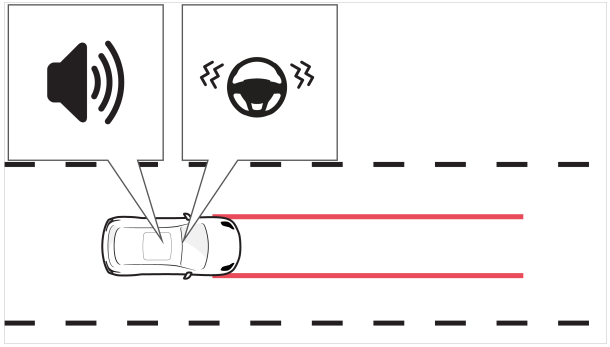

Strong assistance

LKA provides a small steering input to keep the vehicle in the middle of the lane. If the steering control fails, the system alerts the driver with audible warning and/or vibration in the steering wheel.

LKA monitors continuously whether your hands are on the steering wheel or not to function properly. If not, the related message pops up in then instrument cluster to alert you to actively steer the vehicle.

ⓘ Note!

- On narrow roads, the lane assist system may not work, but enters into standby mode. It returns to be enabled when the road becomes sufficiently wide.
- If a turn signal is switched on, the lane departure warning for the corresponding side and the steering control in the weak assistance mode will be disabled.
- If the brake pedal is depressed hard, the lane assist feature will be disabled.
- When driving on a tight bend, the lane assist system will not intervene.

Lane assist system settings

You can set the lane assist system in the vehicle setting interface on the center display.

- Turn on/off the system in the vehicle setting interface.
- Select the assistance mode and warning mode in the vehicle setting interface.

ⓘ Note!

LKA can only be activated when the vehicle speed exceeds 60 km/h.

Symbol/message for lane assist system



No lane lines are detected.



Lane lines are detected, but the function is limited.



Lane lines are detected, and the lane assist system is standby (only appear in the weak assistance mode and warning only mode).



The lane lines are providing a warning.



The lane assist system is providing an intervention.

Limitations of lane assist system

The lane assist system cannot function properly under all driving conditions, weather conditions, traffic conditions or road conditions. The lane assist system may be affected under the following circumstances:

- Road construction
- Poor road surfaces (potholed, raised, undulating).
- The driver does not hold the steering wheel firmly with both hands.
- A very active driving style
- Sharp edges or lines other than the lane lines
- In winter
- Bad weather with reduced visibility
- The roads are of many types and complicated.
- Narrow roads
- Fork roads
- Road with merging or diverging lane lines
- Road with poorly visible lane lines
- Bend with a too small radius
- Roads with increasing or decreasing number of lanes
- Roads with vehicle marks (e.g. tire marks)
- Roads with big difference between the original and new lanes
- Lane width greater than 5.5 m or less than 2.5 m
- Road edges (walls, guardrails, curbs, lawns, green belts, asphalt joints) are Identified as lane lines.

! Caution!


If there is a problem with the front camera, the lane assist system may fail to work properly. It is recommended to contact a Lynk & Co Center for inspection and maintenance of the lane assist system. Otherwise, the lane assist system may not function properly.

Lane Change Assist System

The lane change assist system detects targets around the rear side of the vehicle at all times and evaluates the situation when the vehicle is about to change lanes. If there are moving vehicles and fast approaching vehicles in the blind spot area of the driver, the lane change assist system will give early warning of possible collisions to ensure the safety when changing lanes.

The lane change assist system consists of three subsystems:

- **Blind Spot Detection (BSD)**: System detects other vehicles in outside rearview mirrors' blind area.
- **Closing Vehicle Warning (CVW)**: System detects vehicles that are about to pass your vehicle or are approaching your vehicle quickly from behind in the left or right lanes.
- **Lane Change Warning (LCW)**: The system detects whether there are fast approaching vehicles in the lane you are going to parallel.

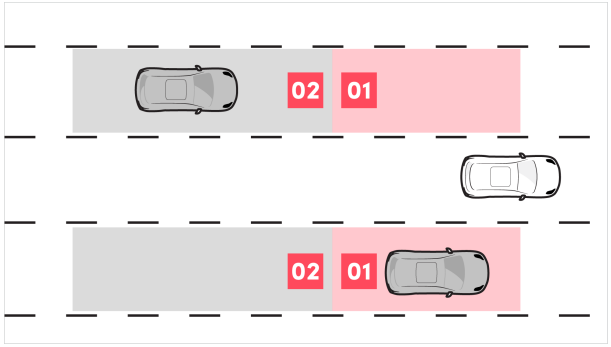

01 BSD monitoring area

02 CVW/LCW monitoring area

- When BSD detects one or more vehicles in its monitoring area 1, the warning light symbol in the outside rearview mirror will be illuminated continuously.
- The CVW monitors vehicles on both sides of the lane. If the rear vehicle approaches quickly and there may be a collision risk, the CVW will alert the driver by lighting the warning light on the rearview mirror.
- When you turn on the direction indicator (at this time the system judges that you have the intention of parallel), if there are other vehicles approaching the parallel lane quickly, the LCW warns by flashing warning light and buzzing sound to avoid accidents.

⚠ Warning!

- The lane change assist system is an auxiliary function for the driver, and it cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- Although the vehicle is equipped with lane change assist system, to ensure safety, you should observe the surrounding environment and change lanes safely.
- The lane change assist system does not function when your vehicle is reversing.
- As the driver, you have full responsibility for changing lanes in a safe manner.

Setting the lane change assist system

You can set the lane change assist system via the vehicle setting interface on the center display.

- The vehicle setting interface allows you to activate/deactivate the system.
- The vehicle setting interface allows you to turn on/off the audible warning.

Limitations of the lane change assist system

The function of the lane change assist system may be affected in certain situations:

- The lane change assist system is not suitable for bad weather such as rain and snow.

- Lane change assist system cannot detect vehicles going very fast or very slow.
- The lane change assist system cannot detect a stationary target.
- The lane change assist system cannot detect targets such as bicycles or pedestrians.
- The lane change assist system cannot function in sharp bends or in open areas.

If there is a problem with the rear radar, the lane change assist system may fail to work properly , please refer to the *Driver assistance system sensors* (p. 149).

If the instrument cluster indicates a failure of the BSD or other similar information, contact a Lynk & Co Center immediately.

Caution!

- It is recommended that trained and qualified Lynk & Co maintenance technicians repair the lane change auxiliary system, otherwise it may cause the lane change auxiliary system to fail to operate normally.

Auto emergency braking

The auto emergency braking system consists of two subsystems:

- Forward Collision Warning (FCW)
- Auto emergency braking (AEB)

Warning!

- No automatic system can be guaranteed to function 100% correctly in all situations. For that reason, never test FCW/AEB by driving toward a person or object. Otherwise, accidents may be caused, resulting in personal injury or death.
- FCW/AEB is a supplementary aid and cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- Due to the limitations of front radar, FCW/AEB may be falsely triggered. You must always pay close attention to the surrounding environment.

Settings of auto emergency braking

You can activate/deactivate the autonomous emergency braking via the vehicle setting interface on the center display. Each time the vehicle is started, the function is automatically enabled.

Only when the automatic emergency braking is enabled, the front collision warning can be turned on/off.


After the front collision warning is turned on, the alarm sensitivity can be set to be LOW, MID or HIGH.

⚠ Warning!

- The warning level set determines the system's responsiveness and sets the distance at which visual and audible warnings will be triggered. To help make FCW as effective as possible, the HIGH sensitivity level is recommended.
- Even if the setting HIGH has been selected, warnings may be perceived as being given late, such as when the difference in speed is great or if the vehicle ahead brakes suddenly.

Forward Collision Warning (FCW)

FCW is intended to alert you if your vehicle is about to crash into a vehicle ahead, or pedestrians. FCW works together with AEB . The vehicle automatically brakes if you are unable to react quickly enough.

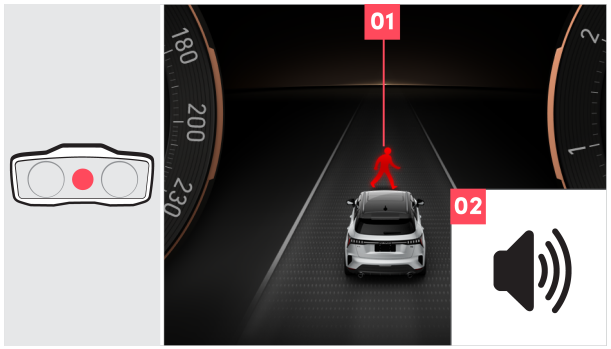

FCW display on instrument cluster

01 Visual warning, risk of collision with vehicles/pedestrians ahead

02 Audible warning signal

⚠ Warning!

- FCW can provide a warning for a potential collision but it can never shorten your reaction time.
- FCW is a supplementary aid and cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.

Auto emergency braking (AEB) (with pedestrian identification)

AEB can take measures to help you avoid or mitigate collisions. Normally, AEB will not be triggered unless there is an imminent danger of a collision.

When the AEB function is triggered, it carries out in the following ways:

- **Collision warnin**g: When FCW is activated, you will be alerted by a visual and audible warning signal if there is a potential collision with the vehicle or pedestrians.
- **Cadence braking**: if the risk of collision increases, you will be reminded to take safety measures through cadence braking.
- **Automatic braking**: If there is an imminent danger of a collision, auto-braking will be triggered. Full braking force is

used to avoid the collision if possible or to make the speed at the point of impact as low as possible.

The brake lights may flash when the AEB is triggered .

⚠ Warning!

- AEB is a supplementary aid and cannot deal with all situations or road conditions. Due to the limitation of the front radar, AEB may be triggered by mistake under some special conditions or road conditions. Therefore, you are always responsible for driving safely and complying with current laws and traffic regulations.

Detecting objects

AEB detects pedestrians and most types of vehicles (buses, trucks, passenger cars) in front of your vehicle.

System help is only provided if the collision risk is probable or imminent.

Pedestrians



Clear body contours and contrast to the background

AEB pedestrian detection needs clear information about the person's head, arms, shoulders, legs, the upper and lower parts of the body and a person's normal pattern of movement.

⚠ Warning!

AEB detection is a supplementary driving aid, it cannot detect pedestrians:

- who are partially obscured, wearing clothing that prevents a clear view of the person's body contours.
- Who have limited contrast to their immediate background. A warning or braking may be delayed or not come at all.
- Carrying a large object.
- Who stands still.

Limitations for AEB and FCW

AEB and FCW work based on windshield camera and front radar. The systems have limited or reduced functionality in certain situations.

- **Slippery driving conditions**: The extended braking distance on slippery roads may reduce AEB capacity to help avoid a collision.
- **Strong external lighting**: Strong sunlight, reflections, extreme light contrast may make the visual warning signal difficult to see, and may limit the cameras ability to detect.
- **Heat of passenger compartment**: If the temperature in the passenger compartment is very high, the windshield camera may be temporarily turned off and warnings may not be given.
- **Reduced visibility in poor weather**: Intense snowfall, blowing snow, rain, dense fog and dusty conditions on the windshield and front bumper may reduce the system's functionality.
- **Windshield camera/park system's limited field of vision**: The windshield camera and park system has limited field of vision. In some situations they may detect a vehicle or pedestrian later than expected or not detect them at all.
- **Reversing:** The system is deactivated while the vehicle is reversing.
- **Low vehicle speed**: The system will not be triggered if your vehicle speed is low.
- **Active driver**: The system may not react or react later than expected in situations where you actively operate/brake the vehicle.

⚠ Warning!

- Warnings will only be provided if the collision risk is probable or imminent. You should be aware of the limitations of FCW before operating the vehicle.
- The AEB function can help prevent a collision or reduce the speed at which it occurs. However, you should always apply the brakes, even if AEB is operating.
- You are always responsible for maintaining the correct speed and distance in relation to the vehicle ahead. Never wait for the FCW signal or for the AEB system to intervene.
- When the vehicle speed is high, FCW and AEB cannot identify and respond to pedestrians.

If there is a problem with the windshield camera or front radar, it may cause AEB and FCW to fail to work properly. , please refer to the *Driver assistance system sensors* (p. 149)

Caution!

- Only a Lynk & Co Center can repair AEB/FCW, otherwise AEB/FCW may not service properly.

Visual Park Assist 90 Rear (Camera)

Visual park assist 90 rear (camera) provides a rear view of the vehicle through the rear parking assist camera, and displays the image on the central display to help you see the situation behind the vehicle when reversing.

⚠ Warning!

- People or objects displayed on the center display may be closer to the vehicle than they appear.
- Parking assist camera is only a supplementary aid for parking. It is not intended to replace your attention and judgment.
- The parking assist camera has blind spots. In blind spots, it cannot detect objects or people around or near the vehicle.

Enable Visual Park Assist 90 Rear (Camera)

- By engaging the R gear enters the reversing camera system.

Disable Visual Park Assist 90 Rear (Camera)


- Tap ✕ on the center display.
- Move the shift lever from the R position.
- The reversing image system is entered with the parking camera key on the vehicle function interface of the central display, and exited at a forward speed of about 30 km/h.

Changing camera views

For models equipped with rear camera view only, the rear view is shown in the center display and you can select three different rear views: REAR view, JUNCTION view and ZOOMED view.

Overlays view: If you select this symbol, different graphical overlay options will show, and you can then select the desired overlay to be added onto the camera view. The selected overlay is also valid when you change camera view.

- Parking radar: After activating parking radar, the central display screen displays the distance indicator bar , please refer to the *Park system*(p. 181).
- Vehicle trajectory guidelines: After opening the vehicle trajectory guidelines, the center display displays the trajectory.

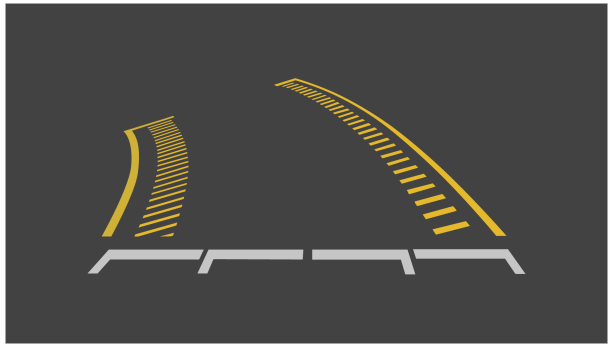

Trajectory, rear camera 90° view

When the R gear is engaged, the trajectory appears in the center display. The trajectory represents the path that your vehicle moves and the approximate distance to the rear object.

When the R gear is engaged, the reversing camera system is active, you can tap on the left area of the center display to set it.

⚠ Warning!

When the rear camera is selected, the image on the center display shows only the area behind the vehicle. You must always watch for people, animals, other vehicles, etc., near both sides or the front of the vehicle while reversing.

Limitations for the Parking Assist Camera

The parking assist camera has certain limitations:

- Brightness of central display: if the brightness of central display is lowered, the quality of camera image will be reduced.
- Ambient brightness: the camera image is adaptively adjusted according to the ambient brightness around the vehicle. When the ambient brightness is insufficient, the quality of the camera image on the central display screen will be reduced.
- Weather: Please pay attention to the surrounding environment in rainy days. The surface of the camera may be covered with water, resulting in distorted images.
- Blind spot: The cameras have limited field of view. When a child or an object in your rear camera view suddenly disappears, you should recheck before reversing. They may have entered your parking assist camera's blind spot.
- Maintenance: Remove dirt, ice and snow carefully. Clean the parking assist camera regularly. Avoid scratching the lenses.

Visual Park Assist 360 (Camera)

The visual park assist 360 (camera) provides a 360° panoramic view through the parking assist cameras all around the vehicle and displays the image on the central display to help you see the situation around.

⚠ Warning!

- People or objects displayed on the center display may be closer to the vehicle than they appear.
- Parking assist camera is only a supplementary aid for parking. It is not intended to replace your attention and judgment.
- The camera has blind spots. In blind spots, it cannot detect objects or people around or near the vehicle.

Enable Visual Park Assist 360 (Camera)

- Tap the 360 panorama button on the vehicle function interface of the central display.
- By engaging the R gear enters the visual park assist 360 (camera).
- Press the on the front tunnel console.

Disable Visual Park Assist 360 (Camera)

- Tap × on the center display.
- The visual park assist 360 (camera) is activated by engaging in the R gear, and it will exit once the driving speed exceeds 15 km/h.
- The visual park assist 360 (camera) is activated by pressing the visual park assist 360 (camera) symbol or the button on front tunnel console, and it exits when the driving speed reaches about 30 km/h.
- By engaging the P gear, the visual park assist 360 (camera) is exited about 5 s later.

views switching

Front view: The top view will show in the left area, and the front view will show in the right area.

Rear view: The top view will show in the left area, and the rear view will show in the right area.

Side view: Selecting the SIDE will activate the side view cameras to view the sides of the vehicle.


3D view: You can slide or rotate the selection view anywhere in the right area. You can check the surroundings of the vehicle by select the 3D view. You can also select eight 3D views of fixed visual angle via the view icon on the left area of central display.

Set Visual Park Assist 360 (Camera)

You can also click ⚙ icon settings , and then click **camera** button to set the following functions:

- **Chassis linkage:** After activating the steering linkage function, when turn left, it will automatically switch to the 3D left rear view, and the 3D right rear view will be displayed when you turn right.
- **Vehicle transparency:** when the transparent underbody function is activated, the blind area of the vehicle becomes transparent when the vehicle travels a parking space.

Views of Visual Park Assist 360 (Camera)

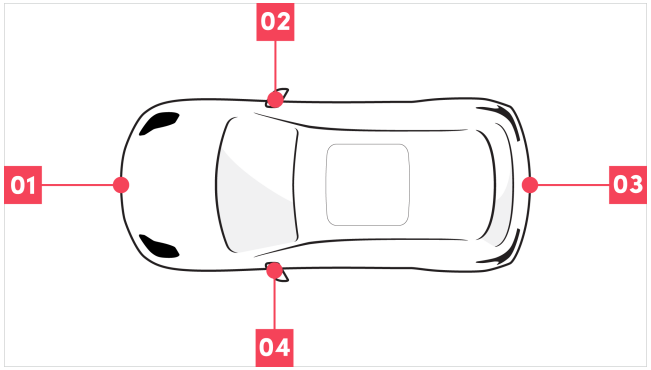

01 Front camera

02 Outside rearview mirror camera - right side

03 Rear camera

04 Outside rearview mirror camera - left side


Limitations for the Parking Assist Camera

The parking assist camera has certain limitations:

- Brightness of central display: if the brightness of central display is lowered, the quality of camera image will be reduced.
- Ambient brightness: the camera image is adaptively adjusted according to the ambient brightness around the vehicle. When the ambient brightness is insufficient, the quality of the camera image on the central display screen will be reduced.
- Weather: Please pay attention to the surrounding environment in rainy days. The surface of the camera may be covered with water, resulting in distorted images.
- Blind spot: The cameras have limited field of view. When a child or an object in your rear camera view suddenly disappears, you should recheck before reversing. They may have entered your parking assist camera's blind spot.
- Maintenance: Remove dirt, ice and snow carefully. Clean the parking assist camera regularly. Avoid scratching the lenses.

Park system

When the vehicle is driving in reverse, the parking radar system detects obstacles behind the vehicle through radar sensors and sounds to remind the driver of the distance between the vehicle and the obstacles.

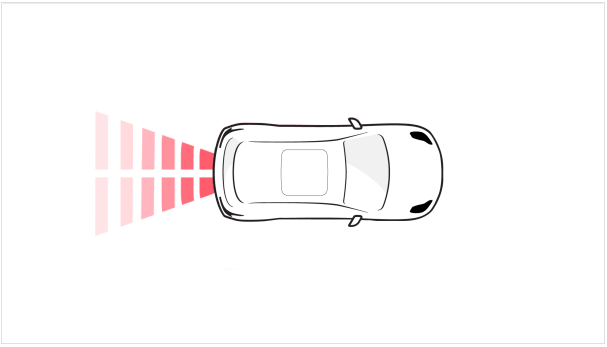

- PAS 4, Park System (4-channels).

⚠ Warning!

The parking radar system is an auxiliary function for the driver and cannot handle all situations or road conditions. You are always responsible for driving your vehicle safely and complying with current laws and traffic regulations.

Shift to R gear and the system will automatically activate. Engage other gears and automatically deactivate.

Set up parking radar system


You can also click on the panoramic image interface ⚙ Icon settings, then click**Parking radar**Key settings for the following functions：

- **Trajectory line**：Enable/disable parking radar system trajectory line.

Note!

- When driving at a speed exceeding 15 km/h, the parking radar system automatically exits.

Indicator bar/sector area indicator

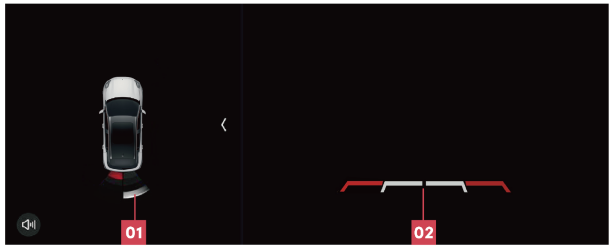


01 sector

02 Distance indicator bar

The highlighted sector area indicates that an object has been detected in that area. As the vehicle approaches the object, the highlighted sector area will change from white and yellow to red. Based on which side the object is detected, the fan-shaped area on that side will change color separately. You will hear an alarm sound, and the closer the vehicle is to an object, the higher the alarm audio rate.

The distance indicator bar in the camera view screen also changes color accordingly.

Parking radar position

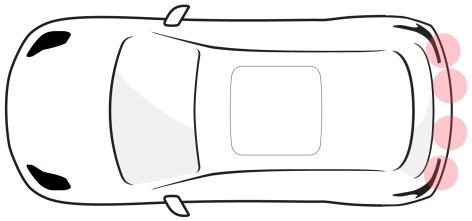

Please regularly clean the radar to ensure its normal operation. Please clean with water and neutral (special) vehicle cleaner.

Note!

- If the radar is blocked by factors such as dust, snow, or ice, it may cause the parking radar system to issue incorrect warning signals.
- If the vehicle is damaged, causing the radar to be misaligned, it will result in inaccurate measurements or incorrect alarms.

Limitations of park system

The park system has certain limitations:

- The system cannot detect objects high above the ground.
- Objects made of certain material or people wearing clothing made of certain fabrics may not be detected.
- Children or animals near the vehicle may not always be detected by the system.
- The system may not be able to detect lower objects such as chains, wire mesh, bushes, edges and corners of pillars, narrow surfaces, smooth inclined surfaces, parking locks, special parking space signs, etc.
- Objects that are flat on the ground, below the bumper, too close to the vehicle, or too far from it may not be detected by the system.
- The system shows the fixed obstacles identified by the radars when the vehicle passes by. If the obstacle moves later, the system will still alarm according to the location of the memorized obstacle.


⚠ Warning!

- The radars have blind spots where obstacles cannot be detected.
- Be aware of your surroundings while parking, including people or objects that may enter the vehicle's path.

ⓘ Note!

- In certain circumstances, the park system may give unexpected warning signals that can be caused by external sound sources that use the same ultrasound frequencies as the system. This may include such things as the horns of other vehicles, wet tires on asphalt, pneumatic brakes, motorcycle exhaust pipes, and other vehicles with similar ultrasound systems. This does not indicate a fault in the system.
- Park system may be interfered by radio. When the vehicle is close to communication base station or other places with strong electromagnetic radiation, the park system may not work.

Rear Cross Traffic Alert (RCTA)

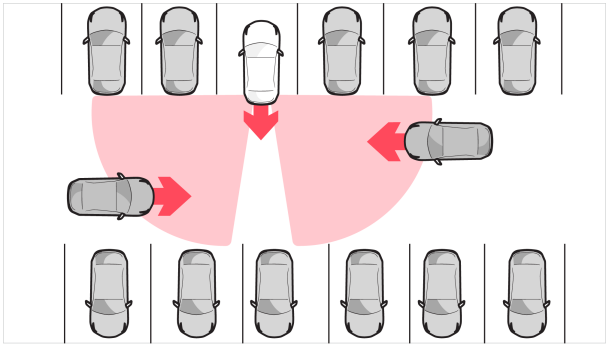

When you are reversing, RCTA will give an alarm if there is a target approaching behind the vehicle and there is a risk of collision.

When RCTA detects something (motor vehicle, motorcycle or electric vehicle, pedestrian) is approaching from the rear, you will be alerted by:

- Illuminating the symbol in the parking assist image on the center display.
- Providing an audible warning signal.
- The warning symbol in the outside rearview mirror is illuminated.

⚠ Warning!

- RCTA is an auxiliary function for the driver, it does not deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- RTCA does not eliminate the need for you to visually confirm the conditions around you, and make sure that you can safely reverse.
- As a driver, you are responsible for reversing safely.

Settings for Rear Cross Traffic Alert (RCTA)


You can activate/deactivate RCTA via the vehicle function interface on the center display , please refer to the *Vehicle function interface* (p. 68).

ⓘ Note!

- When SAP is disabled, RCTA is enabled when reversing.
- RCTA will be on/off accordingly when the parking assist function is enabled/disabled.

Limitations of Rear Cross Traffic Alert (RCTA)

The following is an example where the RCTA rear radar cannot detect an approaching vehicle until it is too close.

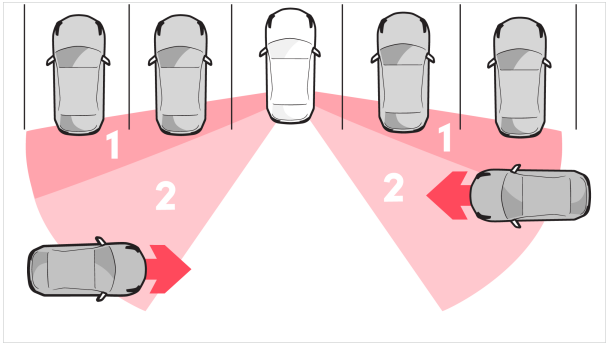

The car is parked in the parking space.

01 Blind area (sensors' field of view blocked)

02 Detected area

The function of RCTA may be affected in certain situations:


- Vehicles going very fast or very slow.
- Stationary targets.
- Bad weather such as rain and snow.

If there is a problem with rear radar, RTCA may fail to work properly. For details , please refer to the *Driver assistance system sensors* (p. 149).

Caution!

- Only a Lynk & Co Center can repair RTCA, otherwise RTCA may not service properly.

Rear collision warning (RCW)

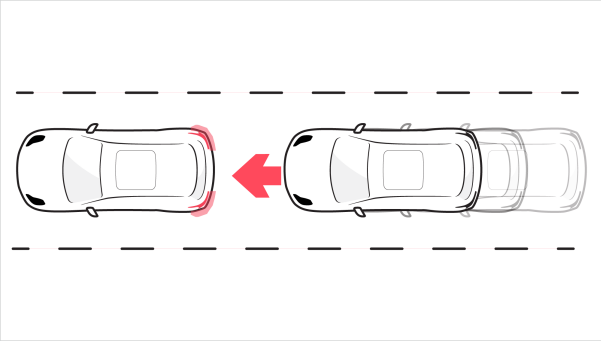

RCW monitors the target right behind the vehicle in real time. When it detects that a vehicle is approaching quickly and there is a risk of rear-end collision, it sends out an alarm message and turns on the hazard warning lights.

Setting the rear collision warning (RCW)

You can activate/deactivate RCW via the vehicle function interface on the center display , please refer to the *Vehicle function interface* (p. 68).

Warning!

- RCW is a supplementary aid and cannot deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- If there is a problem with the rear radar, RCW may fail to work properly , please refer to the *Driver assistance system sensors* (p. 149).


Caution!

- Only a Lynk & Co Center can repair RCW, otherwise RCW may not service properly.

Note!

- Place the gear lever in positions other than R and RCW is enabled.

Door Open Warning (DOW)

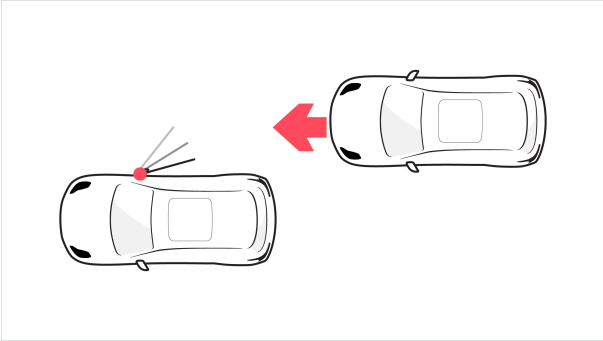

Within a few minutes after the vehicle is shut down, if it is detected that a target is close to the rear side of the vehicle and there is a potential risk of impact with an opened door, DOW will give an alarm to remind the driver of the danger.

When the detected target is in the warning range, the door is unlocked and there is a potential risk of impact, DOW will alert you in the following ways:

- Door not opened: the warning symbol on the outside rearview mirror staying on.
- Door opened: the warning symbol on the outside rearview mirror flashing with an audible warning.

⚠ Warning!

- DOW is an auxiliary function for the driver, it does not deal with all situations or road conditions. You are always responsible for driving safely and complying with current laws and traffic regulations.
- Although the vehicle is equipped with DOW, to ensure safety, you should observe the surrounding environment before opening the door.
- As the driver, you have full responsibility to ensure door opening in a safe manner.

ⓘ Note!

- DOW remains enabled for 3 minutes after the vehicle is shut down.

Setting the Door Open Warning (DOW)

You can activate/deactivate DOW via the vehicle function interface on the center display , please refer to the *Vehicle function interface* (p. 68).

Limitations of Door Open Warning (DOW)

The function of DOW may be affected in certain situations:

- Vehicles going very fast or very slow.
- Stationary targets.
- Bad weather such as rain and snow.

If there is a problem with rear radar, DOW may fail to work properly. , please refer to the *Driver assistance system sensors* (p. 149).

Note!

- Only a Lynk & Co Center can repair DOW, otherwise DOW may not service properly.

Direct tire pressure monitoring system (dTPMS)

Your vehicle is equipped with dTPMS. The system measures the vehicle's tire pressures. If one or more tires are significantly under-inflated, the tire pressure warning lamp in the instrument cluster illuminates with the corresponding warning message displayed.

Warning!

If the tire pressure warning symbol is illuminated, stop the vehicle in a safe place and check the tire as soon as possible. Driving with under-inflated tires is very easy to damage the tires, and even cause vehicle accidents due to tire blowout.

Caution!

dTPMS can alert you that the tire pressure is too low, but this is not a substitute for normal tire maintenance. You should check the tires of the vehicle regularly for signs of wear or damage.

Direct tire pressure monitoring system (dTPMS) failure

If the tire pressure warning lamp on the instrument cluster flashes for about 1 minute and then stays on, with a fault message prompted on the instrument cluster, there is a dTPMS failure. dTPMS failures may occur for a variety of reasons:

- A spare wheel is used.
- After wheel transposition, dTPMS sensor matching was not performed or the matching process was unsuccessful.
- One or more dTPMS sensors are missing or damaged.
- dTPMS sensor is interfered by nearby radio equipment.

Warning!

When the failure information about dTPMS is displayed on the instrument cluster, contact a Lynk & Co Center as soon as possible.

After the cold air pressure is inflated to the standard tire pressure value, the speed of 30km/h or more is driven for a few minutes, and the tire pressure is too low.

Driving tips

Inspecting before driving

⚠ Warning!

Always pay attention to the following before driving:

- Make sure that all lights and direction indicators are working properly.
- Ensure that all tire pressures are within normal range.
- Make sure that all windows are clean and give good visibility.
- Adjust the steering wheel, front seat, head restraint and outside rearview mirrors correctly.
- Make sure that no objects can interfere with the pedals.
- Secure all loads and other items carefully.
- Do not wear inappropriate shoes, such as high heels and slippers.
- Always check the area behind and around the vehicle.
- Use appropriate ISOFIX and fasten the seatbelt properly to protect children.

Driving through water

Caution!

Before wading, the following should be paid attention to:

- Check the water depth. If your vehicle is equipped with an intelligent start/stop system, disable the start/stop function.
- If you need to drive on roads with accumulated water, the driving speed should not be higher than the walking speed, otherwise the vehicle may be damaged.
- During driving in standing water, the water level must not be higher than the lower edge of the vehicle body. Please maintain a very low speed and do not shut down the engine. Extra caution should be exercised if it is essential to pass through flowing water.
- Please pay attention to the waves caused by vehicles ahead and oncoming vehicles. This may result in exceeding the maximum allowable water depth.

After driving through water and as soon as it is safe, perform the following checks:

- Lightly depress the brake pedal to dry the brakes and to check that they work properly.
- Verify the horn works.
- Turn the steering wheel to check if the power assist steering works.
- Check if the exterior lights work.

Caution!

- Make sure that no water enters the air filter as this may result in engine damage.
- Under no circumstances should you stop or reverse the vehicle, or shut down the engine in the water. If the engine shuts down in water, do not attempt to restart it, as this may lead to engine malfunction Please contact a Lynk & Co Center.
- Damage to any components due to water above the floor level, vapor lock or insufficient oil is not covered under warranty.

Economical driving

For economic driving, please pay attention to the following:

- During initial driving, bring the engine to an operating temperature by driving with a light foot on the accelerator pedal, rather than running the engine at idling speed. A cold engine consumes more fuel than a warm one.
- Drive the vehicle smoothly and avoid abrupt acceleration and deceleration. Keep enough distance from other vehicles to reduce braking times.
- Use engine braking to slow down when necessary without risk to other road users.
- Try to keep windows closed at high speeds.
- Correctly inflating the tires will reduce drag on the road and therefore improve the overall fuel economy.
- Extra weight can affect your fuel efficiency. Keep the vehicle clear of unnecessary items that can add weight.
- Get the vehicle serviced regularly to maintain engine efficiency and make sure of the correct engine oil.

Warning!

Never shut down the engine while the vehicle is moving, such as downhill. Important systems such as power steering and brake booster are deactivated when the engine is shut down, which may lead to accidents of personal injury or even death.

Winter driving

Using winter tires and anti-skid chains in winter road conditions can improve the driving performance of the vehicle significantly.

Warning!

- Be especially careful when driving on slippery roads. Avoid sudden acceleration, steering and braking.
- Do not enable the cruise control feature, otherwise accidents may occur, causing serious personal injury or even death.

Winter tires

Lynk & Co recommends using winter tires on snowy and icy roads conditions.

Warning!

- When using winter tires, please abide by local regulations.
- Winter tires with insufficient tread depth cannot provide adequate tire traction, which may result in accidents. Winter tires with tread depth less than half of the groove depth must be replaced.
- For safe handling, make sure that all four wheels are fitted with winter tires of the same tread design and depth.
- Do not exceed the maximum allowable speed for the winter tires installed.

Caution!

Choose snow tires or all-season tires of the same size and load grade as before.

Note!

- All-season tires can be used in addition to winter tires.
- Not all M+S rated tires (all-season tires) provide special winter performance. Only the tires having M+S and the mountain/ snowflake marking on the tire sidewall cab meet the snowfield traction performance standard.

Anti-skid chains

Note!

- Anti-skid chains are not included in the equipment scope of this vehicle. The following information is for reference only.

Anti-skid chains shall only be used on snow-covered roads at speeds not exceeding the manufacturer's speed limit.

Remove chains as soon as possible when driving on roads without snow.

Warning!

- For uncertainty about anti-skid chains, please consult a Lynk & Co Center for information. If a wrong anti-skid chain is used, it may cause serious damage to the vehicle and even lead to an accident.
- Do not use the parking assist when anti-skid chains are installed.

Caution!

- Anti-skid chains can only be installed on front wheels.
- Anti-skid chains may not be available for some sizes of wheels. For relevant information, it is recommended to contact a Lynk & Co Center.
- The vehicle handling can be adversely affected when driving with anti-skid chains.
- When using anti-skid chains, please avoid sharp turning or wheel locking.
- When using winter tires, please abide by local regulations.
- Follow the anti-skid chain manufacturer's mounting instructions.

Parking on hills

Warning!

Always apply the parking brake when parking on a slope. Leaving the vehicle in P mode is not sufficient to hold the vehicle in all situations.

- Parking on ramp with curb and headed uphill: Turn the front wheels away from the curb and let the vehicle roll backwards slowly until the front wheel rests against the curb.
- Parking on ramp with curb and headed downhill: Turn the front wheels toward the curb and let the vehicle roll slowly until the front wheel rests against the curb.
- Parking on ramp without curb headed uphill or downhill: Always turn the front wheels to the side of the road so that if the vehicle moves, it will roll off the road, not into traffic.

Vehicle loading

The load carrying capacity of your vehicle is determined by the number of occupants, the amount of load and the weight of any accessories that may have been installed.

The vehicle's handling and steering response may change depending on the weight and distribution of the load.

Warning!

- The maximum number of passengers allowed in this vehicle is 5.
- Overweight or improper loading may affect vehicle handling and stability, leading to car accidents, causing personal injury or death.

Trunk loading

Keep the following items in mind when loading the cargo compartment:

- Load the objects in the trunk against the backrest whenever possible.
- Center the loads in the cargo compartment.
- Heavy objects should be placed as low as possible. Avoid placing heavy loads on backrests.
- Cover sharp edges and corners with something soft.

- Do not put pets in the cargo compartment.

Your vehicle is equipped with a shelf in the cargo compartment for some light items such as clothing, backpacks, etc.

⚠ Warning!

- Do not place hard, heavy or sharp objects on the shelf.
- Do not place pets on the shelf.

Roof loading

The vehicle is equipped with roof rail that can carry loads. You can place goods on the roof rail that cannot be accommodated in the trunk, such as bulky luggage, bicycles, folding beds.

⚠ Warning!


Please observe the followings when using the roof rail to load goods, otherwise accidents and/or personal injuries may occur.

- Check the tightness of the roof rail regularly.
- Do not fix overload the roof rail.
- Please arrange the goods evenly while ensuring that the goods are fixed in place. Use luggage net to fix the goods as much as possible.
- Emergency braking should be avoided as much as possible during driving.
- Do not disassemble the roof rail frequently to avoid damaging the car paint.

IN CASE OF EMERGENCY

Jump starting

Jump starting

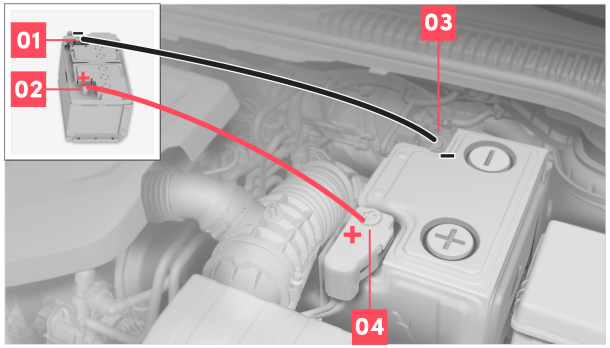

With the battery lid and battery fuse box cover removed

01 negative terminal on the booster battery

02 positive terminal on the booster battery

03 specified ground point on the vehicle's body

04 positive terminal on the discharged battery

⚠ Warning!

- Do not connect the jumper cable to the fuel system or any parts that move.
- Do not touch areas of the engine bay which might be hot.
- Do not use a booster battery of more than 12 V.
- Connect the jumper cables carefully to avoid short circuits with other components in the engine compartment.
- Never allow the two vehicles to be in contact during jump starting.
- Do not connect the negative cable directly to the negative terminal of the discharged battery.

With the ignition switched off and the hood opened:

1 Remove the engine compartment cover and the battery fuse box cover , please refer to the *Engine compartment*(p. 216).

2 Connect the red jumper cable to the positive terminal (2) on the booster battery.

3 Connect the other end of the red jumper cable to the positive terminal (4) on the discharged battery.


4 Connect the black jumper cable to the negative terminal (1) on the booster battery.

5 Connect the other end of the black jumper cable to the specified ground point (3) on the vehicle's body.

Caution!

Make sure the jumper cable and charging terminals are fixed securely so that there are no sparks during the starting attempt, causing electrical components to malfunction.

6 Start the engine in the vehicle with the charged battery. Without depressing the brake pedal of the vehicle with the discharged battery, the vehicle enters the ignition mode I by pressing the ignition switch, and then the vehicle enters the ignition mode II by pressing the ignition switch again.

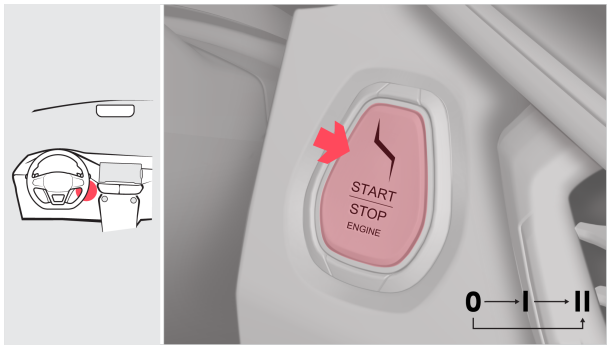

Note!

The pictures are only for illustration, please refer to the actual vehicle.

7 Press the brake pedal of the vehicle with the discharged battery and shift the gear lever into N position, and press the P button to shift the gear in P position, and start the engine of the vehicle with discharged battery.

8 When the engine has started, first remove the negative terminal (3) and black jumper cable. Then remove the positive terminal (4) and red jumper cable.

9 After successful jump starting, the engine of the vehicle must be kept running for a period of time before shutting down, otherwise it may be shut down again due to insufficient battery power level.

Warning!

- Batteries and related accessories contain harmful substances such as lead, which is harmful to human body, so clean your hands after handling the batteries.
- Avoid battery fluids. If battery fluid contacts eyes, skin, fabrics or painted surfaces, flush the affected area immediately with water and seek medical advice in time.
- If the battery is frozen, do not use a jumper cable to start the engine, as this may lead to explosion and personal injury. Frozen batteries must be replaced.


Caution!

Follow the above operating procedures strictly, otherwise the engine compartment may produce vibration and noise when starting the vehicle.

Towing

Towing the vehicle

Towing methods

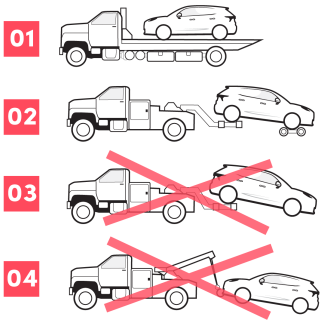

01 On a flatbed tow truck — Recommended.

02 With the rear wheels lifted and the front wheels on a towing dolly (off the ground) — Recommended.

03 Towed with the front wheels rolling backward — Wrong.

04 Lifted by the body/chassis parts, not by the wheels — Wrong.

⚠ Warning!

- No person or object should be behind the tow truck while the vehicle is being pulled onto the flatbed tow truck, otherwise it may lead to serious personal injury or even death.
- Never ride in a vehicle that is being towed with the front wheels lifted or on a flatbed tow truck, otherwise it may lead to serious personal injury or even death.

Caution!

Lynk & Co recommends towing the vehicle with a flatbed tow truck. Tow with all four wheels off the ground.

Flat towing

Caution!

If you can't find a tow truck or towing dolly, the vehicle can also be towed with the wheels on the ground. The following precautions must be observed:

- Do not tow the vehicle with the driving wheels rolling backward. Otherwise, the transmission could be seriously damaged.
- When towing forward, pull slowly and smoothly. Do not exceed the maximum allowable towing speed of 50 km/h and the maximum allowable towing distance of 50 km, otherwise the transmission could be seriously damaged.

- Never take the remote control key out of the vehicle when it is being towed.

- Please release EPB.
- During towing, put the gear lever into N position.
- Be prepared to apply the brakes to stop the vehicle being towed at any time.

⚠ Warning!

Drivers without relevant experience must not carry out towing operation.

Caution!

If, after a serious collision, you cannot shift into N gear, or from P into another gear, or turn the steering wheel, or the wheels are locked, the vehicle cannot be flat-towed, otherwise the vehicle may be seriously damaged.

Handling of vehicle with a discharged battery

If the vehicle is disabled by a discharged battery, Lynk & Co recommends to use a booster battery for jump starting your vehicle.

Caution!


Do not attempt to start the vehicle by towing, otherwise the vehicle may be seriously damaged.

Note!

It is not possible to shift out of P gear manually when the vehicle battery is fully discharged. Use a booster battery or contact a towing service.

Using the towing eyelet


1 Take out the towing eyelet from its storage area in the cargo compartment.

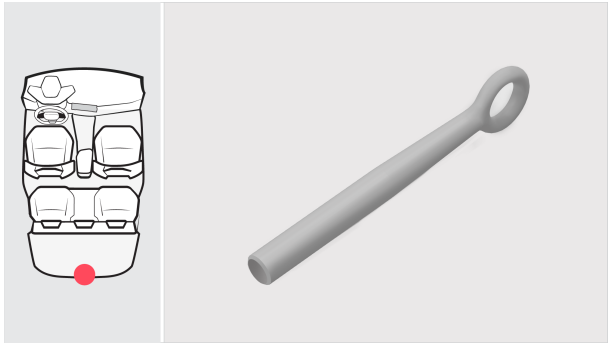

Note!

The towing eyelet is placed in the on-board tool kit under the cargo compartment.

2 Open the traction cover as shown below.

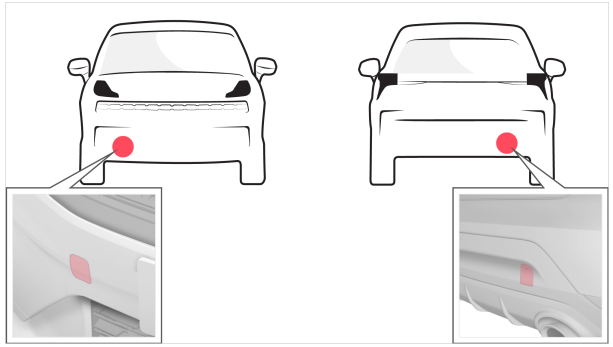

3 Begin by screwing the towing eyelet in place by hand, then use the wheel wrench to securely tighten it.

After use, unscrew the towing eyelet and put it back in the storage location. Refit the cover into place.

ⓘ Note!

Safety chain devices must be used for any form of towing and national/provincial and local regulations shall be complied with.

ⓘ Note!

In certain conditions, the towing eyelet may be used to pull the vehicle onto a flatbed tow truck.

- The vehicle's position and ground clearance determine if it can be pulled up onto a flatbed tow truck using the towing eyelet.
- If the angle of the tow truck's ramp is too steep or the ground clearance under the vehicle is insufficient, damage could occur by attempting to pull the vehicle using the towing eyelet.
- If necessary, lift the vehicle using the tow truck's lifting device.

Recovering the vehicle

If your vehicle is stuck in sand, snow, or mud. keep the procedures below in mind:

1 Make sure the area in front and behind of the vehicle is clear of obstructions.

2 Turn the steering wheel right and left to clear an area around the front wheels.

3 Engage in D or R gear to rock the vehicle slowly forward and rearward.

4 If the vehicle cannot be freed after a few tries, contact a professional towing service.

Place wooden blocks, stones or equivalent under the front wheels to help increase the traction force.

⚠ Warning!

- When moving the vehicle forward and rearward to get out of a pit, the vehicle may suddenly rush forward or backward when it gets out. The driver must always be careful in this process to avoid personal injury or death.
- Do not shift gear when the driver depresses the accelerator pedal. Otherwise, the vehicle may accelerate unexpectedly, causing personal injury or death.


Flat tire

Tools and spare wheel

Tools

The tools are placed in the trunk interior-floor storage, including:

- Wrench
- Jack
- Jack rocker
- Towing eyelet
- Small tweezer to remove the wheel bolt's plastic cap

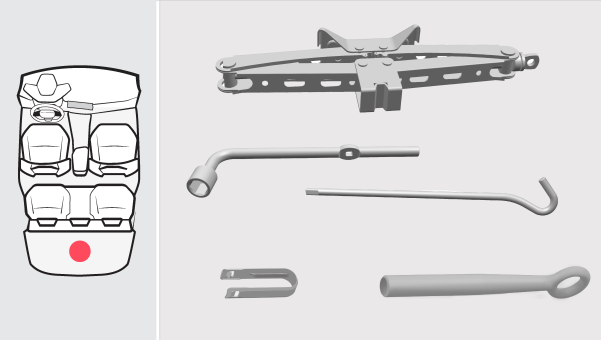

Warning!

- The jack supplied with the vehicle is only designed for changing wheels on this model. Never use it for lifting heavier vehicles or other loads, otherwise accidents may occur, resulting in personal injury.
- Never allow any part of your body to be extended under a vehicle supported by a jack. If work has to be done under the vehicle, make sure it is safely supported on stands or use a workshop hoist, otherwise accidents may occur, resulting in personal injury.
- Do not lift the vehicle with someone inside, otherwise accidents may occur, resulting in personal injury.

Caution!


The tools and jack must be returned to their correct places after use. Otherwise, damage could occur in a sudden stop.

Note!

The pictures are only for illustration, please refer to the actual vehicle.

Spare wheel

Take out the spare wheel

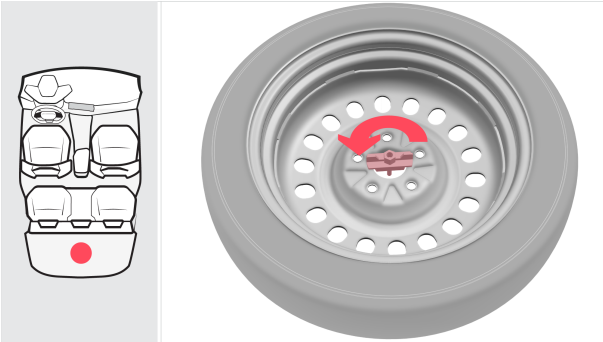

1 Lift the floor of the trunk and take out the on-board tool box from the trunk.

2 Take out the spare wheel fixed in the cargo compartment.

⚠ Warning!

- Strictly follow the instructions given on the warning label of the spare wheel. Failure to do so may result in accidents and personal injury.
- Never drive faster than 80 km/h with a spare wheel on the vehicle. The vehicle's handling may be affected when when the vehicle speed exceeds 80 km/h.

After the spare wheel is installed, some driver assistance systems may not work properly. Please drive carefully. Please replace with the specified tire as soon as possible, otherwise it may cause accidents and casualties.

⚠ Warning!

Never drive the vehicle with more than one spare wheel fitted.

Removing a road wheel

⚠ Warning!

Observe the following warning information before removing a wheel:

- Never change the wheel when the vehicle is on a slope, ice or slippery areas.
- Never place anything between the jack and the ground, or the jack and the vehicle.
- Do not start or run the engine while the vehicle is supported only by the emergency jack.
- Never allow any part of your body to be extended under a vehicle supported by a jack.
- Do not change the wheel with someone in the vehicle.
- Do not touch the surrounding area of hub or brake immediately after the vehicle is running in order to avoid scalding.

1 If you change your tire at night or in a traffic busy place, turn on the hazard warning light, wear a high-visibility vest and set a triangle warning sign facing towards oncoming traffic.

2 Apply the parking brake or engage in P position.


3 Place chocks in front of and behind the wheels which will remain on the ground. Use heavy wooden blocks or stones for example.

4 Take out the tools from the tool kit under the cargo area floor.

5 Use on-board tools to remove the plastic nuts from the wheel bolts.

6 Loosen the wheel bolts ½-1 turn counterclockwise with the wheel wrench.

7 Turn the jack clockwise to raise the jack until the jack head fits snugly the jacking points. Lift up the vehicle slowly.

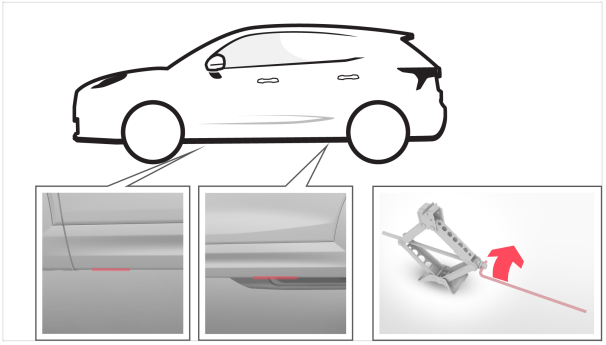

The sill cutouts are the marks for the jacking points

Caution!

Make sure the vehicle is lifted using the approved jacking points only. Failure to follow this could cause vehicle damage.

8 After the vehicle is lifted and the wheel is off the ground, remove the wheel bolts and remove the wheel.

Installing a road wheel

1 Clean the contact surfaces between the wheel and hub.

Caution!

In case of emergency, cloth or paper towel can be used for cleaning. However, scraper or wire brush must be used to remove any rust or dirt.

2 Before installing the wheel, pre-tighten the wheel bolts.

Note!

When the bolt is to be temporarily fixed, remove the dirt and foreign matter in the thread of the wheel mounting bolt.

3 Lower the vehicle so that the wheel cannot rotate.

Warning!

When lowering the vehicle, pay attention to the surrounding situation, to prevent operators and other people around from being pinched.

4 Tighten the wheel bolts as shown.



Warning!

- The wheel bolts must always be tightened to the correct specification, otherwise accidents and personal injury or death may occur.
- After replacing the tire, you should tighten the nut to the standard value as soon as possible by using the torsion wrench at Lynk & Co Center.

5 Refit the plastic caps on the wheel bolts.

6 Return the tools and jack to their correct places under the cargo area floor after use.

High-visibility vest and warning triangle

In case of an emergency or a breakdown that causes the car stranded in traffic, you should set out the warning triangle to alert other road users and wear a high-visibility vest for personal safety. Follow local traffic regulations related to the use of high-visibility vest and warning triangle.

High-visibility vest

The high visibility vest placed in the glove box increases your recognition to oncoming traffic and helps reduce the risk of potential accidents. In case of an emergency stop in traffic, put on the high-visibility vest before getting off the car.

Caution!


The high-visibility vest must be discarded and replaced with a new one under the following conditions:

- Scratched reflective strips.
- Dirty reflective strips, which cannot be cleaned.
- Poor reflective effect or not reflecting light.

Warning triangle

The warning triangle is located on the right or rear side of the on-board tool storage box under the rear compartment floor.

1 Take the warning triangle out of the case and unfold it.

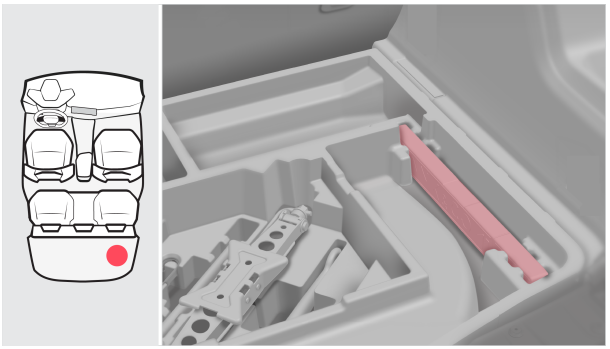


Warning triangle in the tool storage box

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

2 Fold out the support legs.

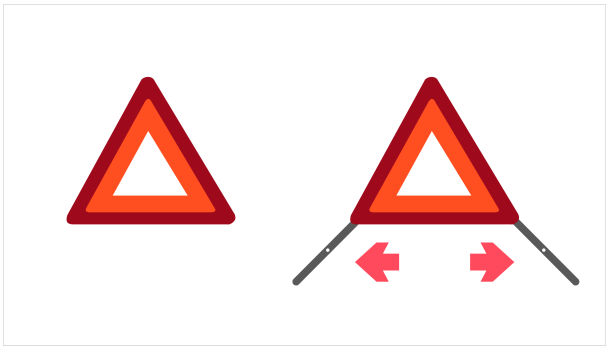

Fold out the support legs

3 Put the warning triangle in a suitable place facing towards oncoming traffic on the same side of the road.

Note!

It is recommended that you set the position of warning triangle correctly according to different driving roads and weather conditions:

- On conventional roads, the warning triangle shall be placed 50-100 m behind the vehicle.
- On highways, the warning triangle shall be placed over 150 m behind the vehicle.
- In rainy and foggy weather, the warning triangle shall be placed over 200 m behind the vehicle.

Overheating

If the vehicle overheats

The following conditions may indicate overheating of the vehicle:

- The pointer of the engine coolant temperature gauge is in the red area or reduced engine power is felt.
- Warning message of high coolant temperature is displayed on the instrument cluster.
- Steam is emitted from under the hood.

⚠ Warning!

- Do not continue to drive if your vehicle overheats. Doing so could cause engine damage or a vehicle fire.
- Do not remove the coolant expansion tank cap while the engine is hot. When the coolant expansion tank cap is removed, hot water may be sprayed out, causing personal injury.

1 Move the vehicle safely off the road, apply the parking brake and move the gear lever to the P position.

2 Turn off the air conditioning.

3 Check for steam or coolant escaping from the engine compartment before opening the hood.

⚠Warning!

Do not open the hood until no steam or coolant can be seen, otherwise there is a risk of being scalded.

4 Visually check the coolant level.
If the coolant level is correct, the overheating may be caused by malfunction of the radiator fan or a line failure. If the coolant level is low, contact a Lynk & Co center for refilling.

Emergency call

SOS(Emergency call)



SOS button (emergency call)

Activate the SOS function

There are two ways to activate SOS:

- **Manually SOS activation:**Press and hold the SOS button for about 2 seconds and release it to manually activate the SOS function.
- **Automatic SOS activation:**The SOS function is automatically activated when either of the car's airbags or pretensioners is triggered.

When the SOS function is activated, the vehicle's location is sent to the customer contact center, and an SOS call is made to the customer contact center, where the occupant can seek emergency assistance directly from the customer contact center. If the Customer Contact Center does not receive any response from the occupants, the Customer Contact Center will provide appropriate assistance (ambulance, police, etc).

⚠ Warning!

Do not remain in the vehicle after pressing the SOS button in the following cases, as this may result in an accident or cause personal injury:

- After an accident, smoke is generated inside or outside the vehicle due to fire, etc.
- The vehicle is in a dangerous position on the road.
- Other road users do not see the vehicle or have difficulty seeing the vehicle, especially when the outside light is dim or visibility is low.

! Caution!

In the event of the following (including but not limited to) which may cause SOS to not work properly, you can call the emergency number in other ways(mobile phones, etc):

- Beyond the scope of SOS services.
- Faulty or damaged audio equipment.
- The signal transmitting device is interfered with or shielded.
- GPS equipment is damaged or areas with weak signals (e.g., underground garages, tunnels, mountainous areas, etc.) may not be able to locate the vehicle's location.
- Emergency rescue services cannot be obtained due to riots, fires, floods, storms, explosions, wars, government actions, orders of judicial administrative organs, social circumstances and other force majeure factors.

Emergency equipment

First-aid kit and fire extinguisher

First-aid kit and fire extinguisher can be used in emergency situations. Observe relevant local regulations when in use.

First-aid kit

The first aid kit contains emergency medical supplies and tire pressure gauge, it is stored in the glove box and can be seen by opening the glove box.

Insert the tire pressure gauge into the tire valve, and the tire pressure value is displayed at the rear of the tire pressure gauge.

⚠ Warning!

- Check the expiration date of items regularly and replace them if necessary.
- The first aid kit can be used to stop bleeding in an emergency, please seek medical attention as soon as possible. In an emergency, please contact emergency personnel for treatment immediately.

Fire extinguisher

Fire extinguisher is placed in the front passenger's feet space. Familiarize the operations before using the fire extinguisher and read usage instructions on the fire extinguisher carefully.

- Remove the fire extinguisher from the carpet when in use.
- After use, attach the surface that attaches to the hook & loop to the carpet to make sure it is secured in place.

⚠ Warning!

- If the fire extinguisher is not secured correctly, it will be thrown around in the vehicle and cause injury when the vehicle accelerates suddenly, brakes and involves in a traffic accident.
- The fire extinguisher must be replaced after use or expiration date is due.
- The fire extinguisher must comply with local regulations.
- in case of an emergency, please ensure your own safety first, then organize fire fighting, and contact the fire department.

High-visibility vest and warning triangle

In case of an emergency or a breakdown that causes the car stranded in traffic, you should set out the warning triangle to alert other road users and wear a high-visibility vest for personal safety. Follow local traffic regulations related to the use of high-visibility vest and warning triangle.

High-visibility vest

The high visibility vest placed in the glove box increases your recognition to oncoming traffic and helps reduce the risk of potential accidents. In case of an emergency stop in traffic, put on the high-visibility vest before getting off the car.

Caution!


The high-visibility vest must be discarded and replaced with a new one under the following conditions:

- Scratched reflective strips.
- Dirty reflective strips, which cannot be cleaned.
- Poor reflective effect or not reflecting light.

Warning triangle

The warning triangle is located on the right or rear side of the on-board tool storage box under the rear compartment floor.

1 Take the warning triangle out of the case and unfold it.

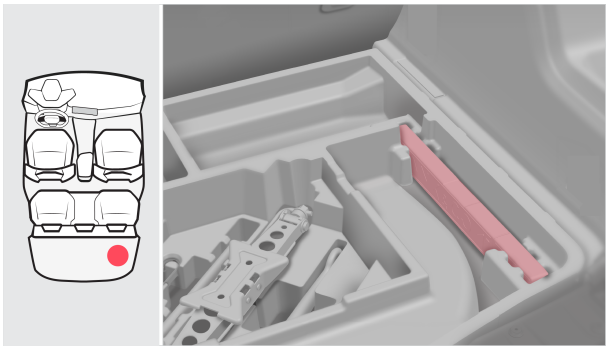


Warning triangle in the tool storage box

Note!

- The pictures are only for illustration, please refer to the actual vehicle.

2 Fold out the support legs.

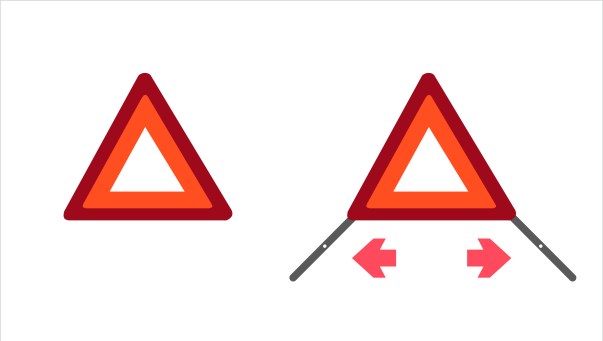

Fold out the support legs

3 Put the warning triangle in a suitable place facing towards oncoming traffic on the same side of the road.

ⓘ Note!

It is recommended that you set the position of warning triangle correctly according to different driving roads and weather conditions:

- On conventional roads, the warning triangle shall be placed 50-100 m behind the vehicle.
- On highways, the warning triangle shall be placed over 150 m behind the vehicle.
- In rainy and foggy weather, the warning triangle shall be placed over 200 m behind the vehicle.

MAINTENANCE AND SERVICE

Information about maintenance and service

Storing Vehicles

The vehicle should be stored in a cool, ventilated, clean and dry environment. If the vehicle is parked in a closed and humid environment for a long time, it will accelerate the rust and aging of vehicle parts. Please perform regular maintenance on the vehicle in time.


Breaking-in period

In order to extend the service life of your vehicle and obtain better vehicle economy, the following matters shall be observed during the initial 2,000 km driving period:

- Do not run the engine at high speed in N gear.
- Avoid accelerating with full throttle when starting and in any gear position.
- Avoid low speed or super high speed for a long time when the vehicle is fully loaded.
- Avoid emergency braking during driving.
- Vehicle should be driven on flat roads and avoid muddy or sandy roads.
- Avoid driving at a fixed speed or engine speed for a long time.

Fuses

Fuses are designed to protect the electrical components and circuits in your vehicle from a short circuit or overloading. The way to check the fuse is to check the wire inside the fuse. If a fuse is blown, the component (s) and systems protected by that fuse will not work correctly, and the fuse shall be replaced.

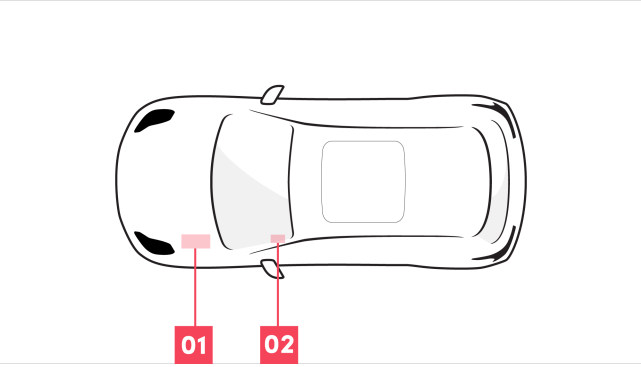

01 Fuse box in the engine compartment

02 Fuse box on left side of instrument panel

Caution!

Keep the fuse boxes free of contamination and moisture. Otherwise, electrical components or systems could be damaged.

Fuse box in the engine compartment

The fuse box in the engine compartment (EJB) is mounted on the left side of the engine compartment. The fuse can be seen by removing the engine compartment cover, loosening the buckle of the fuse box cover and removing the fuse box cover , please refer to the *Engine compartment*(p. 216).

Fuse box on left side of instrument panel

The fuse box (CJB) in the passenger compartment is located on the left side of the instrument panel. The fuse can be seen by opening the protective cover.

Replacing a fuse

1 Secure the vehicle to prevent it from slipping.

2 Turn off the ignition switch (ignition switch to position 0) and all electrical equipment.

3 Locate the fuse in the engine compartment or under the driver seat by referring to the fuse chart.

4 Pull out the fuse to check if the curved wire is blown.

5 If blown, replace it with a new fuse of the same amperage.

If the new fuse is blown repeatedly, there is a fault in the circuits. Please contact a Lynk & Co Center for inspection.

⚠ Warning!

- Do not operate or bridge a faulty fuse, or replace it with a fuse of higher amperage than the specified value or other items. Otherwise, the cable may be overloaded, causing serious damage to the electrical system and even causing a fire.
- Be sure to replace the faulty fuse with a new dedicated fuse of an appropriate current value.

! Caution!

- Make sure that moisture does not enter the fuse box when the cover is opened.
- When closing the cover, make sure it is correctly placed on the fuse box. Otherwise, moisture or dirt will affect the function of the fuse.


ⓘ Note!

All fuse operations should be operated by professionals at the Lynk & Co center.

Read the VIN from a diagnostic tool

VIN can be read via a diagnostic tool.

1 Connect the On-Board Diagnostics (OBD-II) socket.

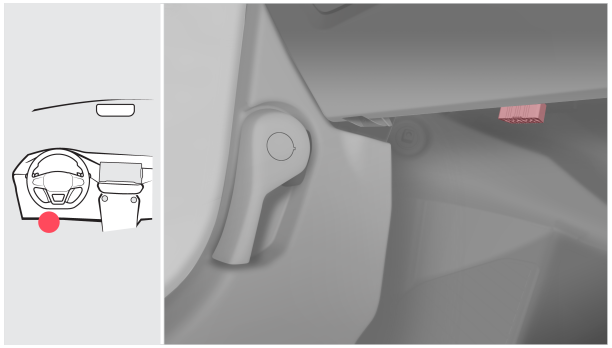

OBD-II socket located under lower left of the dashboard

2 Connect a Lynk & Co authorized diagnostics system to the OBD-II socket.

3 Switch the ignition on.


4 VIN is read automatically by the diagnostics system.

⚠ Warning!

- Do not connect wireless plug-in devices to the OBD-II socket. Devices from unauthorized third parties may gain access to vehicle data, causing performance degradation of safety-related systems. Only devices authorized by a Lynk & Co Center is allowed to connect to the OBD-II socket.

Vehicle Care

Engine compartment

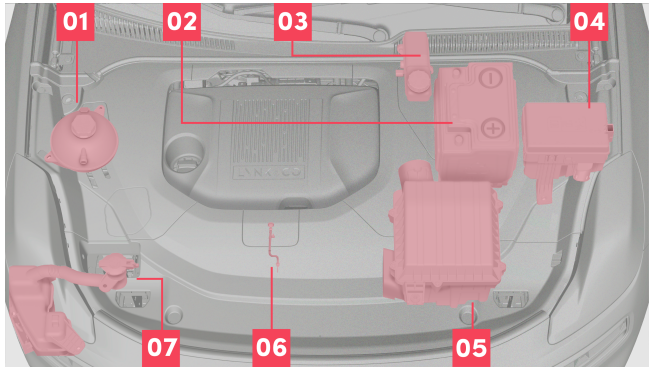

01 Coolant expansion tank

02 Batteries

03 Brake fluid reservoir

04 Fuse box in engine compartment (EJB)

05 Air filter

06 Engine oil dipstick

07 Washer fluid reservoir

⚠ Warning!

- Maintenance work on a vehicle requires special skills. If you lack sufficient knowledge, experience, the proper tools or equipment to do the work, Lynk & Co recommends taking your vehicle to a Lynk & Co Center for help.
- The ignition switch must always be turned off (ignition mode 0) before performing any operations in the engine compartment. Failure to do this could result in personal injury.
- Remove all jewelry (especially rings, bracelets, watches, and necklaces) and keep your hands and clothing away from drive belts, pulleys and fans. Fans may start at any time and can operate even if the engine has stopped. Failure to do this could result in personal injury.


ⓘ Note!

- The shape of engine compartment may be different for vehicles sold in different regions and at different times. Please refer to the actual vehicle.
- Vehicles equipped with different engine models may have different engine compartment designs, please refer to the actual vehicle for details.

Opening the hood

Make sure that all obstructions are removed from the hood opening before opening the hood.

1 Open the driver door and pull the hood release handle under the instrument panel on the driver's side twice.

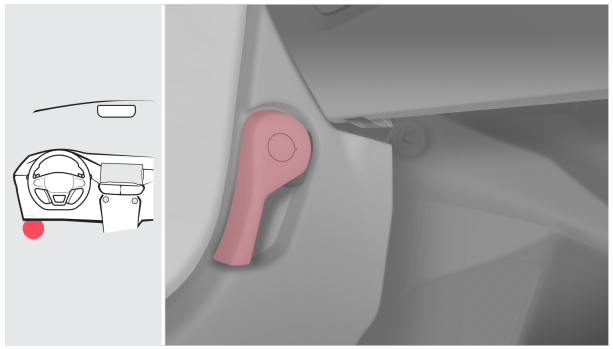

Hood release lever located below the driver's side instrument panel

2 Lift up the hood.

⚠ Warning!

- Do not open the hood when the engine is overheated or the engine compartment is on fire, otherwise you may be exposed to high-temperature gas or other leaked fluid, and which may lead to personal injury. The hood should not be opened until the overheated engine has cooled down. If the engine compartment is on fire, ensure that the hood remains closed and notify the firefighters.
- Some components in the engine compartment may be very hot, such as engine, radiator and exhaust system components. Do not touch them casually, or personal injury may occur.


Removing the engine compartment cover

1 Pry the rear engine compartment cover by using proper tools.




Engine compartment cover, rear

2 Loosen 1 locking clip securing the middle left cover.

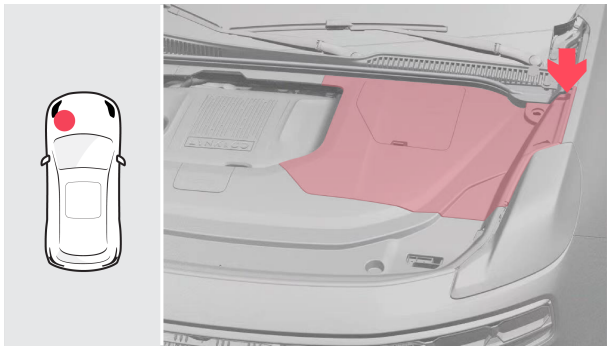

Remove the middle left cover

3 Loosen 1 locking clip securing the middle right cover.

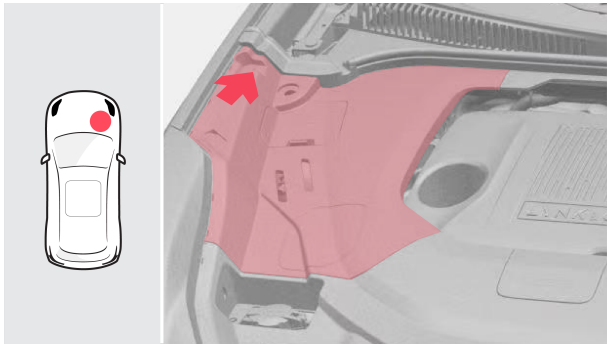

Right center decorative cover

4 Lift and remove the engine compartment cover.

Installing the engine compartment cover


Install the engine compartment cover in the reverse order.

! Caution!

After installing the engine compartment cover, make sure the installation is secure.

Removing the battery lid

1 Release the clips shown in the figure.

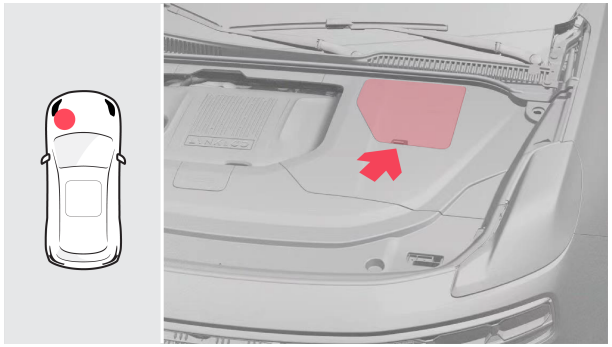

Battery lid

2 Lift up the lid and remove it from vehicle.

Closing the hood

1 Pull down the hood and overcome the supporting force from the inflatable support rod.

2 Then, at a height of about 30cm, apply a little force to allow the hood to fall down and lock.

⚠ Warning!

- Before driving, make sure that the hood is completely closed and locked. Otherwise, the unlocked hood may suddenly open and block the line of sight, causing an accident.
- Before closing the hood, make sure there are no obstructions present in the hood opening and no gloves, rags or any combustible materials left in the engine compartment. Failure to do this may cause a fire and personal injury.

! Caution!

- If the hood is not tightly closed, it needs to be re-opened, and the closing force should be slightly increased.
- The closed hood should be flush with the adjacent body, and the door opening indicator on the instrument cluster should be off.

Engine oil

Engine oil has a great influence on engine performance and life. To ensure proper engine performance and service life, special attention must be paid to the condition of the engine oil. Following these simple and important steps will help protect your vehicle:

- Use engine oil that meets the appropriate specifications and of the correct viscosity level.
- Check the engine oil level regularly and maintain the correct oil level.
- About oil maintenance interval, it is recommended to contact Lynk & Co center for consultation.
- Be sure to dispose of engine oil properly.

! Caution!

- Never use inferior motor oil that is not certified by Lynk & Co, as this may lead to engine malfunction or damage. Damage or malfunctions caused by poor oil that not certified by Lynk & Co or by mixing additives which not certified by Lynk & Co are not covered by the Lynk & Co warranty.
- Not checking the oil level regularly can result in serious engine damage if the oil level becomes too low.

ⓘ Note!


- If you need to replace the engine oil/oil filter, please go to a Lynk & Co Center.

Checking engine oil

Before checking the engine oil level, make sure that the vehicle is on a level ground, and switch the engine off after warm up and wait at least 15 minutes (for the oil to drain into the oil pan). If you read the oil level immediately after the engine is shut down, you will not be able to get an accurate oil level reading.

Please check the engine oil level with the dipstick.

1 Remove the dipstick cover in the engine compartment.

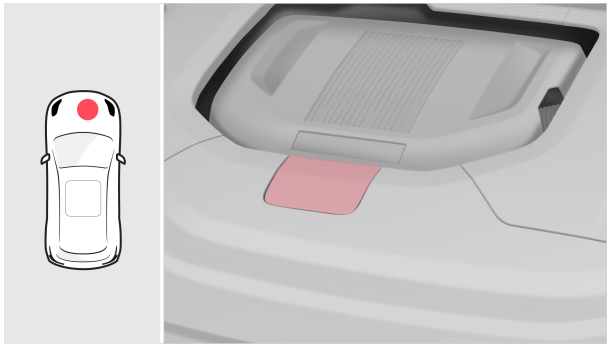


Dipstick cover in engine compartment

2 Withdraw the dipstick from the engine compartment and wipe it clean.

⚠Warning!

Do not touch the blade with your hand, or you may be severely scalded.

3 Reinsert the dipstick and push fully down, then pull it out again to visually check the oil level. The oil level must be between marks **MIN** and **MAX**.

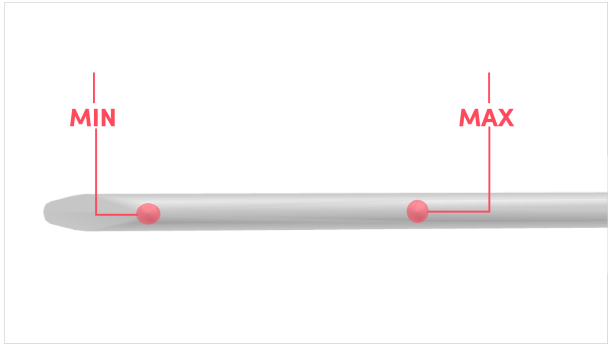

Engine oil dipstick

4 If the oil level is near or below the MIN mark, please add oil slowly. Be careful not to add too much.

Caution!

The oil level between the MIN and MAX marks indicates a normal amount of oil. Never add oil to above the MAX mark. This could cause an increase in oil consumption and may result in engine damage.

Note!

- In certain conditions the oil can condensate and be visible as an oil colored foam in the oil filling channel. This is normal, the foam will dissolves when the engine is running.

5 Recheck the oil level and add more oil if necessary until the level is above the middle of the two marks.

Brake fluid

Remove the battery cover on the left side of the engine compartment, and you can see the brake fluid reservoir., please refer to the *Engine compartment*(p. 216)



Check the brake fluid level to ensure that the level is between the MIN and MAX marks.


The brake fluid is recommended to be replaced by a Lynk & Co Center. The Lynk & Co Center has professional technicians who are familiar with the procedure and have the necessary tools and spare parts as well as the proper facilities for disposing of the old fluid.

It is recommended to use the genuine DOT4 brake fluid approved by Lynk & Co. Be sure to use newly produced and unused brake fluid.

⚠ Warning!

- Do not drive the vehicle if the brake fluid level is below the MIN mark on the reservoir. If the brake fluid level drops significantly, the brake system may be malfunctioning. Park the vehicle at a safe place immediately and contact a Lynk & Co Center.
- Brake fluid is toxic. Keep containers sealed and out of the reach of children. If accidental consumption is suspected, see a doctor for medical assistance immediately.
- If brake fluid comes into contact with skin or eyes, rinse immediately with plenty of clean water, and seek medical attention immediately.

Coolant fluid

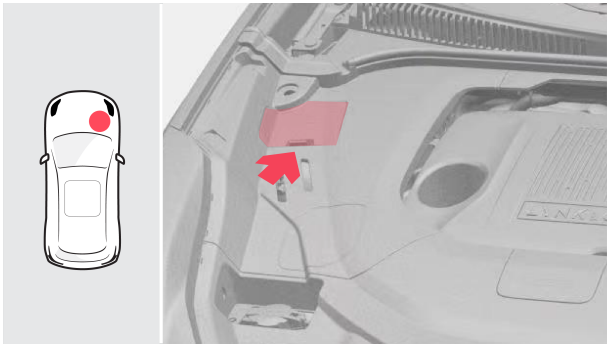

Press the unlocking clip to remove the coolant replacement cap and see the engine coolant expansion tank.



Do not open the expansion tank cap when the coolant is still hot after the engine is shut down.



Engine coolant expansion tank

The coolant level should be checked occasionally while the vehicle is parked on a level ground and the engine is cold to make sure the coolant level is between the MIN and MAX marks.

About the coolant fluid maintenance interval, it is recommended to contact Lynk & Co center for consultation.

⚠ Warning!

Do not remove the engine coolant expansion tank cap while the engine is warm. Wait until the engine cools. Failure to do this could result in personal injury.

! Caution!

Do not remove the engine coolant expansion tank. A proper amount of coolant must only be filled by a Lynk & Co Center.

ⓘ Note!

Please follow the relevant environmental protection laws to dispose of the used coolant.

Washer fluid

1 Open the hood.

2 Open the washer reservoir cap.



Note!

The pictures are for illustration only, please refer to the real vehicle.

3 Pour the specified washer fluid into the reservoir opening.

Caution!

- Do not mix water with ready-to-use washer fluid. Water may cause the washer fluid to freeze and damage the washer fluid reservoir and other components of the washer system.
- Use washer fluid with solvents when the temperature is below freezing to avoid freezing in the pump, reservoir and hoses.


4 Close the reservoir cap and the engine hood.

Wiper blades

If the rubber is found to be hardened or cracked, or if the wiper leaves a scratch on the windscreen or cannot clean a certain area, the wiper blade needs to be replaced.

If the wiper or windshield is covered or frozen by ice and snow, clean the ice and snow on the wiper and windshield before use the wiper, to avoid damaging the wiper. Wipers shall not be used when the windshield is dry or with hard object on the surface, otherwise the wiper blades and windscreen may be damaged.

Before replacing the wiper blades, make sure the wiper blades are in the service position.

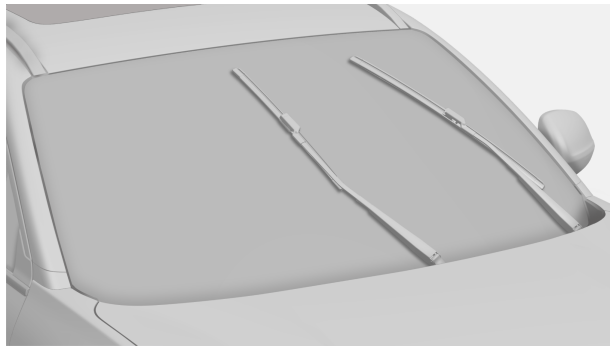

Caution!

Before selecting the service position, make sure the wiper blades are not frozen to the windscreen.

The service position can be used in the following situations:

- Changing or cleaning the wiper blades.
- Cleaning the windscreen.
- Prevent the wiper blades from freezing onto the windscreen.

Caution!

- Oil, silicon and petroleum products tend to weaken the wiping effect of the wiper blades. Clean the wiper blades in warm soapy water and check their status regularly.
- Use only wiper blades of the same specifications as the original ones.

Activating/deactivating the service position

When the vehicle is stationary and the windshield wiper is off, quickly move the wiper paddle down to the single wiping position for about 2 s after turning off the ignition to enable the wiper service position.

When the front windshield wiper/washer function is activated, the wiper blade returns to its original position.

Caution!

If the wiper arms in service position have been folded up from the windscreen, they must be folded back onto the windscreen before the wipers are allowed to return to their original position. Otherwise, hood paint and wiper damage may occur.

Bulbs

Safe driving depends on proper exterior lighting and signaling. It is therefore important that all bulbs and light assemblies are working correctly at all times.


All the LED lights, interior lighting and some external lighting replacement require special tools/skills. If you need to replace the lights, please go to a Lynk & Co Center.

Note!

Temporary fogging may occur in the lampshades of exterior lights when there is a temperature difference between the inside and the outside of the lampshades, such as in the rain or in a low-temperature exposure. This is natural phenomenon. Fog will dissipate when the lights are turned on for a short time or when the vehicle is driven to a non sun exposed area. If not, please contact a Lynk & Co center.

Vehicle batteries

The battery is used to drive the starter and other electrical equipments in the vehicle.

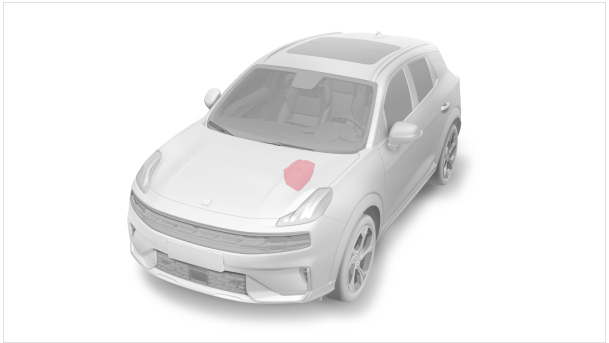

Batteries

The battery should be replaced by a Lynk & Co center. The service life and function of the battery is influenced by factors such as the number of starts, discharging, driving style, driving conditions and climate conditions.


- Check that the cables to the battery are connected correctly and tightened properly.
- If the battery is discharged fully for a number of times, its service life may be shortened. Keeping the battery fully charged helps to prolong its service life.
- The starting ability of the battery decreases over time. It may be necessary to recharge the battery if the vehicle has not been in use for a long time.

⚠ Warning!

All work on batteries requires professional knowledge. If you have any questions, please contact a Lynk & Co Center.

Battery charging

Remove the battery cover on the left side of the engine compartment,the battery can be seen , please refer to the *Engine compartment*(p. 216).

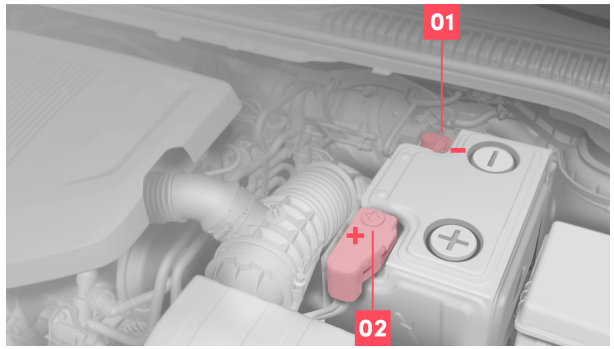

01 Negative charging point

02 Positive charging point

⚠ Warning!

Never use the negative terminal on the battery while connecting a jumper cable or a battery charger. Only the specially designed negative charging point can be used as the ground point (as indicated above). Failure to follow this could result in an explosion.

⚠ Warning!

During the charging process, in order to avoid short circuit, please strictly follow the following items:

- Ensure that the positive terminal of the connected battery is not in contact with vehicle components.
- Never place metal objects or tools on the battery.

Caution!

Only modern battery chargers with controlled charging current can be used to charge the battery. Quick charge functions should not be used as it damage the battery.

Safety warnings for handling batteries



When working near or handling the battery, make sure suitable eye protection is worn to protect the eyes from acid splashes.



Consult the manual for information before handling the battery.



To prevent risk of injury, do not allow children near the battery.



The battery contains acid which is extremely corrosive and toxic.



Do not allow open flames or other sources of ignition near the battery, as the battery may emit explosive gases.



Be aware that the battery may emit explosive gases.



The battery must be correctly recycled.



"The used battery can not be discarded carelessly, which is harmful to the environment, so it must be recyled in an environmentally safe way."

⚠ Warning!

- Do not let battery fluid touch eyes, skin, fabrics or painted surfaces. The battery contains sulphuric acid. If contact occurs, flush the affected area immediately with water. Seek for medical aid immediately.
- Never expose the battery to an open flame or an electric spark as the battery produces explosive, flammable gas. Failure to follow this could result in an explosion.
- Always wear suitable eye protection and remove all jewelry when working on or near a battery. Failure to do this could result in personal injury.
- Battery terminals and related accessories contain lead and lead compounds. Wash hands after handling.
- Do not smoke near the battery. A fire could occur.

! Caution!


- Do not disconnect the vehicle's battery after the vehicle is started or with the ignition on, otherwise the electrical system or electrical components could be damaged.
- With the vehicle power-off, do not operate the vehicle with low battery capacity. This could cause a higher battery load and reduce battery life.

Tire

Tires have a great influence on the vehicle's driving characteristics. The type of tire, dimensions, tire pressure, speed rating and proper care are important for how the vehicle performs.

When driving, please pay attention to vibration, noise and handling abnormalities, such as deviation of the vehicle. This may indicate that the wheel or tire is damaged. If you suspect a tire failure, please slow down the vehicle speed immediately, stop the vehicle safely as soon as possible, and check whether the wheels and tires are damaged. Invisible injuries in the tire may also lead to abnormal handling. Lynk & Co recommends taking your vehicle to a Lynk & Co Center for tire and wheel inspection.

Tire inflation

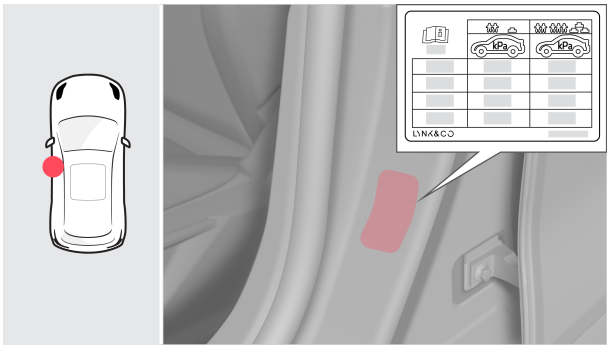

i Note!

The pictures are only for illustration, please refer to the actual vehicle.

Check the tire pressures (including the spare tire) often and always prior to long distance trips. The recommended tire pressure

specifications are shown on the inflation label located on the B-pillar driver's side and in the technical data section .

⚠ Warning!

- Under-inflation or over-inflation may adversely affect tire life and vehicle handling, resulting in a loss of control of the vehicle.
- Please install the wheels/tires certified by Lynk & Co to meet stringent stability and handling requirements. Any damage caused by installation of unapproved wheel/tire will not be covered by your new vehicle warranty. Lynk & Co assumes no responsibility for property loss or personal injury that may result from such installations.

⚠ Warning!

If the tire pressure drops repeatedly, the wheel rim, valve or tire may be damaged. Insufficient tire pressure can lead to flat tire. There is a danger of accidents, so you should:

- Check the tire for foreign matters.
- Check the tire, if there is pressure loss or valve leakage, please contact Lynk & Co Center for help.

Caution!

After inflating the tires, always reinstall the valve cap to help avoid damage to the valve from dirt and gravel. Only use plastic valve caps instead of metallic caps. Metal caps could corrode and become difficult to remove.

Tire care

Correct inflation pressures and good habits help increase the service life of your tires.

- Check the tire pressures regularly (at least once a month).
- Check the tire regularly for damage (such as cuts, cracks or pits) and irregularly for abnormal wear.
- Keep grease, oil and fuel off the tires.
- Drive at moderate speed after tire renewal.
- Avoid fast cornering and hard acceleration.
- When removed, store the wheels or tires in a cool, dry, dark place. Never store them in close proximity to solvents, gasoline and oils.

Note!

The normal service life of tire is 3 years or 40,000 km. If it exceeds the normal service life, it needs to be tested and confirmed by professional personnel. Tires age and decompose, even if they are hardly ever or never used. Their functions may therefore be affected. This applies to all tires that are stored for future use.

Wheel dynamic balance

The dynamic balance is tested and approved before the vehicle is delivered from the factory. As you drive, many factors may affect or cause the wheel imbalance. Wheel imbalance can cause excessive wear of the steering system, the suspension and the tires.

If abnormal tire wear or vehicle deviation is found, wheel alignment should be checked. If the vehicle bumps while driving on


a flat and level road surface, it may be necessary to rebalance the tires and wheels.

After a wheel is fitted with a new tire or a tire is repaired, make sure the wheel is measured and tested for dynamic balance.

⚠ Warning!

Special equipment and skills are required for wheel dynamic balancing. If you need to check the wheel dynamic balance, go to a Lynk & Co Center.

Tire transposition

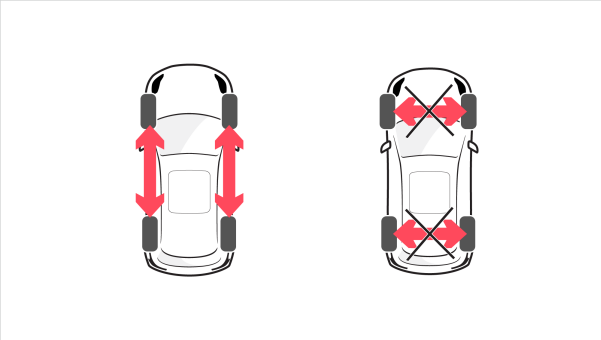

Tires should only be transposed between front and rear positions, never between left and right sides.


If the tires are fitted incorrectly, the vehicle's braking characteristics and ability to force water and slush out of the way are adversely affected.

⚠ Warning!

- After tire transposition, check and adjust the tire pressure. Improper tire pressure may adversely affect tire life and vehicle handling, resulting in a loss of control of the vehicle.
- Do not include the spare wheel in tire transposition. Otherwise the vehicle's handling may be affected.
- The wheel bolts must be tightened to the correct specification at all times. Otherwise, accidents may occur.

Tread wear indicators

Tread wear indicators show the status of the tire's tread depth.

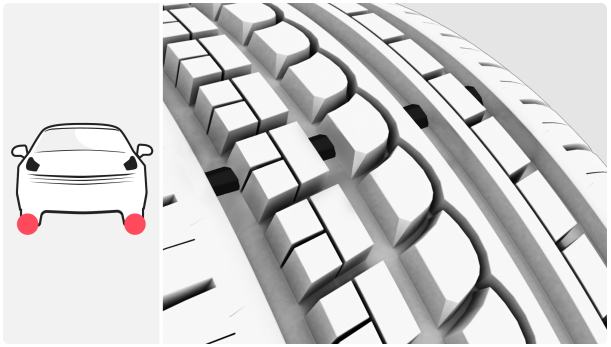

A tread wear indicator is a narrow elevation across the longitudinal grooves of the tire's tread pattern. On the side of the tire are the letters or icons of tread wear indicator. When the tread becomes the same level in height with the tread wear indicators, replace the tires as soon as possible.

If you need information about tread thickness, please contact a Lynk & Co Center.

⚠ Warning!

Tires with little tread depth provide very poor grip in difficult driving conditions such as wet or icy roads. In this way, the handling stability of the vehicle will be reduced.

⚠ Warning!

- Do not mix tires of different makes, models or tread patterns. Also, do not mix tires of remarkably different tread wear.
- Do not mix differently constructed tires (radial, bias-belted or bias-ply tires).
- Do not mix summer, all season and snow tires.
- Do not use tires that have been used if you do not know how they were used previously.

When inspecting or replacing tires, please follow the precautions above to prevent accidents. Failure to do so may cause damage to parts of the drive train as well as dangerous handling characteristics, which may lead to an accident resulting in death or serious injury.

Vehicle cleaning

Cleaning the exterior

Regular care helps to maintain the value of the vehicle. Keep the following in mind when washing and cleaning the vehicle:

- Please clean the vehicle regularly to remove dirts and dusts adhering to the paintwork and underneath the vehicle.
- Please remove contaminants such as bird droppings, insect deposits and road tar from the car body as soon as possible. Otherwise, these contaminants may damage the vehicle's paintwork or trim over time.
- Wash dirt off with a soft towel and plenty of water. Clean the vehicle thoroughly with a mild (special) vehicle detergent.
- Do not clean vehicles with hot surfaces or under direct sunlight or sun exposure. Please wait for the exterior of the vehicle to cool before cleaning.

⚠ Warning!

- Do not wash the vehicle with the ignition on, this could cause an accident.
- Do not flush the engine compartment with water, otherwise it may lead to serious accidents caused by electrical failure.

! Caution!

- Do not wash the vehicle with cleaning agents containing acid, strong soap, strong chemical detergents, or gasoline.
- In areas where road salt is used in winter, clean the underbody regularly in order to prevent the salt from building up and causing the acceleration of corrosion on the underbody and suspension.
- Remember to close all doors, windows and the sunroof before washing the exterior.

Automatic wash

An automatic car wash is a simple and quick way to clean your vehicle but it cannot reach everywhere. For better cleaning effect, it is recommended that you wash the vehicle by hand.

! Caution!

Fold in outside rearview mirrors when using an automatic car wash, otherwise the vehicle may be damaged.

High pressure cleaner

When cleaning the vehicle with a high pressure water jet, please always observe the operating instructions for the equipment. This applies particularly to the operating pressure and the spraying distance. Do not hold the spray nozzle too close to soft materials, such as rubber hoses or seals.

Caution!

When using a high pressure cleaning equipment, do not switch to the level with the highest pressure.

Hand washing

Use a soft sponge or towel to clean the vehicle from top to bottom. Please use a mild (special) vehicle cleaning agent. After cleaning, rinse the vehicle body with plenty of water, and then remove the water stains with a soft towel.

Warning!

- When the vehicle is driven immediately after being washed, apply the brakes several times to remove any moisture from the brake linings. Braking efficiency may be affected by any moisture.
- Before washing the vehicle, check and confirm that the fuel filler flap of the vehicle has been properly closed.
- When cleaning the vehicle, avoid flushing connectors at the bottom of the vehicle with the water gun.
- Avoid using high pressure cleaner or steam cleaner to clean the sensors, so as not to damage the sensors. When cleaning the vehicle, the sensor surface should be washed with low pressure water flow for a short time and at a certain distance.
- Always clean the vehicle in strict accordance with the instructions for use of the high pressure cleaner, paying particular attention to working pressure and spraying distance. If a high pressure cleaner is used, the spray nozzle must be kept at a certain distance from the surface of the vehicle body. Keep the nozzle moving and do not spray water at one place all the time. High pressure water immersion in vehicle parts may lead to chronic damage.
- Do not use the nozzle to flush directly or indirectly into the engine compartment. High pressure water flow may cause damage to electrical components in the engine compartment or cause some parts to become inoperative.
- When cleaning the vehicle with car wash equipment, please check whether it is suitable for your vehicle.

Wiper blades

First, put the , please refer to the *Wiper blades*(p. 223) in the service position, and then clean the wiper blade with a clean rag and warm soapy water as recommended by Lynk & Co.

⚠ Warning!

Deactivate the auto wiping function before activating the wiper blade service position or using an automatic car wash. Otherwise, damage could be caused by unexpected wiper activation.

Wheel rims

Use a soft brush and a strong spray of water for cleaning the wheel rims. It is recommended to use the rim cleaning agent recommended by Lynk & Co.

Sealing strip

Clean the dust on the surface of sealing strip regularly when washing the vehicle.

Waxing and polishing

Waxing

Regular waxing protects the paint surface and helps retain a new vehicle appearance. It is time to apply a good coat of wax when water no longer forms droplets and rolls off the clean paintwork. Even if a wax solution is used regularly in the car wash, it is advisable to protect the paint with a coat of wax at least once a year.

Polishing

When there are flow marks, coarse grains, scratches on the surface of the car or the paint has lost its surface gloss, it can be polished to make the car paint bright and smooth.

Polish first with a polish and then wax with liquid or solid wax. Follow the instructions on the packaging carefully.

ⓘ Note!

- Do not polish or wax the vehicle in direct sunlight.
- Avoid waxing and polishing on plastic and rubber.
- Do not use agents that contain abrasives.
- When waxing, if the paint surface is damaged, stop waxing immediately and repair.
- After waxing, check carefully to remove the remaining wax on license plates, lights, door edges, etc.

Corrosion protection

The vehicle has effective protection against corrosion. But regular inspections and maintenance are required to reduce the risk of corrosion.

- Wash and wax your vehicle regularly to keep the vehicle clean.
- Always check for minor damage to the paint and repair it as soon as possible.

- Please check the underbody regularly for accumulation of sand, dirt or salt. If so, please clean it with water as soon as possible.
- Please avoid long-term parking in humid areas.
- Please clean the chassis in time when ice and snow melt.

For additional protection against corrosion, which may be required in some areas, it's recommended to contact a Lynk & Co Center.

Care of the interior

Only use neutral (special) cleaning agents and car care products recommended by Lynk & Co. Vacuum regularly with a vacuum cleaner. Regular cleaning of the interior of the car helps to improve the internal environment. Dust and dirt accumulated on the interior may damage the surface of carpets, fabrics, leather and plastic products.

Caution!

- Certain material of colored clothing (e.g. dark jeans or goat leather garment) may stain the interior fabric. If this occurs, be sure to clean and care for the fabrics in these areas as soon as possible.
- Avoid using strong solvents such as washer fluid, pure gasoline or alcohol to clean the interior, since this may damage the upholstery as well as other interior materials.
- Never spray a cleaning agent directly onto components that have electrical buttons and controls.
- Sharp objects may damage textile upholstery.

Leather upholstery

Leather upholstery is a natural product that changes and acquires a beautiful patina over time. Regular cleaning and treatment are required in order to preserve the properties and colors of the leather. Otherwise, dirt and grease will gradually break down the protective layer of the leather surface. Use leather care products.

Suitable care products are available from Lynk & Co Center.

Note!

- Leather upholstery is kept as little contact with organic solvents as possible, such as gasoline, grease detergent, detergent, sunscreen.
- Water degreaser, petrochemical solvent degreaser, natural solvent degreaser and multi-functional detergent are recommended for cleaning the interior.
- Do not use detergents with high alcohol content, such as foam cleaners. Keep the steering wheel without contact with plastic cleaners, and the leather curing agent is recommended to be used on it.
- Never use shoe polish on leather.
- Do not use brightening agents on leather.

Seatbelts

The seatbelts can be cleaned by wiping them with a sponge dampened in neutral (special) detergent recommended by Lynk & Co.

⚠ Warning!

Never use bleach, dye or chemical solvents to clean the seatbelts. These materials may severely weaken the seatbelt webbing.

Floor mats

⚠ Warning!

Arrange the floor mats, carpets and other items reasonably to avoid impeding the travel of the pedals.

! Caution!

Allow the belts to dry completely in the shade before using them.

Do not place additional floor mats over existing mats or other objects. Only use floor mats that have been approved for the vehicle and can be properly fixed in place.

Display/screen

Dirt, stains and grease from fingers can affect the display's performance and readability. Clean the screen frequently with a microfiber cloth.

! Caution!

- Keep all fluids and moisture away from the display or electrical components. Otherwise, they could affect or damage surfaces or electrical components.
- Avoid pressing too hard when cleaning and do not use abrasive materials.vOtherwise, damage may occur.

TECHNICAL DATA

Vehicle labels

Certification Label

The certification label is mounted under the driver side or passenger side B-pillar and contains information about the vehicle. The exact installation position of certification label depends on the actual vehicle.




Type I: vehicle identification plate located on the driver side, lower B-pillar.



Type II: vehicle identification plate located on the passenger side, lower B-pillar.

Vehicle Identification Number (VIN)

VIN is the legal identification mark of a vehicle.

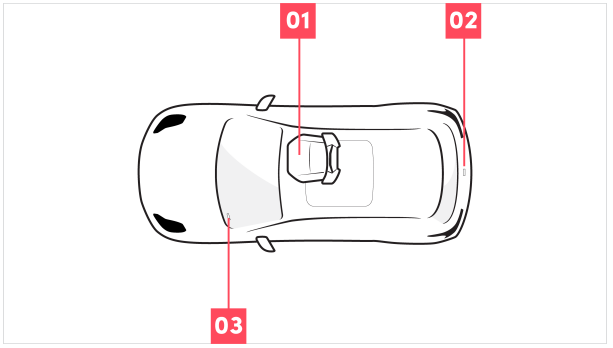

01 VIN located on front passenger seat beam

02 VIN located on the tailgate

03 VIN located on the lower left of the front windshield


⚠ Warning!

- Do not scratch, clear and cover, hide, change or spray the VIN. Keep the labels visible and identifiable.
- For VIN data stored in ECU, do not damage, or modify without authorization.

Engine model and manufacturer number

The engine model and factory number are printed on the surface of the cylinder block.

Microwave windows

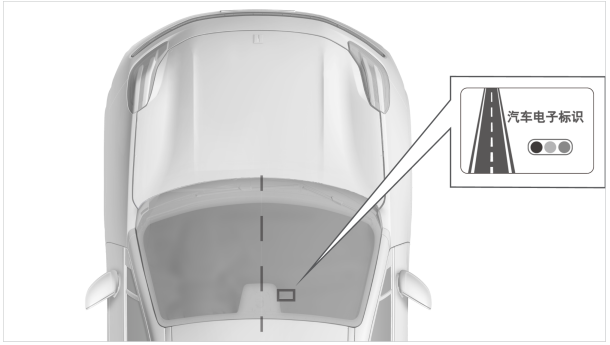

The vehicle's microwave window is centered on the windshield horizontally, vertically upside down.

Electronic vehicle identification should be installed at the right of the microwave windows. Cannot be blocked by the inside rearview mirror bracket or sensor bracket.

The logo stores information about the vehicle.

! Caution!

- Do not block, squeeze or disassemble the electronic vehicle identification.
- If electronic vehicle identification is damaged, reapply to the issuer immediately.

ⓘ Note!

Please keep the windshield clean and dry; do not apply film or paste metal materials in the microwave window to ensure the installation of the electronic vehicle identification and the effective reading of data.

Vehicle data

Vehicle dimensions specification

Dimensions at curb vehicle weight

Dimensions	Units (mm)
Length	4340
Height	1625 (a)
Width	1820 (b)

(a): The multiband antenna is included in the height measurement.
(b): Vehicle width is the width excluding door mirrors.

Vehicle weight parameters

Vehicle weight

Models	Curb weight (kg)	Gross vehicle weight (kg)
BHE15 1.5TD–7DCT	1465/1430	1880

Vehicle axle loads (fully loaded)

Models	Gross axle weight, front (kg)	Gross axle weight, rear (kg)
BHE15 1.5TD–7DCT	990	890

Vehicle performance

Engine specifications

Engine	Maximum net power (kW/rpm)	Rated power (kW/rpm)	Maximum torque (Nm/rpm)
BHE15 1.5TD	128/5500	133/5500	290/ (2000 - 3500)

Dynamic performance

Models	Driving mode	Maximum vehicle speed (km/h)	Maximum climbing gradient (a) (%)
BHE15 1.5TD–7DCT	FWD	195	40

(a): The car started at the bottom of the slope.

Fuel specification

Fuel	Grade
Gasoline	Refer to the fuel filler cap label

Caution!

- Damage or malfunctions caused by poor fuel or by mixing fuel additives which are not certified by Lynk & Co are not covered by the Lynk & Co warranty.

Seats specification

Front seats specification

Item	Power adjustment of front seat	Manual adjustment of front seat
Set front and rear positions of seat (a)	Slide 200 mm forward, 40 mm backward	Slide 200 mm forward, 40 mm backward
Set backrest angle of seat (a)	25°	25°
Regular service status of seat backrest	Forwarded by 30°, backwarded by 50° from the designed seat position	Forwarded by 30°, backwarded by 50° from the designed seat position

(a): When measuring the depth of seat cushion.

Rear seats specification

Item	Rear row center seat	Rear row side seats
Set front and rear positions of seat	Non adjustable	Non adjustable
Set backrest angle of seat (a)	22°	25°
Regular service status of seat backrest	Non adjustable	Non adjustable

(a): When measuring the depth of seat cushion.

Alignment specification

Wheel alignment specification

Wheel alignment	Data
Front wheel camber angle	-35′±30′
Rear wheel camber angle	-35′±30′
Kingpin inclination angle	12°52′±45′
Kingpin caster angle	5°10′±30′
Toe in of front wheel	6′±3′
Toe in of rear wheel	6′±3′

ⓘ Note!

- All the wheel alignment values are measured under the vehicle factory load condition (standard equipment, all necessary operating fluids and oils, and less than 10 L fuel) by measuring single side of the wheels.

Tire specification

Tire pressure

Tire sizes/ Types	Recommended tire pressure (Cold tire)			
	No load (KPa)		Full load (KPa)	
	Front	Rear	Front	Rear
215/60 R17	230		280	
215/55 R18	230		280	
T125/80 D17 (Spare tire)	420			

Wheel dynamic balance

Wheel dynamic balance: Refer to the following table for the maximum permitted residual imbalance each side of one wheel/ tire.

Tire size	Data
215/60 R17	≤8 g
215/55 R18	≤8 g

Brake systems specification

Brake data

Type	Specification
Brake fluid	DOT4
Brake pedal free displacement	About 9 - 15mm

ⓘ Note!

- Brake fluid must be replaced regularly to keep the brake system efficiency. It is recommended replacing the brake fluid at a Lynk & Co Center.

Reasonable use range of brake friction pair

Front wheel

Brake disc/pad	Size (mm)
Brake disc standard thickness	27 (16")
Brake disc safe thickness at minimum	25 (16")
Brake pad standard safe thickness	16.8
Brake pad safe thickness at minimum	8.8(a)

(a): thickness with back panel included

Rear wheel

Brake disc/pad	Size (mm)
Brake disc standard thickness	10 (15")
Brake disc safe thickness at minimum	8.75 (15")
Brake pad standard safe thickness	15.4
Brake pad safe thickness at minimum	7.7(a)

(a): thickness with back panel included

Abbreviations and terms

Abbreviations and terms

Abbreviations

Terms	Notes
A/C	Climate
ABS	Anti-lock Brake System
ACC	Adaptive Cruise Control
AEB	Auto Emergency Braking
AHB-C	Active High Beam-Control (AHB-C)
APA	Automatic Parking Assist
APP	Application
AQS	Air quality system
Auto Hold	AUTO PARKING
BSD	Blind spot detection
CC	Cruise control
CJB	Fuse box in the engine compartment
CVW	Closing Vehicle Warning System
DOW	Door Open Warning
EBD	Electronic Brake force Distribution
EBL	Emergency brake warming lights
E-Call/SOS	Emergency call
EDR	Event data recorder
EJB	Fuse box in the engine compartment
EPAS	Electronic Power Assist Steering System
EPB	Electric Parking Brake
ESP	Electronic stability program
FCW	Forward Collision Warning System
HDC	Hill Decent Control (HDC)
HSA	Hill Start Assist Control

Terms	Notes
HWA	Highway Assist (HWA)
ION	Anion generator
LCW	Lane Change Warning
LDW	Lane departure warning
LKA	Lane keeping aid
MAX	Maximum
MIN	Minimum
OBD	On-board Diagnostics
POI	Point of interest
RAB	Ready Alert Brake System
RBS	Regenerative braking
RCTA	Rear cross traffic alert
RCW	Rear collision warning
RON	Research Octane Number
SOS	Emergency Call
Start & Stop	Intelligent start/stop
TCS	Traction Control System

Terms	Notes
TJA	Traffic Jam Assist
dTPMS	Direct Tire Pressure Monitoring System
TSR	Traffic Sign Recognition
USB	Universal Serial Bus
VIN	Vehicle Identification Number

Metric Terms

Terms	Notes
%	Percentage
X:1	Ratio
°C	Degree Centigrade
Ah	Amperage Hour
m	Meter
cm	Centimeter
mm	Millimeter
g	Gram
kg	Kilogram
h	Hour
s	Second
rpm	Revolutions Per Minute
km/h	Kilometer Per Hour
L	Liter
ml	Milliliter
N	Newton

Terms	Notes
Nm	Newton Meter
V	Volt
W	Watt
KPa	Kilopascal

A

Abbreviations and terms 246
Adaptive Cruise Control (ACC)
- Adjusting the speed 160
- Change target vehicle 160
- Keys 160
- Limitations 160
- Pause/resume 160
- Setting the inter-vehicle distance 160

Admonitions
- Cautions 9
- Notes 9
- Warnings 9

Air distribution
- Adjusting the air vents 116
- Opening/closing the air vents 116

Air quality system 119
Airbag
- Driver 25
- Front passenger 25
- Front side 27
- Precautions 22
- Situations when airbags may not deploy 22
- Triggering conditions of safety system 22
- Warning indicator 22

Alignment specification 243
Anti-theft alarm system 50
- Arm/Disarm 50
- Turning off the triggered anti-theft alarm 50

Application program 71
Armrest, front
- operation 124

Armrest, rear 125
AT
- Drive gear (D) 135
- Gear modes 135
- Gear shift indicator 135
- Neutral (N) 135
- Parking gear (P) 135
- Reverse gear (R) 135
- Shift lock 135

Auto activating/deactivating, front headlamp 88
Auto climate
- A/C button 113
- Air volume adjust knob 113
- Auto mode 113
- Blow mode button 113
- Max cooling button 113
- Rear windshield defrost button 113
- Recirculation button 113
- Sun sensor 113
- Temperature adjust knob 113
- Windshield defrost button 113

Auto Emergency Braking
- Auto emergency braking (AEB) 174
- Forward Collision Warning (FCW) 174

Auto Hold
- Activate 144
- Close 144
- Open 144

B

Batteries
Charging....224
Safety warnings for handling....226
Brake fluid....221
Brake system....142
Brake systems specification....244
Bulbs....224

C

Call....77
Care of the interior
Display/screen....234
Floor mats....234
Leather upholstery....234
Seatbelts....234
Center display
Operate....67
Central door lock system....43
Certification Label....239
Change of ownership....12
Child safety....29
Child safety locks....45
Child seats
Choose an appropriate child seat units....29
Install....31
Recommended child seats....29
Table of ISOFIX child seats....29
Using top tether anchors....31
Clean zone air quality system....119
Cleaning the exterior....231
Climate
Overview....110
Climate control interface....70
Connect
Bluetooth device....75
Real-name authentication....75
Vehicle hotspot....75
WiFi....75
Wireless charging....75
Coolant fluid....221
Cornering assist feature of front fog lamps....88
Corrosion protection....233
Cruise Control (CC)
Activation....157
Adjusting the speed....157
Pause/resume....157
Cup holders....125

D

Direct tire pressure monitoring system (dTPMS)
Failure....187
Display....75
Display texts....9
Door
Emergency locking/unlocking....44
Door Open Warning (DOW)
Limitations....186
Setting....186

Drive assistance systems 149
Driver assistance system sensors
Rear microwave radar..... 149
Windshield camera 149
Driving mode..... 134
Driving requirements 129
Driving through water..... 188

E

Economical driving..... 189
Electric Parking Brake (EPB)
Auto apply..... 143
Auto release..... 143
Manual apply 143
Manual emergency brake 143
Manual release 143
Electronic Power Assist Steering (EPAS) System..... 154
Electronic Stability Program (ESP)
Anti-lock Brake System (ABS) 151
Emergency Signal System (ESS).....151
Hill Start Assist (HSA).....151
Emergency Brake Warning Lights (EBL)..... 143
Emergency call
Automated SOS calls 207
Manual calling 207
Engine
Factory number..... 240
Model..... 240
Engine compartment
Closing the hood..... 216
Opening the hood..... 216
Engine oil
Inspection..... 219
Event data recorder (EDR).....10
Exterior lighting
Active high beam control..... 88
Auto activating/deactivating, front headlamp 88
Brake lamp..... 88
Cornering assist feature of front fog lamps..... 88
Electric headlight leveling 88
Fog lamp..... 88
Hazard warning lights..... 88
High/low beam 88
Home safety lights..... 88
Lighting control stalk 88
Lights for car searching 88
Reversing lamp 88
Turn signal lights 88
Welcome lights 88

F

Fire extinguisher..... 208
First-aid kit..... 208
Foot brake..... 142
Front double airbags 25
Front seat
Manual adjustment 83
Power adjust..... 83
Front side airbags 27
Front tunnel console storage spaces 124

Fuel specification 243
Fuses
Change 213
Fuse box in the engine compartment 213
Fuse box on left side of instrument panel 213

G

Gear shift paddle 138

H

Head Restraints
Install 85
Remove 85
Head safety air curtains 27
High-visibility vest 204, 209
Highway assist
Activation 165
Cruise control 165
Degradation 165
Keep the vehicle in the middle of the lane 165
Keys 165
Symbol and message 165
Hill Descent Control (HDC)
Activation 153

I

Ignition mode 130
Immobilizer 50
Indicators and warning lights
Indicator symbols 55
Warning light symbols 55
Inside rearview mirrors 97
Inspecting before driving 188
Instrument cluster
Information display area 61
operation 62
Right keypad, steering wheel 62
Instrument cluster settings 62
Intelligent start/stop
Auto start 140
Auto stop function 140
Interior lighting
Auto function 94
Cargo compartment light 94
Light switches in overhead console 94
Reading lights 94
Streaming mood lights 94
Vanity mirror lights 94
Interior storage spaces
Front seats compartment 123
Rear seat compartments 123

J

Jump starting 195

K

Keyless entry system
Unlock tailgate....41
Unlock/lock the door....41

L

Lane assist system
Lane Departure Warning (LDW)....169
Lane Keeping Aid (LKA)....169
Limitations....169
Settings....169
Symbols/messages....169
Lane change assist system
Blind Spot Detection (BSD)....172
Closing Vehicle Warning (CVW)....172
Lane Change Warning (LCW)....172
Limitations....172
Setting....172
Lock/unlock indicator....41

M

Main interface....67
Manual climate
A/C button....110
Air volume adjust knob....110
Blow mode button....110
Max cooling button....110
Rear windshield defrost button....110
Recirculation button....110
Temperature adjust knob....110
Windshield defrost button....110
Manual shift mode....137
Mechanical key
Remove....38
Mechanical tailgate
Close....45
Open....45
Microwave windows....240
Multimedia....77

N

Notes
to users....10

O

Overheat
Engine overheat....206

P

Panorama roof
Anti-pinch function....106
Auto sliding....106

Close using the remote control key 106
Manual sliding 106
Opening/closing 106
Rapid sliding open/close 106
Upward 106
Voice on/off 106
Wind deflector 106
Park system
Activating/deactivating 181
Limitations 181
Park system 181
PAS 4, Park System (12-channels) 181
PAS 4, Park System (4-channels) 181
Side park system 181
Parking on hills 191
Peripheral products, optional equipment and modification 10
Polishing 233
Power outside mirrors
Auto folding when locking the vehicle 97
Auto unfolding when driving 97
Folding/unfolding 97
Power tailgate
Anti-pinch protection 46
Close 46
Open 46
Setting the maximum opening angle 46
Power windows
Anti-pinch function 104
Auto up/down 104
Button 104
Manual up/down 104
One-touch ventilation 104
Voice control of windows 104
Window closing when raining 104
Window lock button 104

R

Radio devices 11
Rear collision warning (RCW)
Setting 185
Rear Cross Traffic Alert (RCTA)
Limitations 183
Setting 183
Rear fog lamp 88
Rear seats
Fold/unfold 84
Rear windshield
Washer 102
Wiper 102
Recovering the vehicle 199
Refueling 146
Remote control key
Key reminder device 37
Ordering additional keys 37
Replacing the remote key battery 39
Rollover Protection System 33
Run-in period 213

S

safe mode 15

Safety systems....15
Seatbelts
Check....16
Fasten....19
function....16
Pregnancy safety....16
Pretensioner....21
Release....19
Reminder....16
Seats specification....243
Shoulder height adjuster....20
Sound....76
Spare wheel....201
Speed Limit
Activate....154
Adjusting the maximum speed limit....154
Deactivate/Resume....154
Starting
Emergency vehicle start....131
Remote start....131
Start via the START/STOP ENGINE button....131
Steering Wheel
Adjustment....81
Left keypad, steering wheel....81
Operation....81
Right keypad, steering wheel....81
Storing Vehicles....213
Sun visor
operation....125
Symbols in the manual....9
System....76

T

tailgate
Open mechanically....48
The vehicle is switched off....132
Tire
Inflation....227
Rotation....227
Service....227
Tread wear indicators....227
Wheel dynamic balance....227
Tire specification....244
Tools....201
Towing
Flat towing....197
Towing eyelet
Towing cover....198
TRIP button....62

U

Using power outlets....120
Using USBs
operation....120

V

Vanity mirror
operation....125

Vehicle
Air-conditioning 71
Car window 71
Door locks and keys 71
Driving assistance and safety 71
External lights 71
Internal lights 71
Rearview mirror 71
Trunk 71
Wiper 71
Vehicle dimensions specification 242
Vehicle emissions 148
Vehicle features and options 9
Vehicle function interface 68
Vehicle identification number (VIN)
Read with a diagnostic tool 214
Vehicle Identification Number (VIN) 239
Vehicle loading
Roof loading 191
Trunk loading 191
Vehicle performance 242
Vehicle scrapping 12
Vehicle weight parameters 242
Visual Park Assist 360 (Camera)
Enter the panoramic image interface 179
Exit the panoramic image interface 179
Limitations 179
Trajectory 179
Visual Park Assist 90 Rear (Camera)
Limitations 177

W

Warning triangle 204, 209
Washer fluid 222
Waxing 233
Wheel
Install 203
Remove 202
Windshield
Washer 100
Wiper 100
Winter driving
Anti-skid chains 189
Winter tires 189
Wiper blades
Activating/deactivating the service position 223